




# Service Manual

## Models

XLF5017-XD - 6911580000  
XLF6017-XD - 6911590000  
XLF7417-XD - 6911600000  
XLF8817-XD - 6911610000  
XLF10017-XD - 6911620000

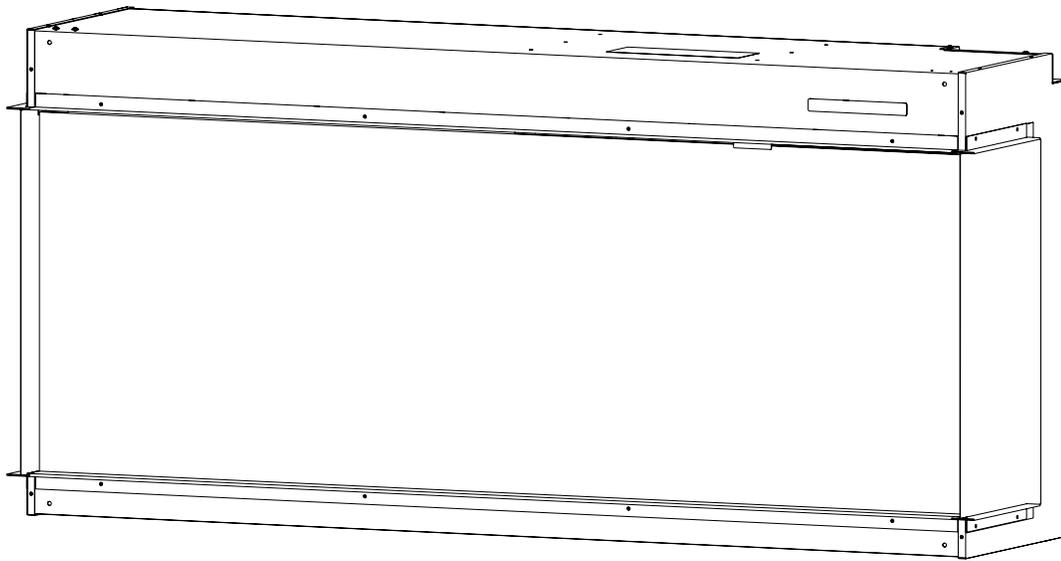

---

### IMPORTANT SAFETY INFORMATION:

Read this manual first before attempting to install or use this electric fireplace. Always comply with the warnings and safety instructions contained in this manual to prevent personal injury or property damage.

---

# Table of Contents

---

<b>Exploded Parts Diagrams</b> .....	<b>3</b>
XLF5017-XD Replacement Parts List .....	3
XLF6017-XD Replacement Parts List .....	4
XLF7417-XD Replacement Parts List .....	5
XLF8817-XD Replacement Parts List .....	6
XLF10017-XD Replacement Parts List .....	7
<b>Wiring Diagrams</b> .....	<b>8</b>
XLF5017-XD .....	8
XLF6017-XD .....	8
XLF7417-XD .....	9
XLF8817-XD .....	9
XLF10017-XD .....	9
<b>Replacement Part Procedures</b> .....	<b>10</b>
Preparing the Firebox for Service .....	10
Heater Assembly Replacement .....	11
Main Control Board Replacement .....	12
Power Supply Replacement .....	13
Relay Board Replacement .....	14
Adapter Board Replacement (XLF8817-XD & XLF10017-XD) .....	14
Hidden Touch Controls Replacement .....	15
Temperature Sensor (NTC) Replacement .....	16
Flicker Motor Replacement .....	17
Flame LED Replacement .....	18
Media Bed LED Replacement .....	19
Overhead LED Replacement .....	20
<b>Troubleshooting</b> .....	<b>21</b>
App .....	21


## Conventions used in this manual:

**!** **NOTE:** Procedures and techniques that are considered important enough to emphasize.

**⚠** **CAUTION:** Procedures and techniques which, if not carefully followed, will result in damage to the equipment.

**⚠** **WARNING:** Procedures and techniques which, if not carefully followed, will expose the user to the risk of fire, serious injury, or death.


# Exploded Parts Diagrams

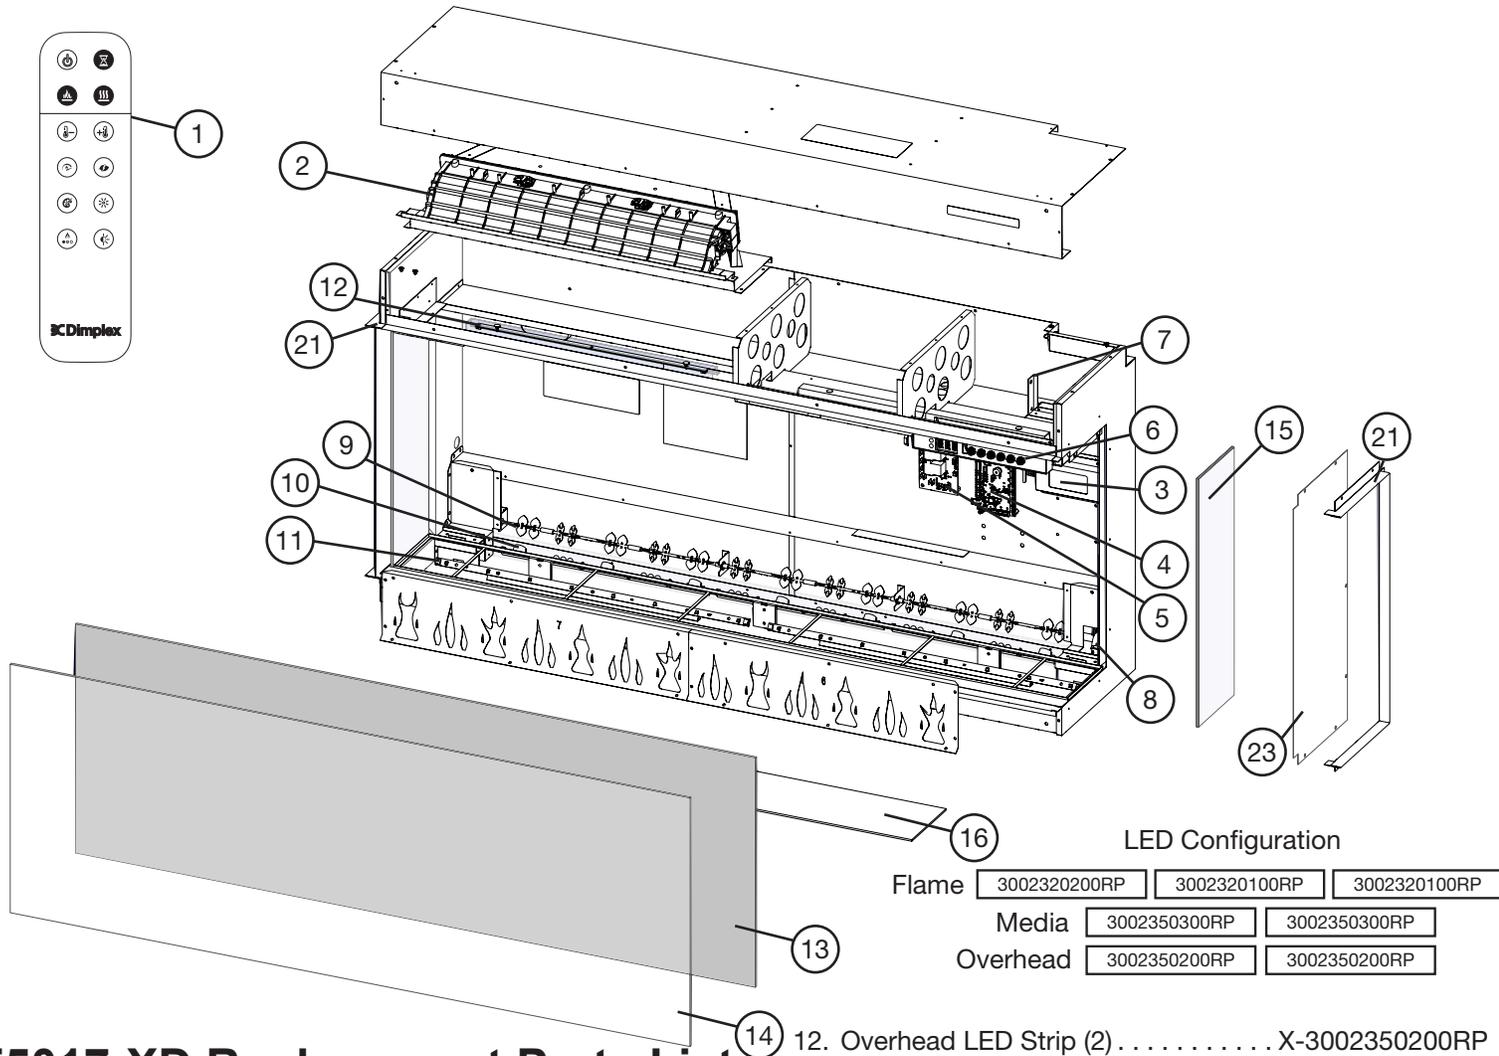

## XLF5017-XD Replacement Parts List

- |  |                |  |                |
|--|----------------|--|----------------|
| 1. Remote Control . . . . .  | 500002576      | 12. Overhead LED Strip (2) . . . . .       | X-3002350200RP |
| 2. Heater Assembly . . . . .   | X-2203860100RP | 13. Mirrored Glass . . . . .               | X-5903780100RP |
| 3. Power Supply . . . . .  | X-2100250500RP | 14. Front Glass . . . . .                  | X-5903760100RP |
| 4. Main Control Board (MOD B/PREVIOUS) . . . . .                     | 500002258      | 15. Side glass (includes 1) . . . . .      | X-5903770100RP |
| ALL MODS . . . . .   | 500005620      | 16. Media Tray . . . . .                   | X-5903790100RP |
| 5. Relay Board (MOD B/PREVIOUS) . . . . .                            | 500002277      | 17. Medium Acrylic Crystals (2x) . . . . . | 500004924      |
| ALL MODS . . . . .   | 500006056      | 18. Large Acrylic Crystals . . . . .       | 500004925      |
| 6. Hidden Touch Controls with QR labels (MOD B / PREVIOUS) . . . . . | 500002274      | 19. Extra-large Acrylic Crystals . . . . . | 500004926      |
| ALL MODS . . . . .   | 500006058      | 20. Driftwood . . . . .                    | 500004927      |
| 7. Temperature Sensor (NTC) . . . . .                                | 500002877      | 21. Trim Assembly . . . . .                | X-1037390100RP |
| 8. Flicker Motor . . . . .   | X-2000550100RP | 22. Hardware Kit . . . . .                 | X-9602620400RP |
| 9. Flicker Rod . . . . .   | X-5903960100RP | 23. Side Panel (includes 1) . . . . .      | X-1033820100RP |
| 10. Flame LED Strip (2) . . . . .                                    | X-3002320100RP | 24. Heat Disable Jumper . . . . .          | X-4300520100RP |
| (1) . . . . .  | X-3002320200RP | 25. Tumbled Glass Media . . . . .          | 500003421      |
| 11. Media LED Strip (2) . . . . .                                    | X-3002350300RP |  |                |


**! NOTE:** All units with the serial number 17022D\*F\*\*\* or earlier needing a new Main Control Board or Hidden Touch Control will need to replace both boards for compatibility.

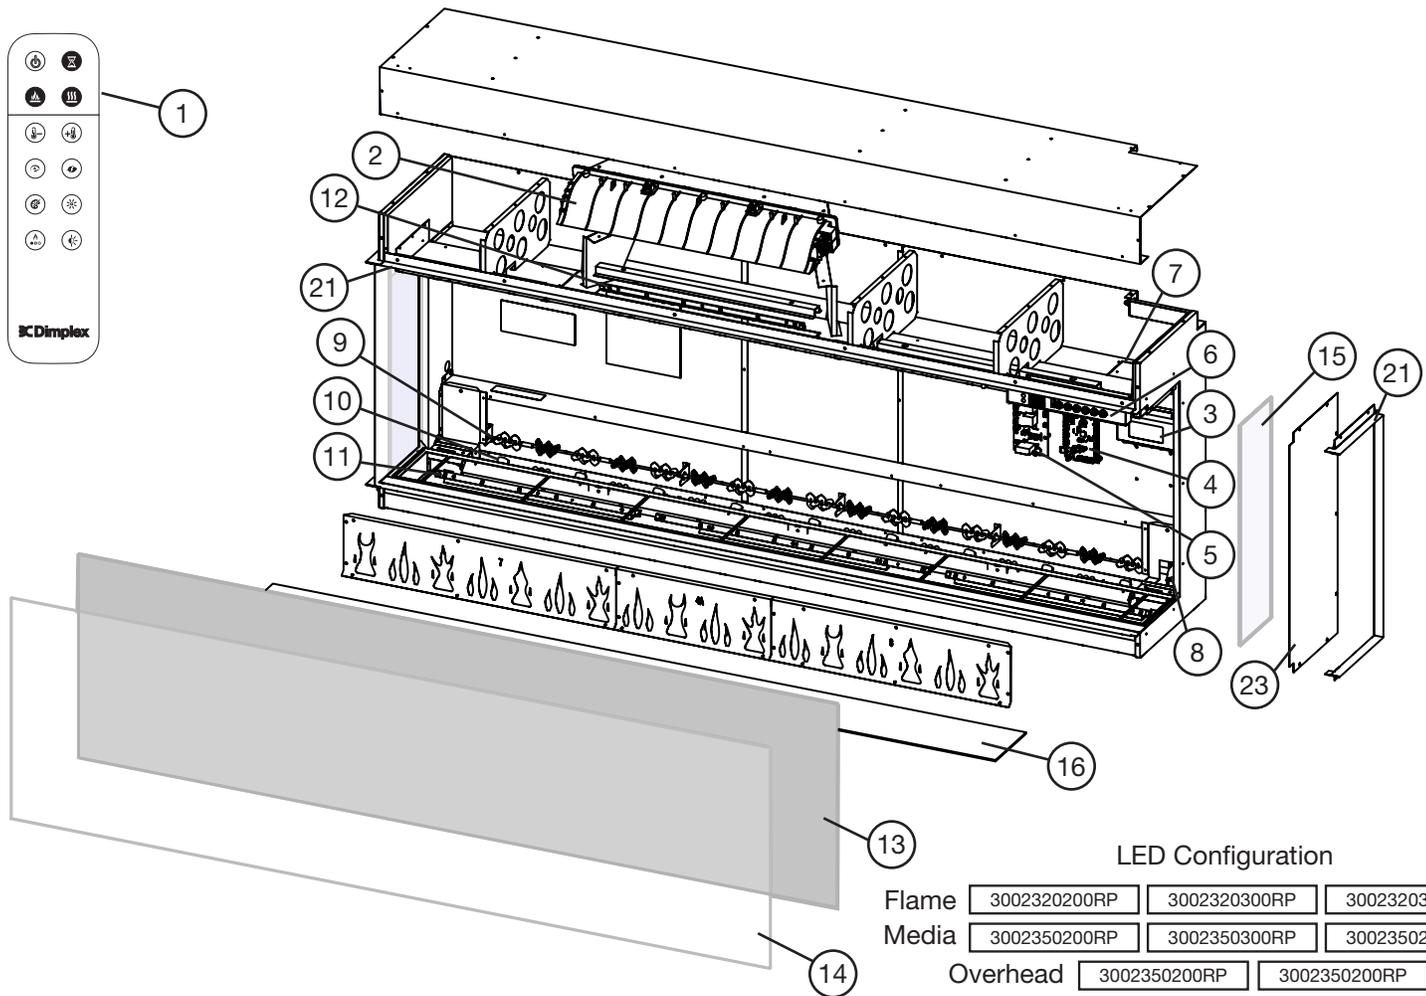

## XLF6017-XD Replacement Parts List

- |   |                |  |                |
|---|----------------|--|----------------|
| 1. Remote Control . . . . .   | 500002576      | 13. Mirrored Glass . . . . .               | X-5903780200RP |
| 2. Heater Assembly . . . . .  | X-2203860100RP | 14. Front Glass . . . . .                  | X-5903760200RP |
| 3. Power Supply . . . . .   | X-2100250500RP | 15. Side glass (includes 1) . . . . .      | X-5903770100RP |
| 4. Main Control Board (MOD B/PREVIOUS) . . . . .                        | 500002258      | 16. Media Tray . . . . .                   | X-5903790200RP |
| ALL MODS . . . . .  | 500005620      | 17. Medium Acrylic Crystals (3x) . . . . . | 500004924      |
| 5. Relay Board (MOD B/PREVIOUS) . . . . .                               | 500002277      | 18. Large Acrylic Crystals . . . . .       | 500004925      |
| ALL MODS . . . . .  | 500006056      | 19. Extra-large Acrylic Crystals . . . . . | 500004926      |
| 6. Hidden Touch Controls with QR labels (MOD B /<br>PREVIOUS) . . . . . | 500002275      | 20. Driftwood . . . . .                    | 500004927      |
| ALL MODS . . . . .  | 500006059      | 21. Trim Assembly . . . . .                | X-1037390200RP |
| 7. Temperature Sensor (NTC) . . . . .                                   | 500002877      | 22. Hardware Kit . . . . .                 | X-9602620200RP |
| 8. Flicker Motor . . . . .  | X-2000550100RP | 23. Side Panel (includes 1) . . . . .      | X-1033820100RP |
| 9. Flicker Rod . . . . .  | X-5903960200RP | 24. Heat Disable Jumper . . . . .          | X-4300520100RP |
| 10. Flame LED Strip (1) . . . . .                                       | X-3002320200RP | 25. Tumbled Glass Media . . . . .          | 500003421      |
| (2) . . . . .   | X-3002320300RP |  |                |
| 11. Media LED Strip (2) . . . . .                                       | X-3002350200RP |  |                |
| (1) . . . . .   | X-3002350300RP |  |                |
| 12. Overhead LED Strip (2) . . . . .                                    | X-3002350200RP |  |                |

**! NOTE:** All units with the serial number 17022D\*F\*\*\* or earlier needing a new Main Control Board or Hidden Touch Control will need to replace both boards for compatibility.

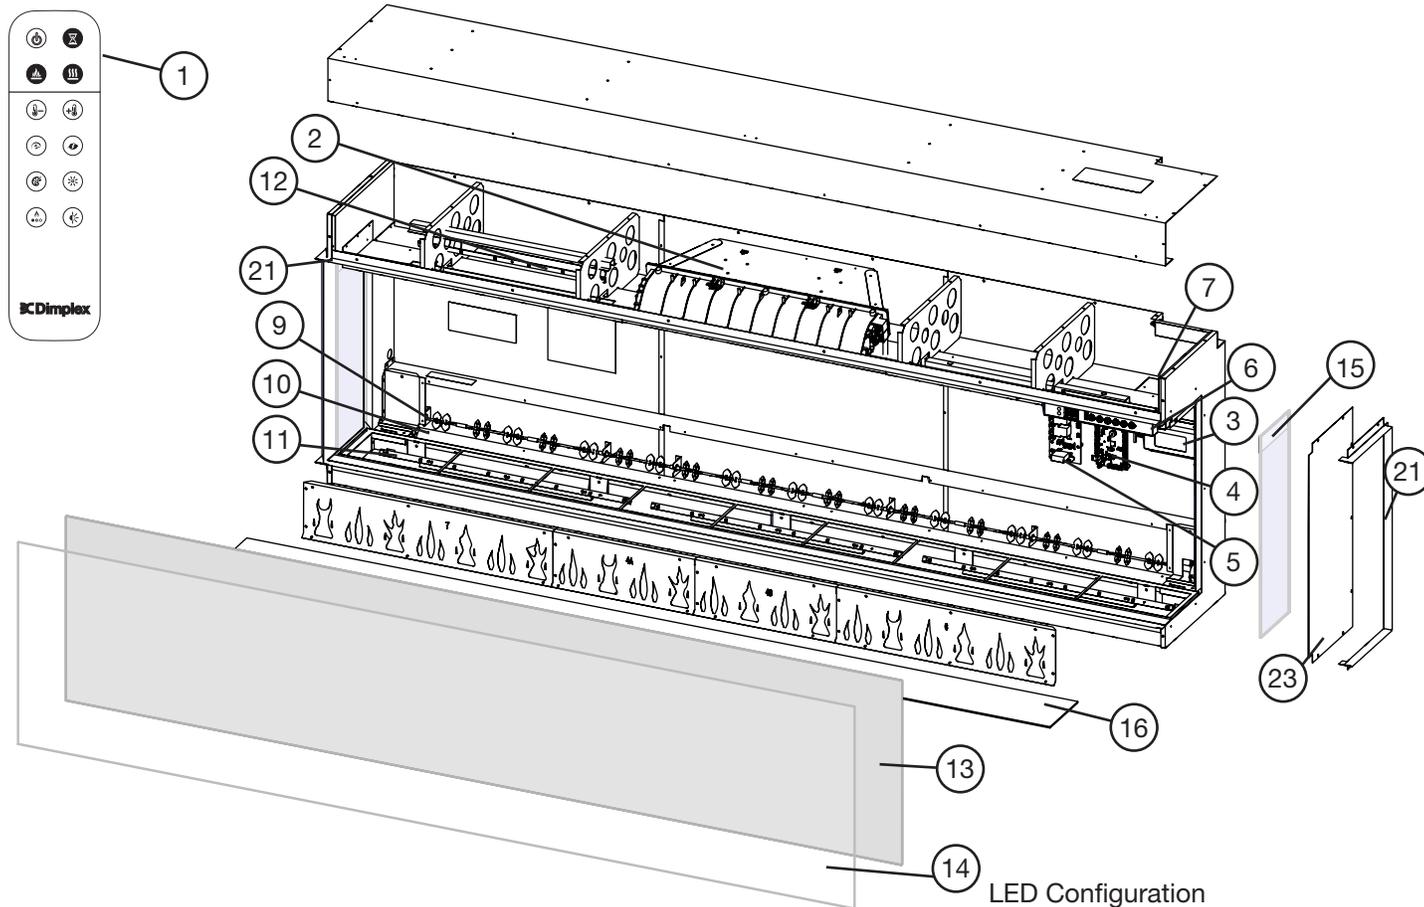


Flame	3002320200RP	3002320100RP	3002320300RP	3002320300RP
Media	3002350300RP	3002350300RP	3002350300RP	
Overhead	3002350200RP	3002350200RP	3002350200RP	

## XLF7417-XD Replacement Parts List

1. Remote Control . . . . .	500002576	13. Mirrored Glass . . . . .	X-5903780300RP
2. Heater Assembly . . . . .	X-2203860100RP	14. Front Glass . . . . .	X-5903760300RP
3. Power Supply . . . . .	X-2100250500RP	15. Side glass (includes 1) . . . . .	X-5903770100RP
4. Main Control Board (MOD B/PREVIOUS) . . . . .	500002258	16. Media Tray . . . . .	X-5903790300RP
ALL MODS . . . . .	500005620	17. Medium Acrylic Crystals (3x) . . . . .	500004924
5. Relay Board (MOD B/PREVIOUS) . . . . .	500002277	18. Large Acrylic Crystals . . . . .	500004925
ALL MODS . . . . .	500006056	19. Extra-large Acrylic Crystals (2x) . . . . .	500004926
6. Hidden Touch Controls with QR labels (ALL MODS / PREVIOUS) . . . . .	500002276	20. Driftwood . . . . .	500004927
ALL MODS . . . . .	500006060	21. Trim Assembly . . . . .	X-1037390300RP
7. Temperature Sensor (NTC) . . . . .	500002877	22. Hardware Kit . . . . .	X-9602620400RP
8. Flicker Motor . . . . .	X-2000550100RP	23. Side Panel (includes 1) . . . . .	X-1033820100RP
9. Flicker Rod . . . . .	X-5903960300RP	24. Heat Disable Jumper . . . . .	X-4300520100RP
10. Flame LED Strip (1) . . . . .	X-3002320100RP	25. Tumbled Glass Media . . . . .	500003421
(1) . . . . .	X-3002320200RP		
(2) . . . . .	X-3002320300RP		
11. Media LED Strip (3) . . . . .	X-3002350300RP		
12. Overhead LED Strip (3) . . . . .	X-3002350200RP		

**! NOTE:** All units with the serial number 17022D\*F\*\*\* or earlier needing a new Main Control Board or Hidden Touch Control will need to replace both boards for compatibility.

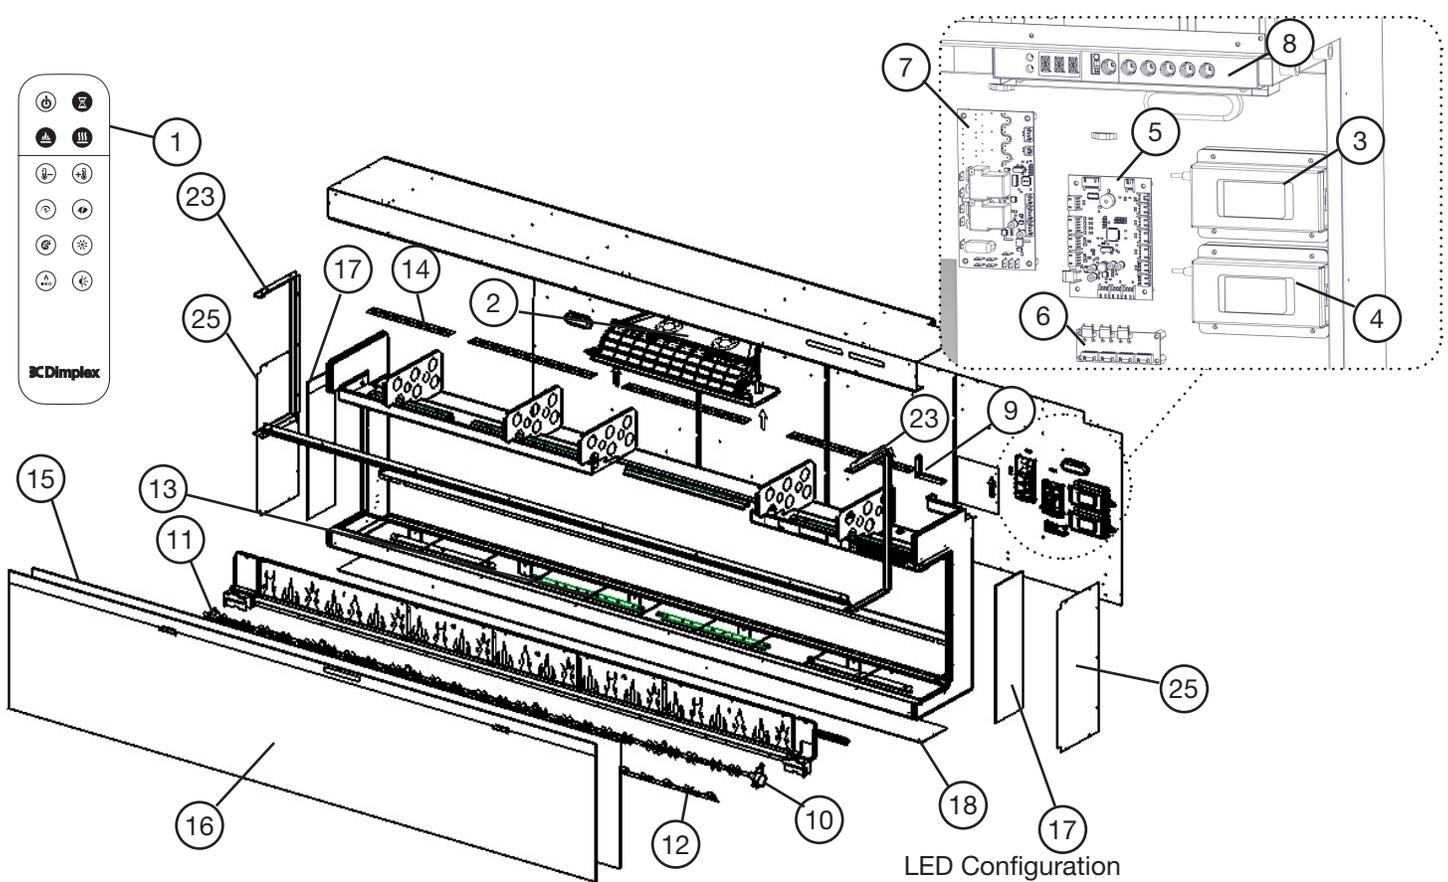


Flame	3002320300RP	3002320300RP	3002320200RP	3002320100RP	3002320100RP
Media	3002350300RP	3002350300RP	3002350300RP	3002350300RP	3002350300RP
Overhead	3002350300RP	3002350200RP	3002350200RP	3002350300RP	3002350300RP

## XLF8817-XD Replacement Parts List

1. Remote Control . . . . .	500002576	14. Overhead LED Strip (1) . . . . .	X-3002350100RP
2. Heater Assembly . . . . .	X-2203860100RP	(3) . . . . .	X-3002350200RP
3. Power Supply (5 AMP) . . . . .	X-2100250500RP	15. Mirrored Glass . . . . .	X-5903780400RP
4. Power Supply (3 AMP) . . . . .	X-2100250600RP	16. Front Glass . . . . .	X-5903760400RP
5. Main Control Board (MOD B/PREVIOUS) . . . . .	500002258	17. Side glass (includes 1) . . . . .	X-5903770100RP
ALL MODS . . . . .	500005620	18. Media Tray . . . . .	X-5903790400RP
6. Adapter Board (MOD B/PREVIOUS) . . . . .	X-3002400100RP	19. Medium Acrylic Crystals (4x) . . . . .	500004924
ALL MODS . . . . .	500006057	20. Large Acrylic Crystals . . . . .	500004925
7. Relay Board (MOD B/PREVIOUS) . . . . .	500002277	21. Extra-large Acrylic Crystals (2x) . . . . .	500004926
ALL MODS . . . . .	500006056	22. Driftwood (1x) . . . . .	500004927
8. Hidden Touch Controls with QR labels (MOD B/ PREVIOUS) . . . . .	500002262	(1x) . . . . .	500004928
ALL MODS . . . . .	500006061	23. Trim Assembly . . . . .	X-1037390400RP
9. Temperature Sensor (NTC) . . . . .	500002877	24. Hardware Kit . . . . .	X-9602620400RP
10. Flicker Motor . . . . .	X-2000550100RP	25. Side Panel (includes 1) . . . . .	X-1033820100RP
11. Flicker Rod . . . . .	X-5903960400RP	26. Heat Disable Jumper . . . . .	X-4300520100RP
12. Flame LED Strip (2) . . . . .	X-3002320100RP	27. Tumbled Glass Media . . . . .	500003421
(1) . . . . .	X-3002320200RP		
(2) . . . . .	X-3002320300RP		
13. Media LED Strip (2) . . . . .	X-3002350200RP		
(2) . . . . .	X-3002350300RP		

**! NOTE:** All units with the serial number 17022D\*F\*\*\* or earlier needing a new Main Control Board or Hidden Touch Control will need to replace both boards for compatibility.

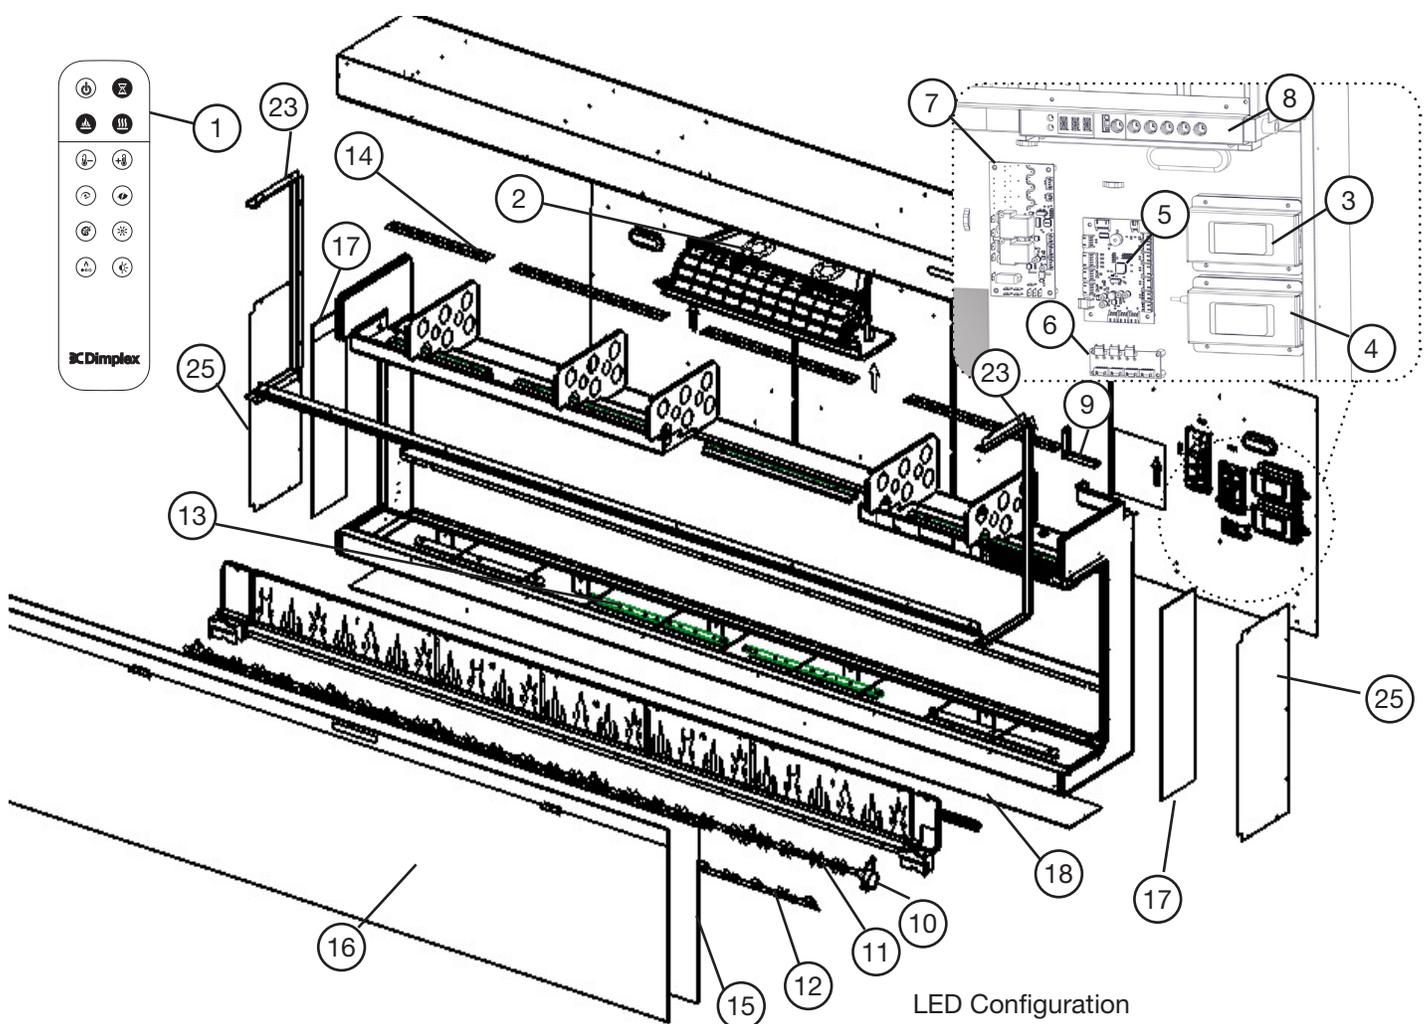

LED Configuration

Flame	3002320300RP	3002320300RP	3002320300RP	3002320300RP	3002320200RP
Media	3002350300RP	3002350300RP	3002350300RP	3002350300RP	
Overhead	3002350200RP	3002350200RP	3002350200RP	3002350200RP	

# XLF10017-XD Replacement Parts List


- 1. Remote Control. . . . . 500002576
- 2. Heater Assembly. . . . . X-2203860100RP
- 3. Power Supply (5 AMP) . . . . . X-2100250500RP
- 4. Power Supply (3 AMP) . . . . . X-2100250600RP
- 5. Main Control Board (MOD B/PREVIOUS) . . . . . 500002258  
ALL MODS . . . . . 500005620
- 6. Adapter Board (MOD B/PREVIOUS) . . . . . X-3002400100RP  
ALL MODS . . . . . 500006057
- 7. Relay Board (MOD B/PREVIOUS) . . . . . 500002277  
ALL MODS . . . . . 500006056
- 8. Hidden Touch Controls with QR labels (MOD B/  
PREVIOUS) . . . . . 500002263  
ALL MODS . . . . . 500006062
- 9. Temperature Sensor (NTC) . . . . . 500002877
- 10. Flicker Motor . . . . . X-2000550100RP
- 11. Flicker Rod . . . . . X-5903960500RP
- 12. Flame LED Strip (1) . . . . . X-3002320200RP  
(4) . . . . . X-3002320300RP

- 13. Media LED Strip (4) . . . . . X-3002350300RP
- 14. Overhead LED Strip (4) . . . . . X-3002350200RP
- 15. Mirrored Glass . . . . . X-5903780500RP
- 16. Front Glass . . . . . X-5903760500RP
- 17. Side glass (includes 1) . . . . . X-5903770100RP
- 18. Media Tray . . . . . X-5903790500RP
- 19. Medium Acrylic Crystals (4x) . . . . . 500004924
- 20. Large Acrylic Crystals . . . . . 500004925
- 21. Extra-large Acrylic Crystals (2x) . . . . . 500004926
- 22. Driftwood (1x) . . . . . 500004927  
(1x) . . . . . 500004928
- 23. Trim Assembly . . . . . X-1037390500RP
- 24. Hardware Kit . . . . . X-9602620400RP
- 25. Side Panel (includes 1) . . . . . X-1033820100RP
- 26. Heat Disable Jumper . . . . . X-4300520100RP
- 27. Tumbled Glass Media . . . . . 500003421


**NOTE:** All units with the serial number 17022D\*F\*\*\* or earlier needing a new Main Control Board or Hidden Touch Control will need to replace both boards for compatibility.

# Wiring Diagrams - North America


## XLF5017-XD

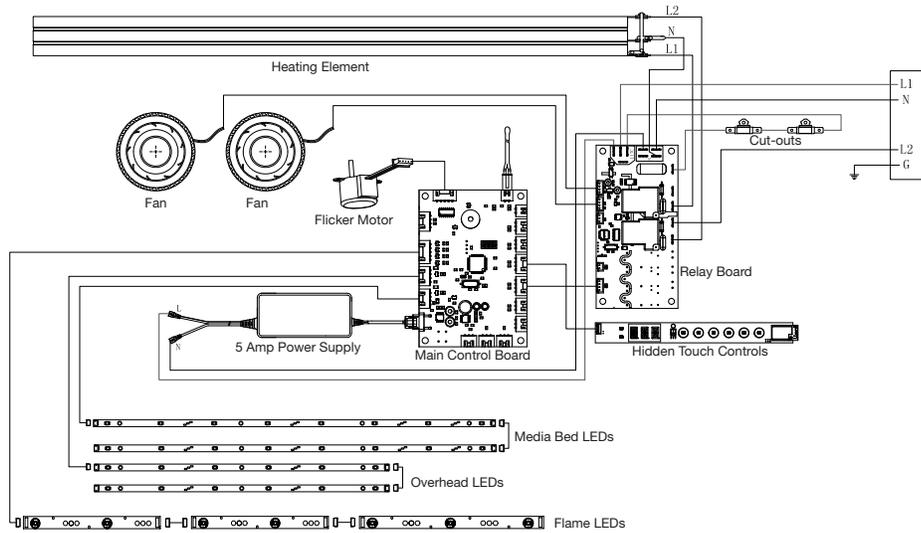


## XLF6017-XD

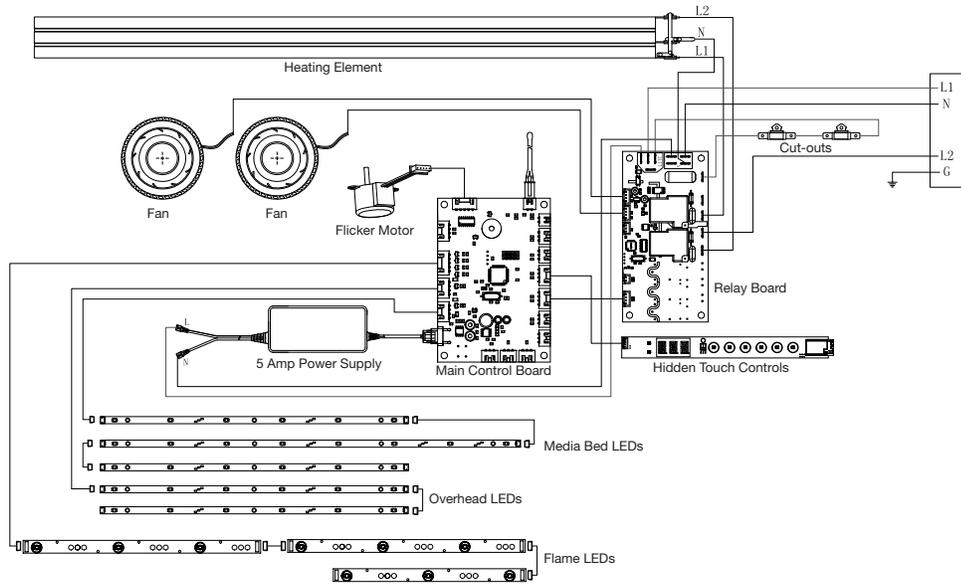


# XLF7417-XD

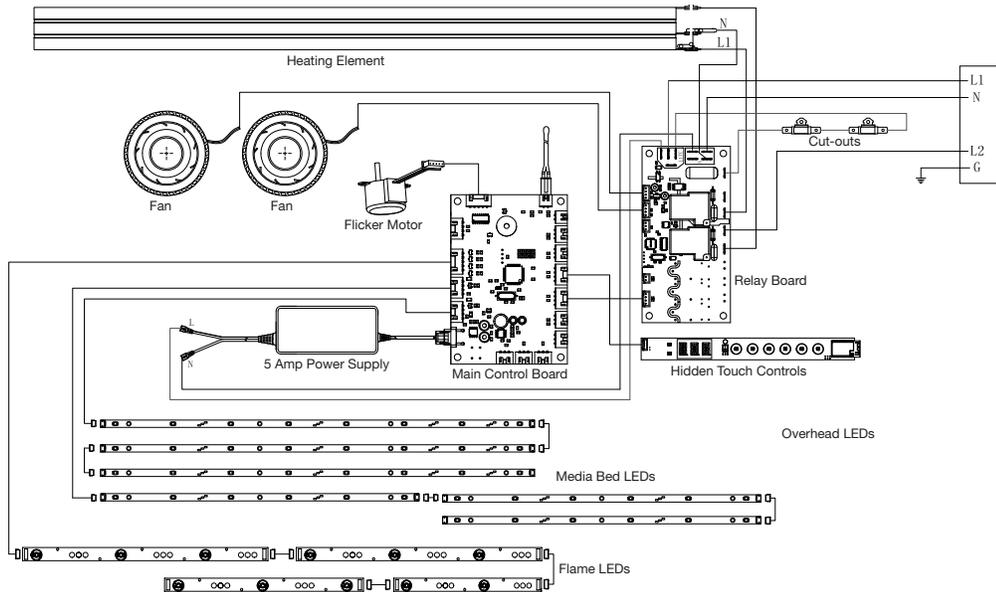

# XLF8817-XD

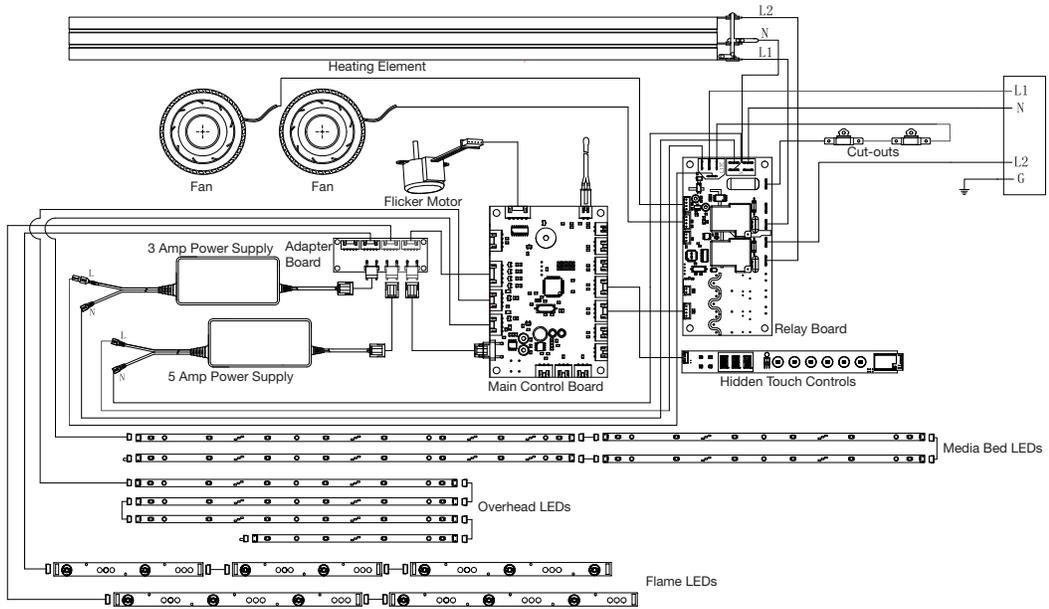

# XLF10017-XD

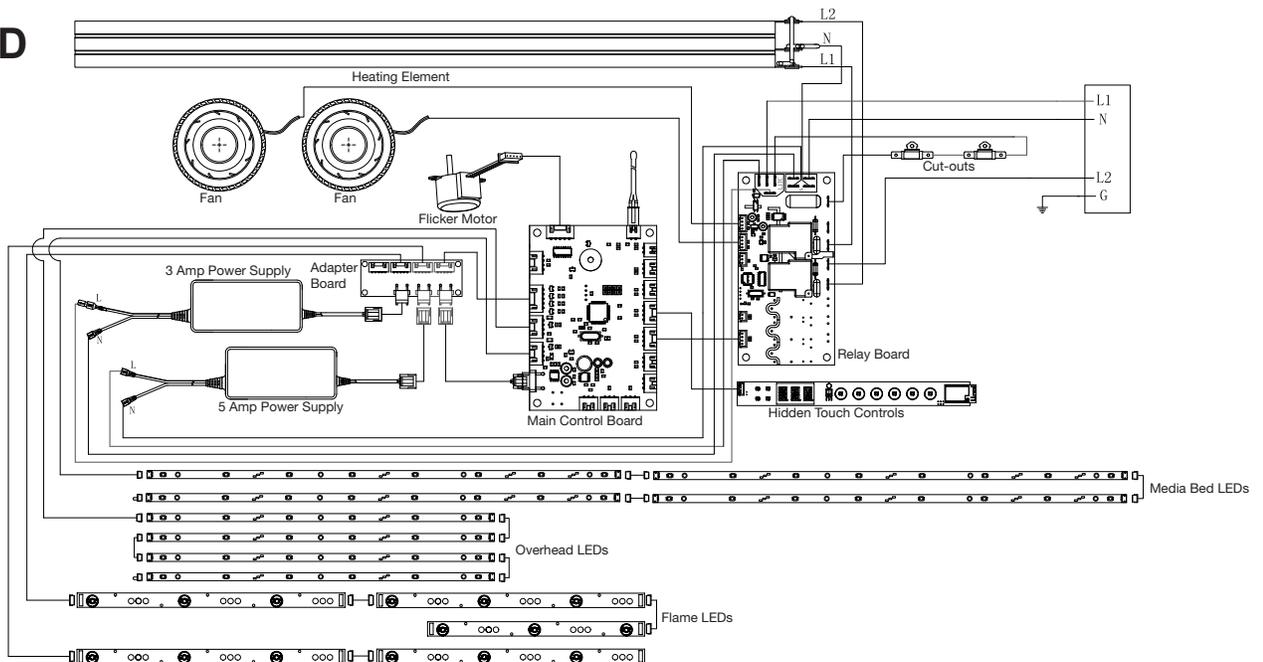

# Replacement Part Procedures

## Preparing the Firebox for Service


**⚠ WARNING:** If the firebox was operating prior to servicing, allow at least 10 minutes for the heating elements to cool off to avoid accidental burning of skin.

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or injury to persons.

**Tools Required:** Phillips-Head Screwdriver  
Suction Cup (to assist in lifting glass)

1. Remove front glass bracket(s) (**Figure 1**).
2. Tilt the front glass outward and lift to remove it (**Figure 2**). Set it in a safe place for the duration of the service.
3. For corner or bay installations, remove the slide glass by pushing it up and tilting it outward from the bottom.
4. Remove the media and put it aside for the duration of the service.
5. Remove the mirrored glass brackets (**Figure 3**).
6. Tilt the mirrored glass and lift to remove it (**Figure 4**).

Figure 1

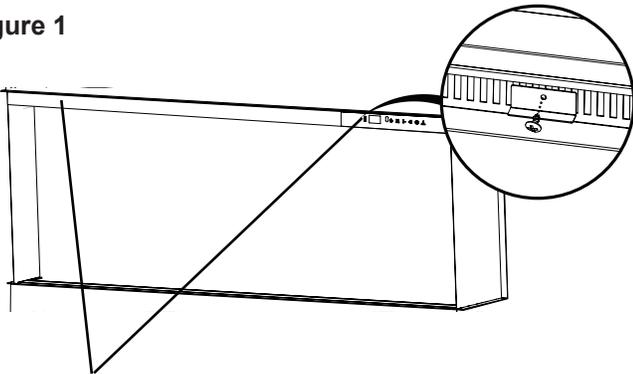

Front Glass Bracket(s) -  
Quantity varies by model

Figure 2



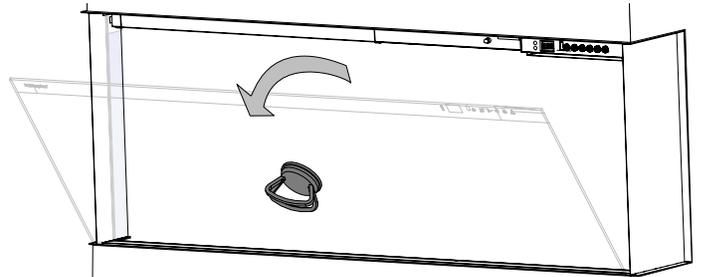


Figure 3

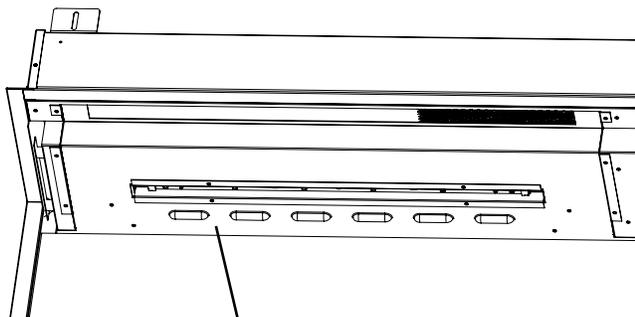

Mirrored Glass Bracket -  
Quantity varies by model


Figure 4

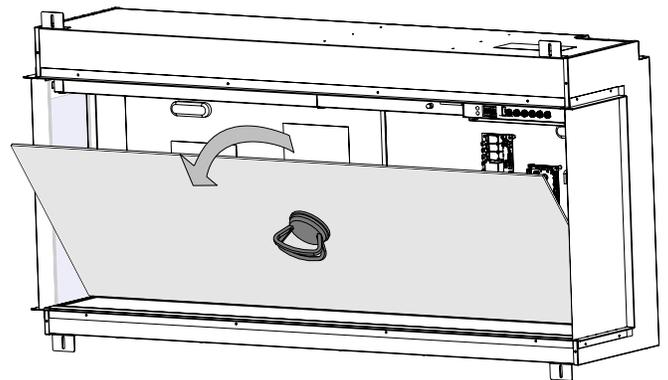

# Heater Assembly Replacement

**Tools Required:** Phillips-Head Screwdriver  
Pliers

1. Follow the instructions for *Preparing Firebox for Service* on page 10.
2. Remove the 4 screws that secure the overhead LED assembly. Unplug the LED connection, and set the assembly aside **(Figure 5)**.
3. Remove the 8 screws around the perimeter of the heater assembly panel **(Figure 5)**.
4. Push the heater assembly toward the back of the fireplace. It will move about 1/2 inch.
5. Hold the heater assembly front edge and lower the heater assembly.
6. Trace the connections from the heater assembly to the relay board. Carefully disconnect the connections, noting their original locations. Cut any restrictive wire ties.
7. Remove the defective heater assembly.
8. Feed the wires, one at a time, from the new heater assembly through the top portion of the housing to make the connections on the relay board.
9. Connect the wires from the heater assembly to the correct locations on the relay board.
10. Secure the wires using the provided wire ties and ensure they are pushed back as to not be too close to the back of the mirrored glass.
11. Position the new heater assembly by aligning the back of the bracket in the top housing and tilting it upward. Ensure the LED wire is fed through the slot for the LED assembly
12. Pull the heater assembly forward to align the screw holes. Secure using the previously removed screws.
13. Connect the LED wire, ensuring the IN marking on the board is oriented toward the right side. Secure the LED assembly.

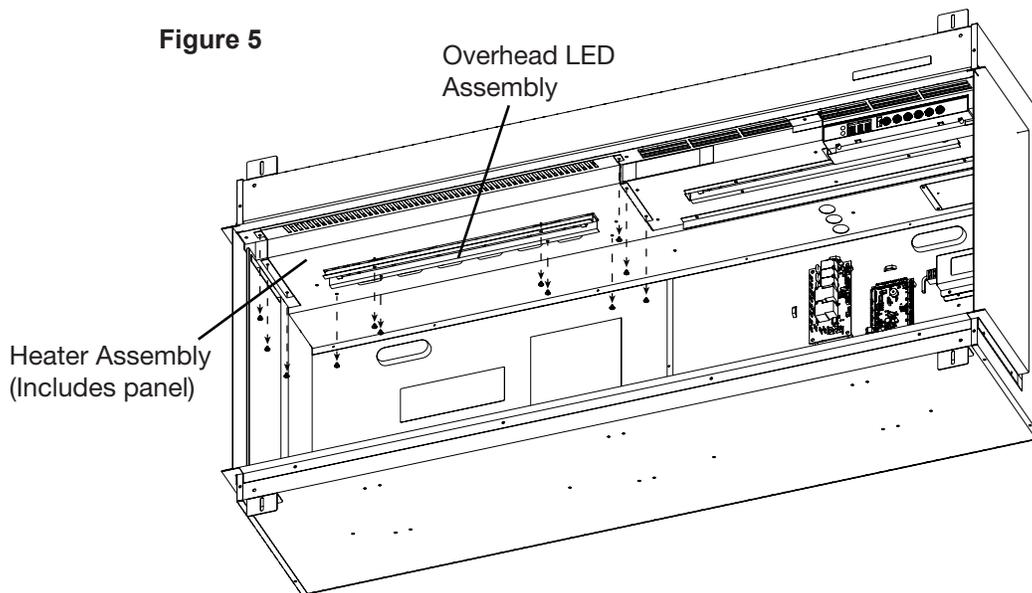

# Main Control Board Replacement

**Tools Required:** Phillips-Head Screwdriver

1. Locate the jumper terminal on the new main control board and remove the jumper shown. **(Figure 6)**

**⚠ CAUTION:** The Heat Disable jumper should only be removed if a permanently heat-disabled installation is required. See owner's manual for more information.

2. Follow the instructions for *Preparing Firebox for Service* on page 10.

3. Remove the screw on each corner of the main control board (4 total) **(Figure 7 / Figure 8)**.

4. Disconnect the wires from the main control board, noting their original locations.


5. Secure the new main control board using the previously removed screws.

6. Connect the wires on the new main control board in the correct locations.

7. Ensure wires are not too close to the mirrored glass.

8. Reassemble the firebox.

**Figure 6**

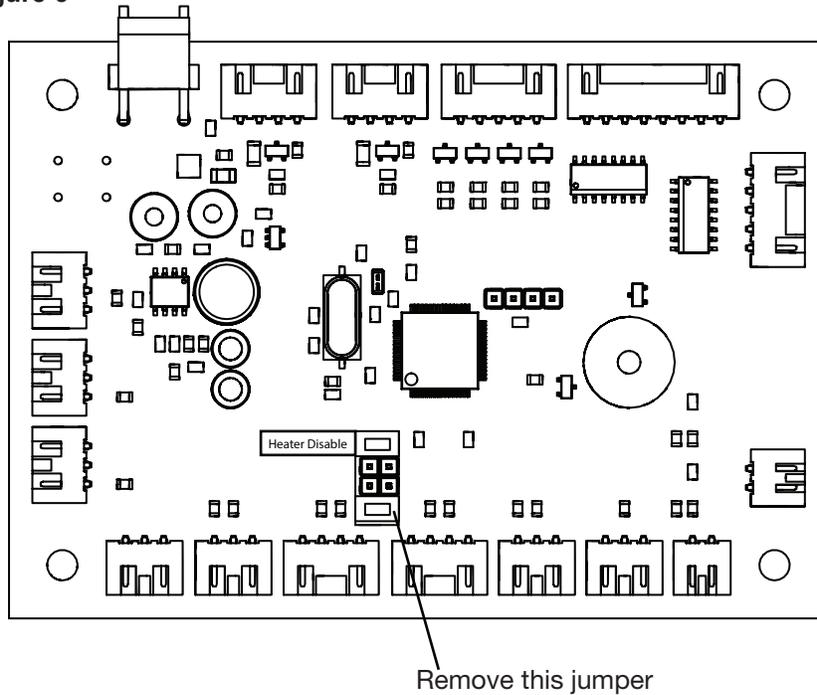


# Power Supply Replacement

**Tools Required:** Phillips-Head Screwdriver

1. Follow the instructions for *Preparing Firebox for Service* on page 10.
2. Remove the 4 screws that secure the power supply bracket (**Figure 7 / Figure 8**).
3. Trace the wires from the defective power supply and disconnect the power supply connections from the main control board and relay board (and adaptor board, for XLF8817-XD and XLF10017-XD models), noting their original locations. Cut restrictive wire ties.
4. Position the new power supply and secure it using the power supply bracket.
5. Connect the new supply in the correct locations on the main control board and relay board.
6. Replace any wire ties that have been cut. Ensure wires are not too close to the mirrored glass.
7. Reassemble the firebox.

**Figure 7** Models XLF5017-XD, XLF6017-XD, and XLF7417-XD Electronics

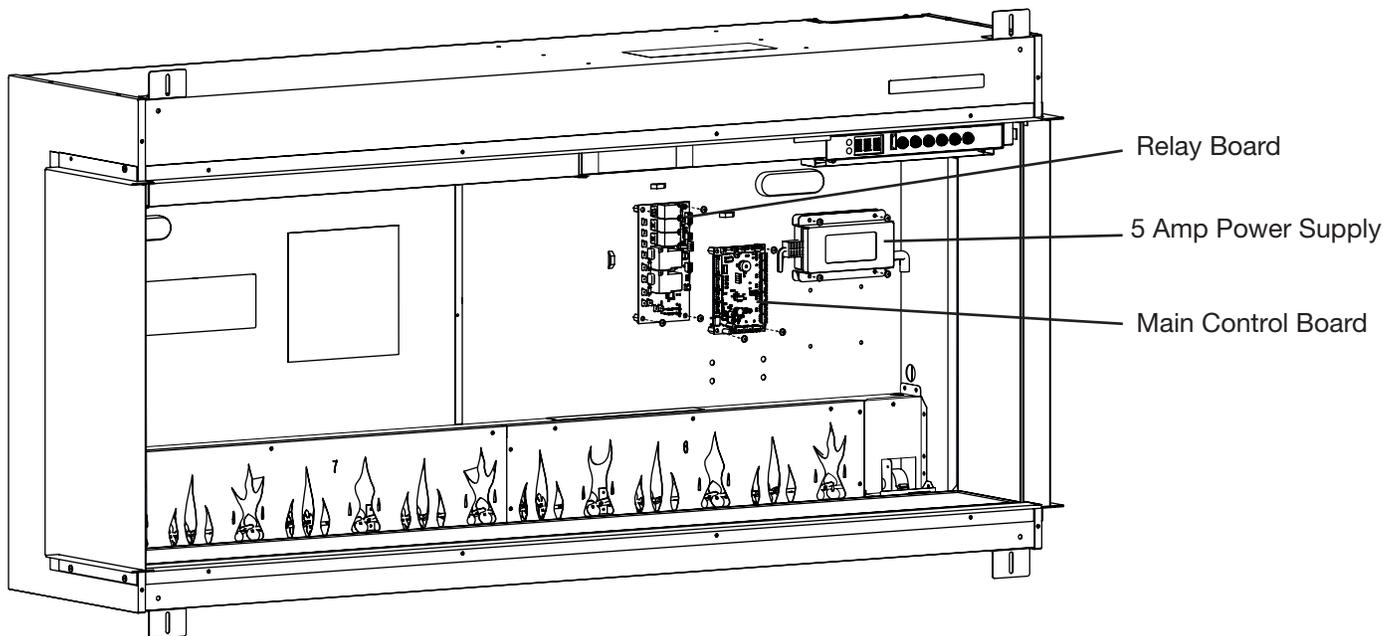

# Relay Board Replacement

**Tools Required:** Phillips-Head Screwdriver  
Pliers


1. Follow the instructions for *Preparing Firebox for Service* on page 10.
2. Remove the screw on each corner of the relay board (4 total) (**Figure 7 / Figure 8**).
3. Disconnect the wires from the relay board, noting their original locations.
4. Secure the new relay board using the previously removed screws.
5. Connect the wires on the new relay board in the correct locations.
6. Ensure wires are not too close to the mirrored glass.
7. Reassemble the firebox.

# Adapter Board Replacement (XLF8817-XD & XLF10017-XD)

**Tools Required:** Phillips-Head Screwdriver

1. Follow the instructions for *Preparing Firebox for Service* on page 10.
2. Remove the screw on each corner of the adapter board (4 total) (**Figure 8**).
3. Disconnect the wires from the adapter board, noting their original locations.
4. Secure the new adapter board using the previously removed screws.
5. Connect the wires on the new adapter board in the correct locations.
6. Ensure wires are not too close to the mirrored glass.
7. Reassemble the firebox.

**Figure 8** Models XLF8817-XD and XLF10017-XD Electronics

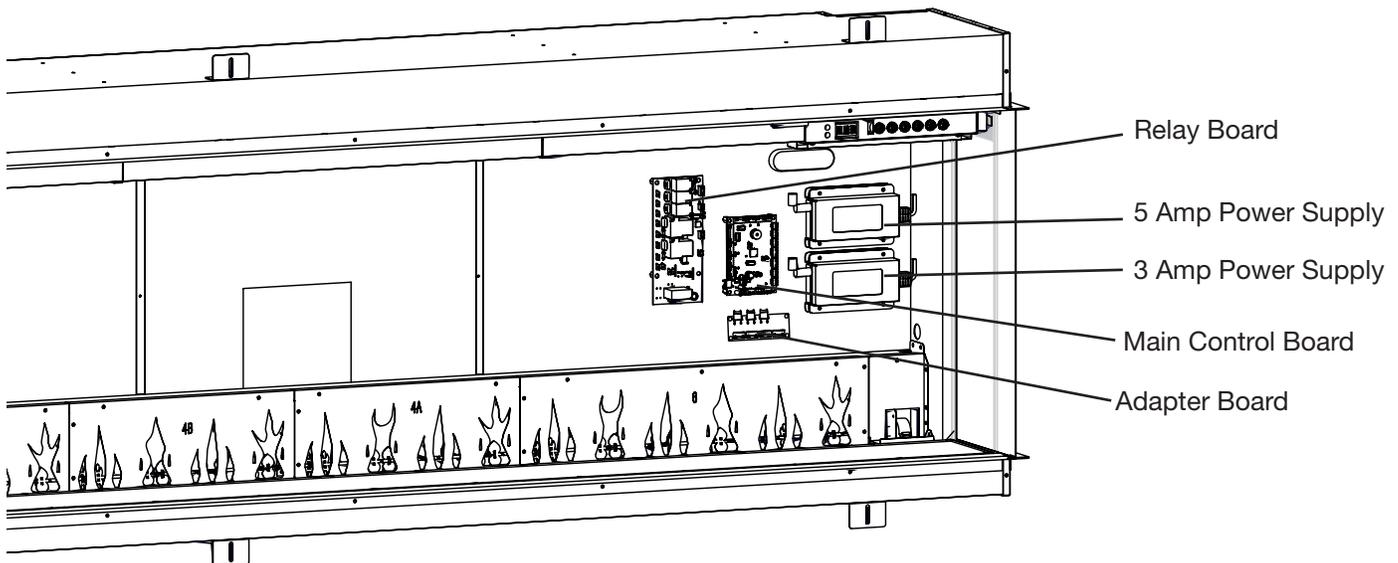


# Hidden Touch Controls Replacement


**Tools Required:** Phillips-Head Screwdriver

1. Follow the instructions for *Preparing Firebox for Service* on page 10.
2. Remove the screws on either side of the hidden touch controls bracket (**Figure 9**).
3. Remove the 4 screws that secure the board to the bracket (**Figure 10**).
4. Properly orient the new board on the bracket (the connector pins should align with the cutout).
5. Secure the board using the 4 screws previously removed. Do not overtighten.
6. Connect the connector to the board.
7. Secure the bracket on the upper housing.
8. Replace the QR Code labels provided over the existing QR label on the fireplace and the owner's manual (**Figure 11**)  
If using the Flame Connect app, you will need to reconnect your fireplace to the app following replacement of the hidden touch controls..
9. Reassemble the firebox.


**Figure 9**

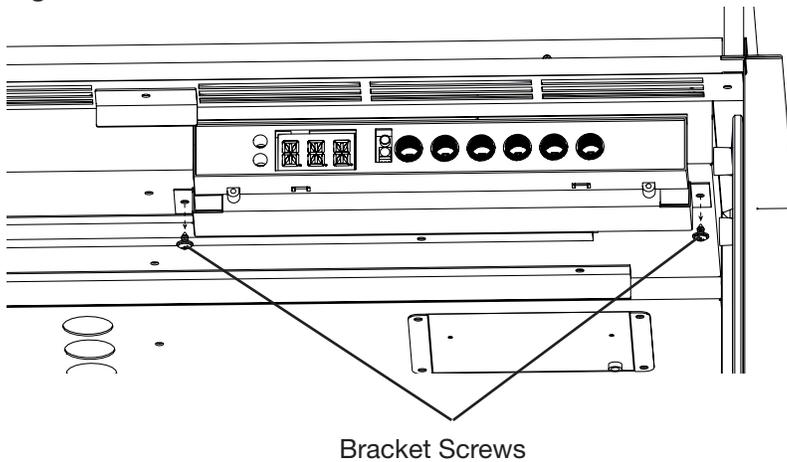

**Figure 10**

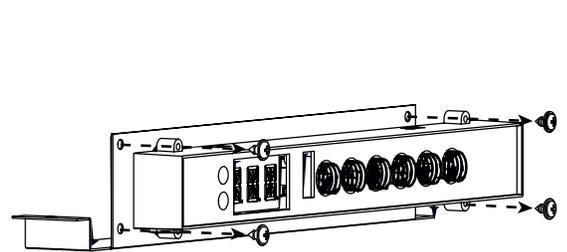

**Figure 11**

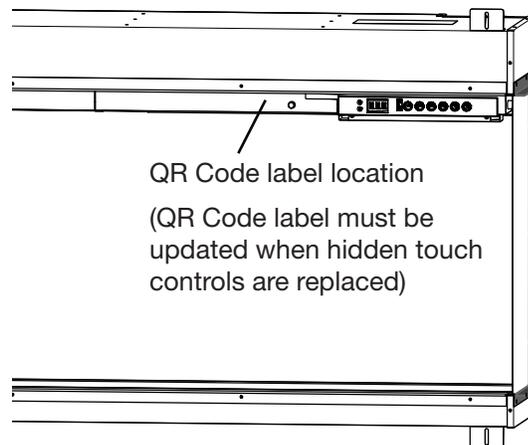


# Temperature Sensor (NTC) Replacement

**Tools Required:** Phillips-Head Screwdriver  
Side Cutters

1. Follow the instructions for *Preparing Firebox for Service* on page 10.
2. Remove the 4 screws on the NTC bracket (**Figure 12**).
3. Trace the NTC wire to the mainboard.
4. Disconnect the NTC and remove it, cutting any restrictive wire ties. Make note of the location of the NTC connector.
5. Feed the connector from the new NTC toward the main control board, and connect it into the correct location.
6. Secure the new NTC on the NTC bracket using the provided wire tie.
7. Secure the bracket using the 4 screws previously removed.
8. Reassemble the firebox.

**Figure 12**

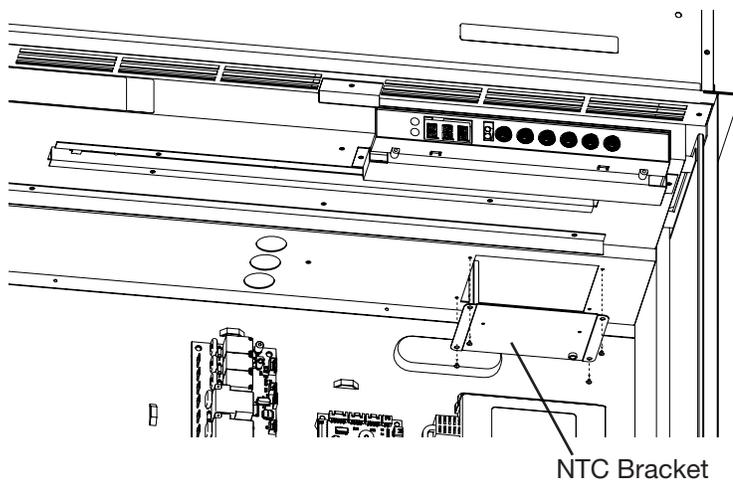


# Flicker Motor Replacement


**Tools Required:** Phillips-Head Screwdriver

1. Follow the instructions for *Preparing Firebox for Service* on page 10.
2. Remove the 10 screws that secure the flame panel furthest to the right (**Figure 13**).
3. Remove the 9 screws that secure the flicker motor housing (**Figure 14**).
4. Remove the 2 screws that secure the flicker motor bracket to the back panel (**Figure 15**).
5. Detach the flicker rod from the flicker motor by carefully flexing it and pulling out the rubber sleeve (**Figure 15**).
6. Remove the 2 screws that secure the flicker motor to the flicker motor bracket (**Figure 16**).
7. Trace the wires from the defective flicker motor to the main control board.
8. Disconnect the flicker motor from the main control board and remove it, cutting any restrictive wire ties.
9. Connect the new flicker motor in the correct location on the main control board.
10. Secure the flicker motor to the flicker motor bracket using the 2 screws previously removed.
11. Secure the flicker motor bracket to the back of the firebox, using the 2 screws previously removed.
12. Re-bundle the wires using the provided wire tie.
13. Attach the flicker rod to the flicker motor.
14. Secure the flicker motor housing, using the 9 screws previously removed.
15. Reassemble the firebox.


**Figure 13**

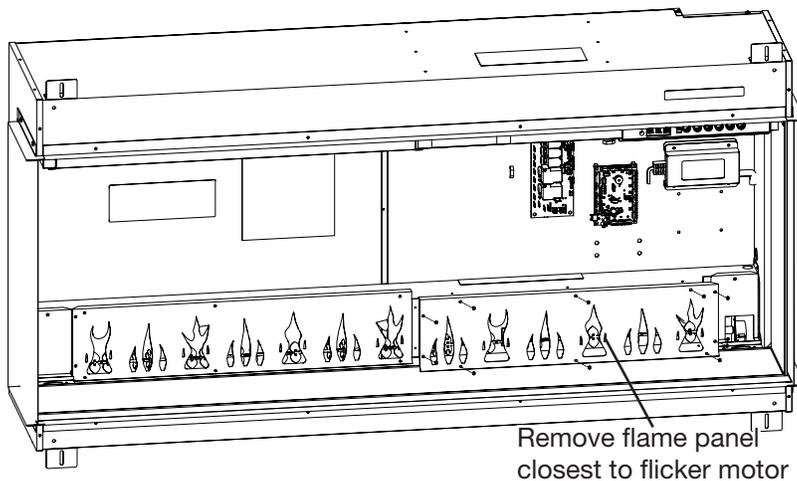


**Figure 14**

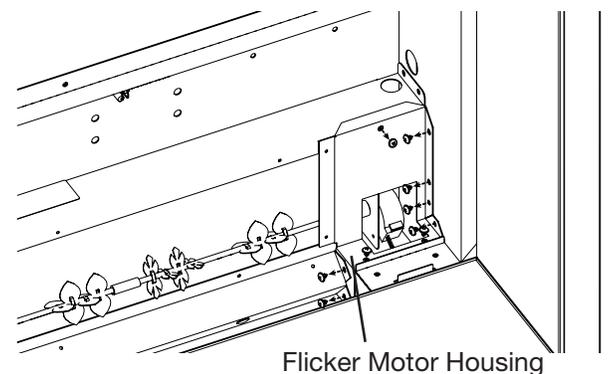

**Figure 15**

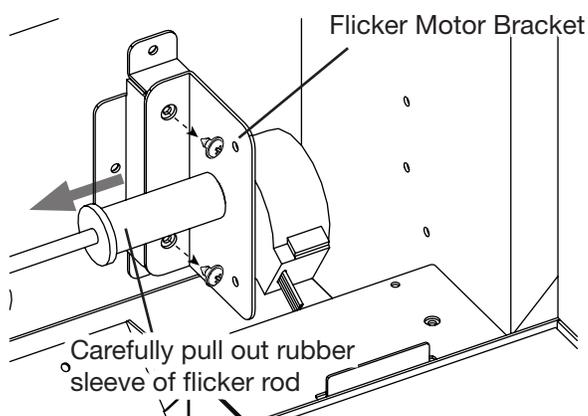

**Figure 16**

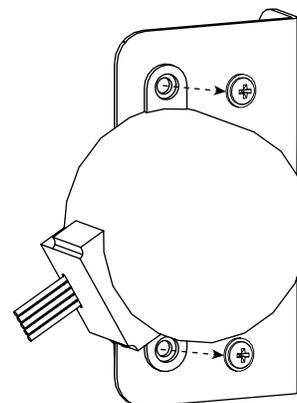


# Flame LED Replacement


**Tools Required:** Phillips-Head Screwdriver  
Pliers

1. Follow the instructions for *Preparing Firebox for Service* on page 10.
2. Remove the screws that secure the flame panels (number of screws will vary) (**Figure 17**). Set the flame panels aside, making note of their original order as they are removed.
3. Remove the 2 screws on each extremity (4 total) of the flame LED bracket (**Figure 18**).
4. Pinch each rivet using pliers while gently pulling the LED board off to release it (**Figure 19**).
5. Position the new flame LED board, and secure it by gently pressing it onto the rivets. Ensure the IN marking on the board is oriented toward the right side.
6. Secure the flame LED bracket using the 4 screws previously removed.
7. Reinstall the flame panels in the order opposite of which they were removed, ensuring they remain in the correct order.
8. Reassemble the firebox.


**Figure 17**

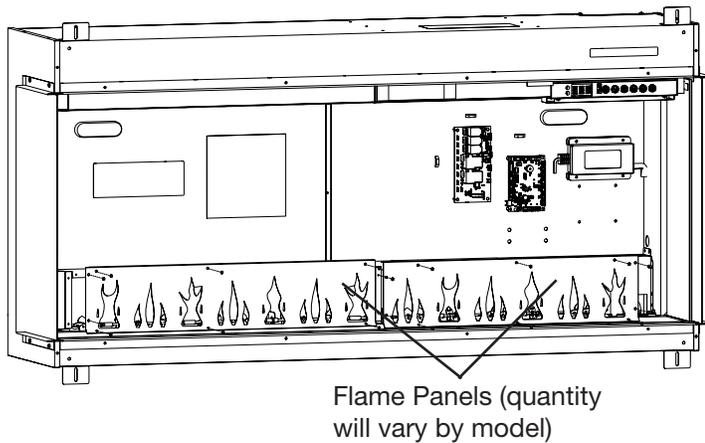

**Figure 18**

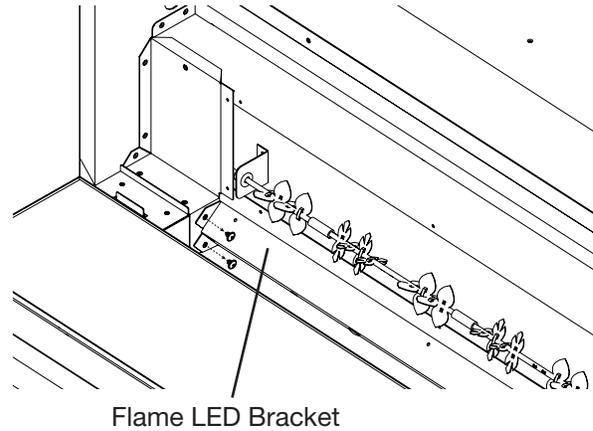

**Figure 19**

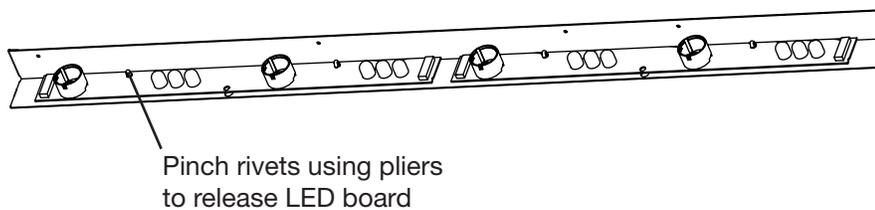

# Media Bed LED Replacement


**⚠ WARNING:** If the firebox was operating prior to servicing, allow at least 10 minutes for the heating elements to cool off to avoid accidental burning of skin.

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or injury to persons.

**Tools Required:** Phillips-Head Screwdriver  
Suction Cup (if available)

1. Remove front glass bracket(s) (**Figure 1, page 10**).
2. Tilt the front glass outward and lift to remove it. Set it in a safe place for the duration of the service (**Figure 2, page 10**).
3. Remove the media and put it aside for the duration of the service.
4. Remove the media tray using the suction cup, if available (**Figure 20**).
5. Remove the defective media LED board from the bracket by pinching each rivet using pliers, while gently pulling the board off to release it (**Figure 20**).
6. Disconnect the connector from the defective media LED board.
7. Position the new media LED board, and secure it by gently pressing it onto the rivets. Ensure the IN marking on the board is oriented toward the right side.
8. Reassemble the firebox.

**Figure 20**

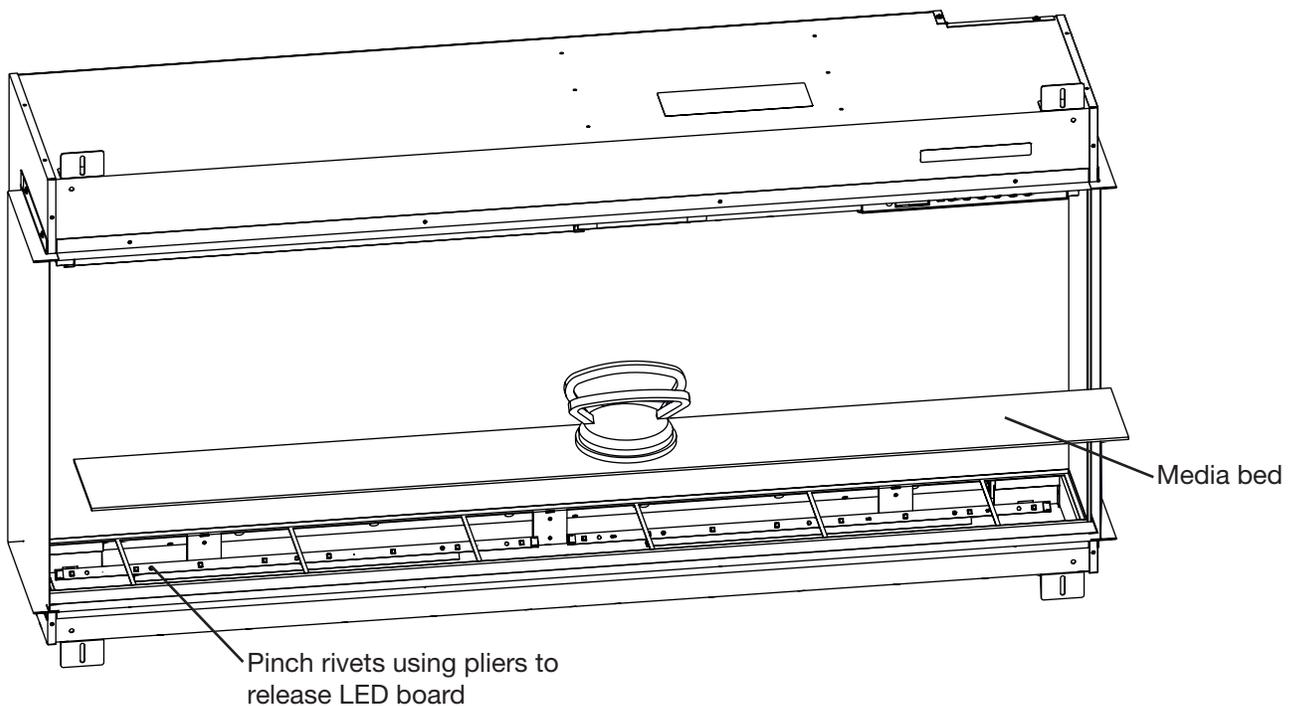

# Overhead LED Replacement


**⚠ WARNING:** If the firebox was operating prior to servicing, allow at least 10 minutes for the heating elements to cool off to avoid accidental burning of skin.

**⚠ WARNING:** Disconnect power before attempting any maintenance to reduce the risk of electric shock or injury to persons.


**Tools Required:** Phillips-Head Screwdriver  
Pliers

1. Remove front glass bracket(s) (**Figure 1, page 10**).
2. Tilt the front glass outward and lift to remove it. Set it in a safe place for the duration of the service (**Figure 2, page 10**).
3. Remove the 4 screws that secure the overhead LED bracket where the defective overhead LED board is located (**Figure 21**).
4. Disconnect the defective overhead LED board
5. Remove the defective overhead LED board from the bracket by pinching each rivet using pliers, while gently pulling the board off to release it (**Figure 22**).
6. Position the new overhead LED board, and secure it by gently pressing it onto the rivets. Ensure the IN marking on the board is oriented toward the right side.
7. Secure the overhead LED bracket using the 4 screws previously removed.
8. Reassemble the firebox.

**Figure 21**

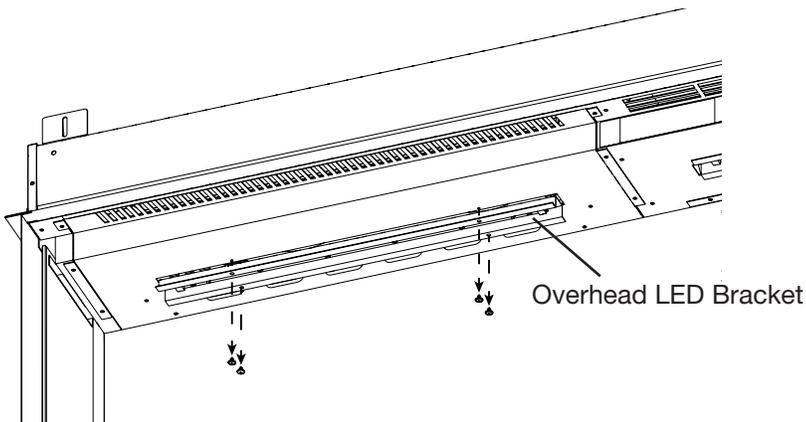

**Figure 22**

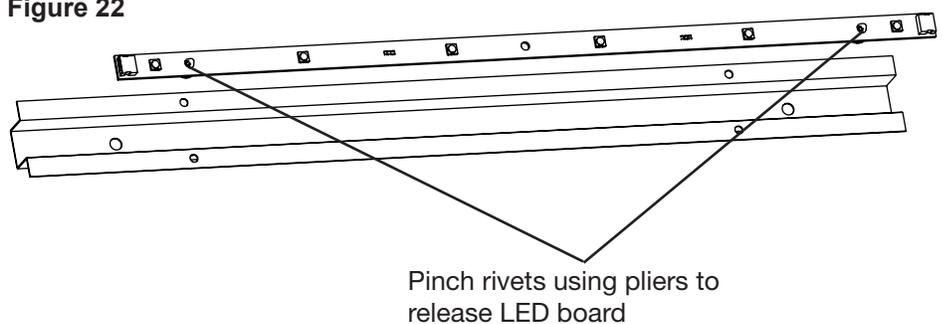

# Troubleshooting

Problem	Display	Cause	Solution
Circuit breaker trips or fuse blows when unit is turned on	N/A	Improper circuit current rating	Install unit on a dedicated minimum 15 amp circuit.
Fireplace does not turn on with the manual touch controls	N/A	No incoming power	Ensure unit is wired correctly Check main disconnect panel Ensure wall switch is on (if applicable)
		Front glass was installed after unit was powered on	Turn power off (from breaker or outlet), install front glass before turning power back on.
		Defective hidden touch controls	Replace hidden touch controls
		Defective main control board	Replace main control board
Fireplace does not turn on with the remote control	N/A	The batteries in the remote control are dead or installed incorrectly	Replace remote control battery Ensure battery is installed with + facing up.
		Defective remote control	Replace remote control
		Defective IR receiver	Replace hidden touch controls
Heater does not turn on	---	Heater is disabled	Press and hold  and  at the same time on the hidden touch controls for 3 seconds to disable or enable the heat function.
	H—	Heater has been permanently disabled	If installation with heat is desired, jumper on main board if available or purchase new main board.
Heater is on, but there is no heat		Normal operation — There is a 30-second delay before heater starts	No action required.
		Thermostat setting is below ambient temperature	Turn up the thermostat setting to be above ambient temperature
Error Code is displayed	Err 1	Temperature cut-out is activated	Reset breaker and wait 30 minutes before turning unit back on it. Ensure heater intakes and exhausts are not obstructed. Clean with compressed air if necessary. Defective heater assembly.
	Err12	Ambient temperature is above 45° C (113° F)	No action required.
	Err13	Ambient temperature is below 45° C (113° F)	No action required.
	Err16	NTC not detected	NTC is unplugged. NTC is defective.
	Err 23	Relay board not detected	Relay board is disconnected. Defective Relay board.

## App

For troubleshooting information related to the Flame Connect app, please visit [www.dimplex.com/fcapp](http://www.dimplex.com/fcapp)

1-888-346-7539 | [www.dimplex.com](http://www.dimplex.com)

In keeping with our policy of continuous product improvement, we reserve the right to make changes without notice.

© 2025 Glen Dimplex Americas

