




the **outdoor**
greatroom
company

Cirvalo Fire Pit Table Manual

CIR-41-SOCG-K
CIR-42-FSBR-K
CIR-42-RGCG-K

CIR-48-FSBR-K
CIR-48-RGCG-K

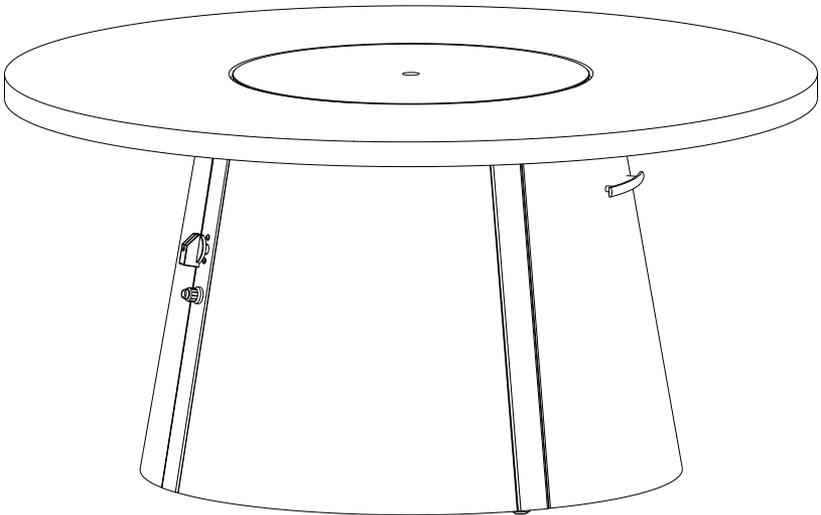

IMPORTANT

Please consult your Crystal Fire® Plus Burner User manual for detailed instructions and important information regarding burner installation including: full burner setup, lighting instructions, safety information, and proper tightening of connections with two wrenches.

DO NOT ATTEMPT TO INSTALL CRYSTAL FIRE® PLUS BURNER WITHOUT FIRST CONSULTING THE CRYSTAL FIRE® PLUS BURNER USER MANUAL

Contents

| | |
|---|----|
| A. Required Tools..... | 3 |
| B. Included Items..... | 3 |
| C. Placing & Assembling the Fire Table..... | 4 |
| D. Sparker Installation..... | 5 |
| E. Gas Connections..... | 6 |
| F. Sparker Connection..... | 7 |
| G. Installing Propane Tank..... | 8 |
| H. Finishing Touches..... | 9 |
| I. Care & Maintenance..... | 10 |
| J. Service Parts..... | 11 |
| K. Warranty Information..... | 12 |

A. Required Tools



- **Utility Knife** - Cut and remove packaging



- **Phillips Screwdriver** - Attach top and valve to base



- **Gloves** - Protect hands from rough edges




- **One (1) AAA Battery (Not Included)** - Required for spark igniter installation and operation



WARNING: TEAM LIFT. Do not attempt to perform installation by yourself. Have at least one other person available to help you.

B. Included Items

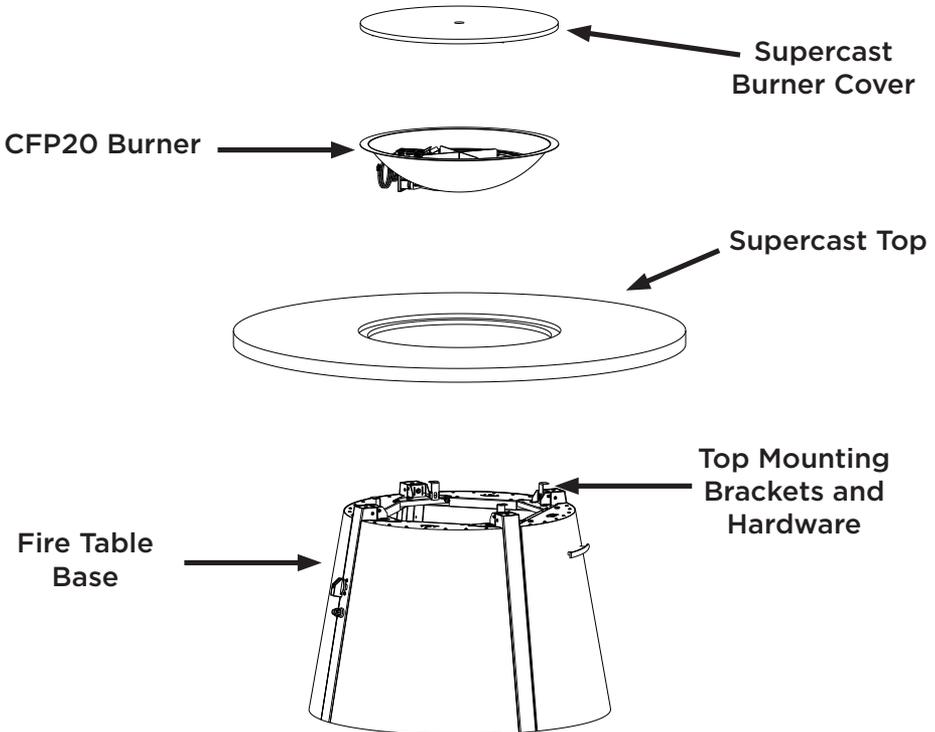

C. Placing & Assembling the Fire Table

1. Remove all components from packaging.
2. Move the fire table base to desired location. Ensure that the base is positioned on solid ground. Do not place on grass or dirt. **Refer to Crystal Fire® Plus Burner user manual to ensure clearances to combustible materials are met.**
3. If necessary, adjust leveling feet at the bottom of the base. This will ensure stable installation and allow the tank tray to move smoothly. See Figure C-A.

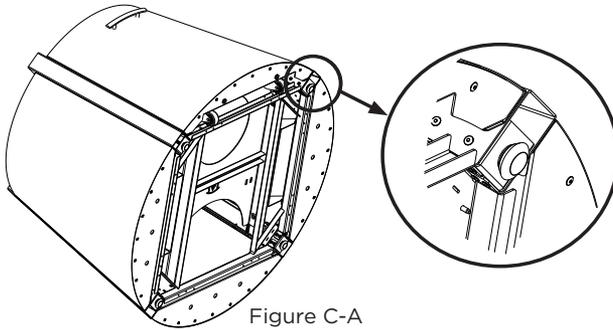


Figure C-A

4. Position Supercast top onto base. Make sure that the burner opening is centered on base opening. See Figure C-B.

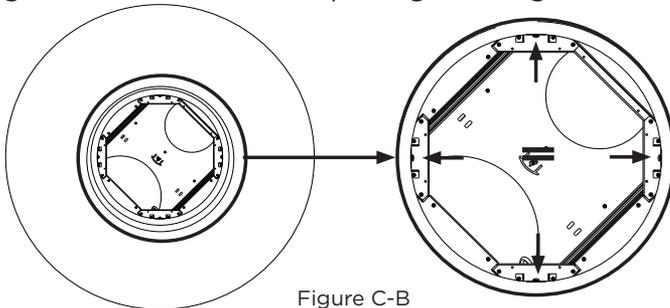


Figure C-B

5. Secure Supercast top to base using four (4) included brackets and machine screws. See Figure C-C.

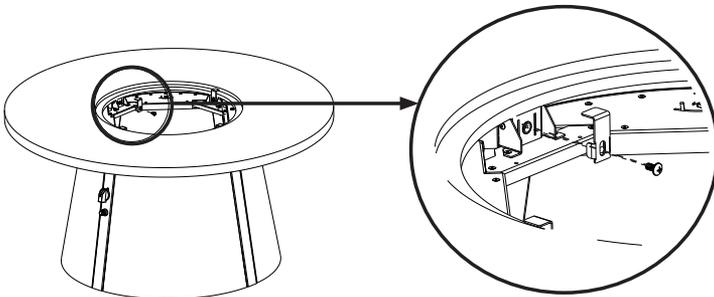


Figure C-C

D. Sparker Installation

1. Remove hex nut and cap from the sparker. See Figure D-A.
2. Install sparker into control opening of fire table base as shown below. Tighten hex nut onto sparker to secure to base. See Figure D-A and Figure D-B.
3. Insert AAA battery (not included) with the positive (+) end oriented outward. Secure sparker cap onto sparker.
4. Press and hold button on cap for 2 seconds to test sparker. An audible “clicking” should be heard inside the base.

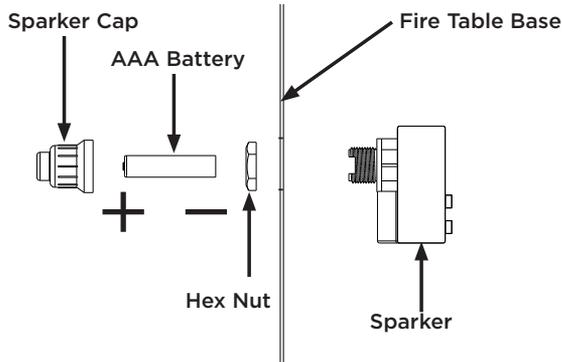


Figure D-A

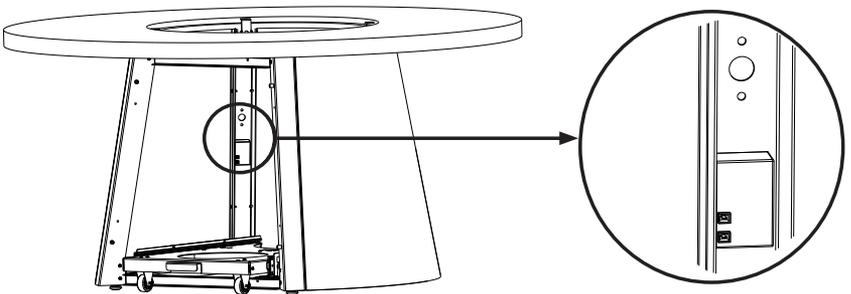


Figure D-B

E. Gas Connections

READ THE CRYSTAL FIRE® PLUS INSTALLATION MANUAL BEFORE BEGINNING BURNER HOOKUP OR OPERATING THE FIRE PIT



Crystal Fire® Plus
Installation Video

1. Rest burner on Supercast top using cardboard packaging to protect surface. Attach burner control valve to the control panel opening of the base using included screws. Secure knob to valve stem. **Sparker must be installed before valve.** See Figure E-A.

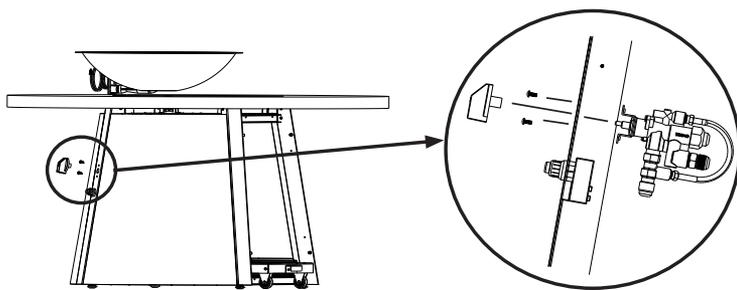


Figure E-A

2. Carefully lower burner into burner opening of Supercast top. Orient the burner so that the burner neck and ignition wind guard are pointing towards the back of the fire table base, away from the door. See Figure E-B.

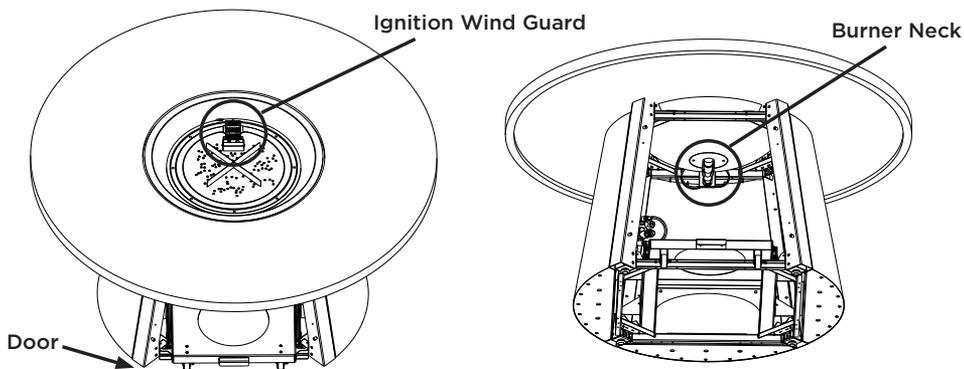


Figure E-B

F. Sparker Connection

1. Connect orange igniter wire and black ground wire to the terminals on the back of the sparker. Both wires can be connected to either location; the unit will operate in either configuration. See Figure F-A.

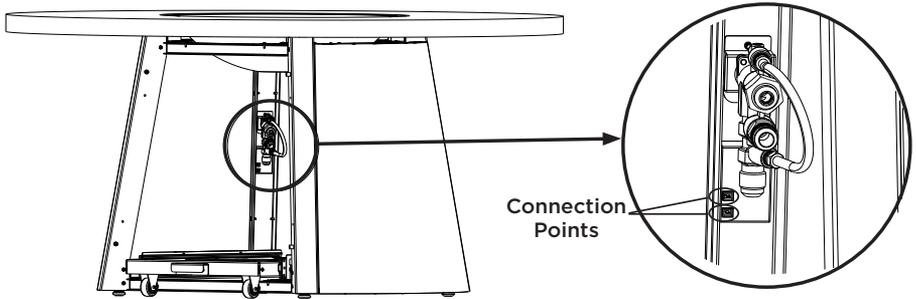


Figure F-A

2. Test the spark ignition by pressing the button on the sparker and looking for a spark on the burner between the two pieces of metal. Consult the troubleshooting section of the Crystal Fire® Plus burner user manual if the spark is weak, intermittent, or not present. See Figure F-B.

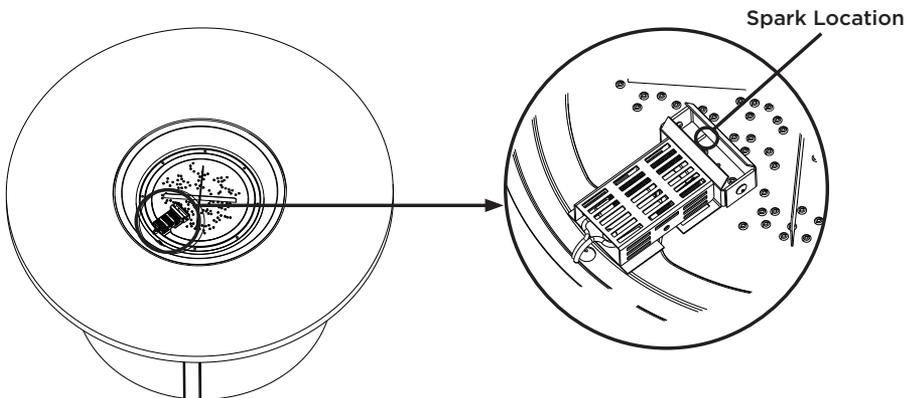


Figure F-B

G. Installing Propane Tank

1. Lift off the access door of base and set aside. Pull out tank tray. See Figure G-A.

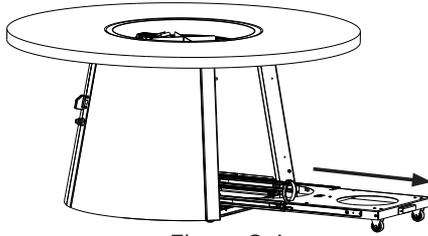


Figure G-A

2. Set 20 lb. liquid propane tank in tray and ensure it is fully seated in the tray. See Figure G-B.

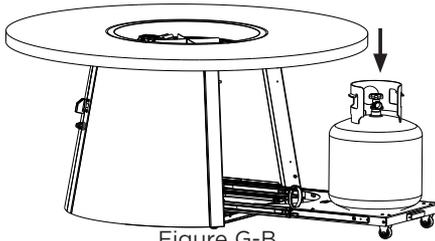


Figure G-B

3. Make sure the propane tank valve and burner control valve are both in the “OFF” position, connect regulator hose to the propane tank. **Hand-tighten this connection. DO NOT USE TOOLS FOR THIS STEP.** See Figure G-C.

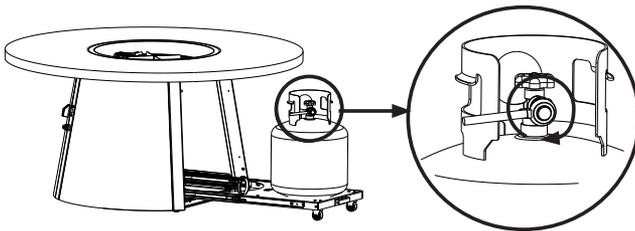


Figure G-C

4. Secure excess regulator hose to hook-and-loop strap on tank tray. Slide tank tray back into base. Ensure hose is not pinched by the tray or against bottom of burner. See Figure G-D.

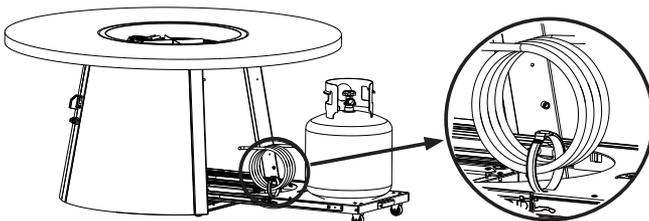


Figure G-D

H. Finishing Touches

1. Install Outdoor GreatRoom Company approved burner media according to Crystal Fire® Plus burner user manual. **DO NOT BURN FIRE TABLE WITHOUT BURNER MEDIA.**
2. Save all user manuals and product documentation, stored away from the unit.
3. Recycle all cardboard packaging.

WARNING

After consulting the Crystal Fire® Plus user manual and following instructions,
CHECK ALL GAS CONNECTIONS FOR LEAKS BEFORE OPERATING.

IMPORTANT

Please consult your Crystal Fire® Plus burner user manual for detailed instructions and important information regarding burner installation including: full burner setup, lighting instructions, safety information, and proper tightening of connections with two wrenches
DO NOT ATTEMPT TO INSTALL CRYSTAL FIRE® PLUS BURNER WITHOUT FIRST CONSULTING THE CRYSTAL FIRE® PLUS BURNER USER MANUAL



WARNING: This product can expose you to chemicals including Carbon Monoxide and Benzene which are known to the State of California to cause cancer or birth defects or reproductive harm. For more information, visit www.P65Warnings.ca.gov

I. Care & Maintenance

Supercast Top

It is recommended that all tabletops be covered when not in use to protect the top and burner. The Outdoor GreatRoom Company offers optional protective covers for all products. All tops should be cleaned using warm soapy water; a soft bristle brush can also be used for getting dirt out of textured areas. Rinse with clean water when done.

It is recommended to reseal the Supercast top annually using a solvent-based sealer. This sealer (SC-Sealer) is available through The Outdoor GreatRoom Company. Contact your local dealer or visit outdoorrooms.com.

Fire Table Base

Dust, dirt, and debris can be removed utilizing water and a mild dish soap solution. Dry base with a lint-free towel or paper towels when necessary. Touch-up paint is available for small chips or scratches. Contact your local dealer or visit outdoorrooms.com.

Tank Drawer Slides

In the event that the drawer slides begin to stick during operation, an aerosol lubricant like WD40® or equivalent can be sprayed on the bearings. This can be performed as needed, or as a part of annual maintenance of the fire table. Spray the lubricant on the drawer slide bearings and open and close the tank tray 5-7 times.

CFP20 Burner

Refer to Crystal Fire® Plus burner user manual for all burner related care and maintenance. Annual maintenance of the burner is required for continued proper operation.

J. Service Parts

Refer to Crystal Fire® Plus Burner user manual for all burner-related service parts.

| Part | 42" Top | 48" Top |
|--|---|-----------------------------|
| Base: Brown Charcoal Grey | CIR-BASE-BR CIR-BASE-CG | |
| Door: Brown Charcoal Grey | 3010-030SRV-BR 3010-030SRV-CG | |
| Drawer Slides: | 3000-737SRV | |
| Top Mounting Brackets: | 3010-132SRV | |
| Supercast Top: Smokey Oak Relic Grey Fossil Brown | 3010-348SRV 3010-345SRV 3010-343SRV | N/A 3010-344 3010-342 |
| Supercast Cover: Smokey Oak Relic Grey Fossil Brown | 3010-349SRV 3010-347SRV 3010-346SRV | |
| Supercast Top & Cover: Smokey Oak Relic Grey Fossil Brown | 3010-064 3010-063 3010-061 | N/A 3010-062 3010-060 |
| Supercast Sealer: | SC-SEALER | |

K. Warranty Information

Warranty:

Fire pit tables are covered under a 1-year manufacturer's warranty. Please visit <https://www.outdoorrooms.com/product-registration> to register your product.



Thank you for purchasing an Outdoor GreatRoom Company product! This fire pit was assembled with pride in the USA with US & imported parts.



9853 217th St. W, Lakeville, MN 55044

Toll Free: 1-866-303-4028 | sales@outdoorrooms.com