




the **outdoor**
greatroom
company

Linear Fire Pit Table

Installation Instructions for:

- Havenwood models
- Key Largo models
- Providence models

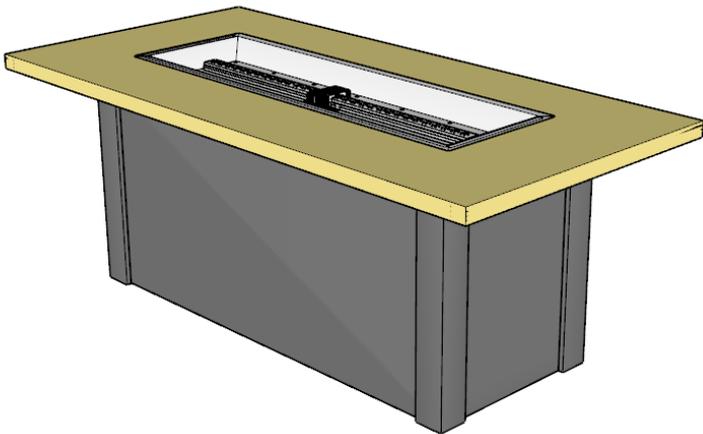

Contents

Required tools.....	2
Placing and Assembling the Fire Table.....	3
Sparker Installation.....	5
Gas Connections.....	5
Thermocouple Installation.....	6
Electrode Installation.....	6
Locating Propane tank.....	7
Finishing Touches.....	8
Care and Maintenance	10
Service Parts.....	11

Required Tools



- **2 Open Ended Wrenches** - *To make gas connections.*



- **Leather Gloves** - *To protect hands from rough edges found on the table.*



- **One (1) AAA Battery (not included)** - *Required for piezoelectric igniter installation.*




- **Electric Screw Gun with Philips tip** - *(Used for attaching brackets to top and top to frame.)*




- Do not attempt to perform installation by yourself. This fire table has a heavy top. Have at least one other person help you.

Placing and Assembling the Fire Table

1. Remove all components from packaging.
2. Move the base section to desired location.
3. When locating your table, refer to the Crystal Fire® Plus manual and maintain clearance to combustibles.
4. Adjust leveling legs on bottom to ensure tank door operates smoothly.
5. Set top into place.
 - a. Supercast tops & Stainless-Steel tops skip to step 7.
6. Everblend top only: Set top into place and install mounting brackets.
 - a. Set brackets into place, (hook bottom, then rotate up over top)
 - b. Attach using supplied screws (4)

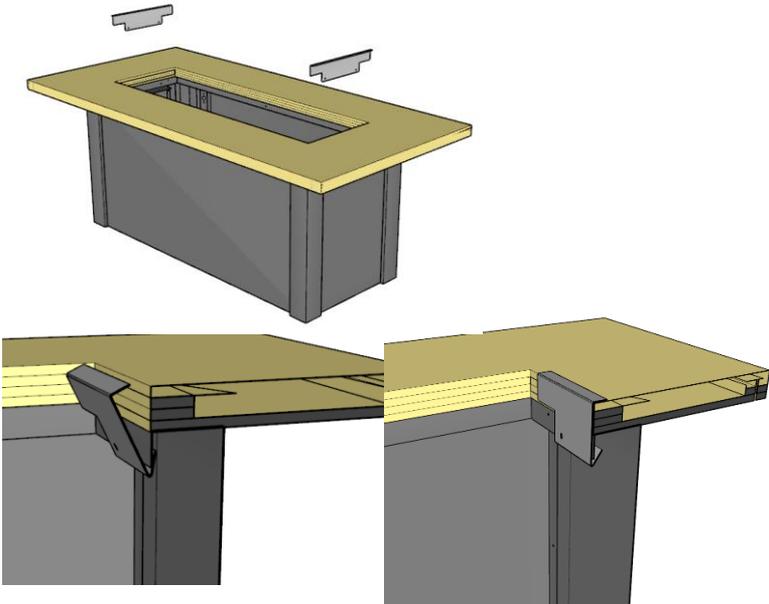


7. Carefully set the burner into place on top of the Supercast and Stainless Steel top. See the sections labeled [Gas Connection](#) and [Ignitor Installation](#) to install gas lines and piezo electric igniter.

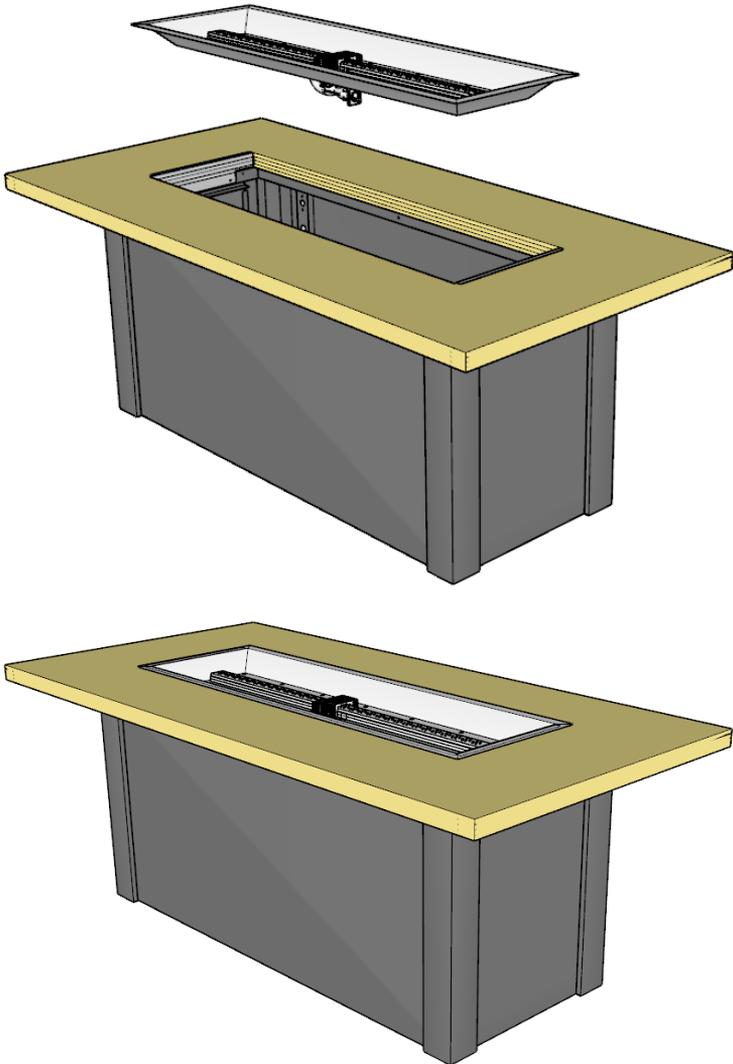

CF-SPARKER Installation


- Remove CF-SPARKER cap and hex nut. Insert AAA battery (not included) with + end out.
- Install CF-SPARKER into control panel as shown below.
- Depress CF-SPARKER button to test your sparker.

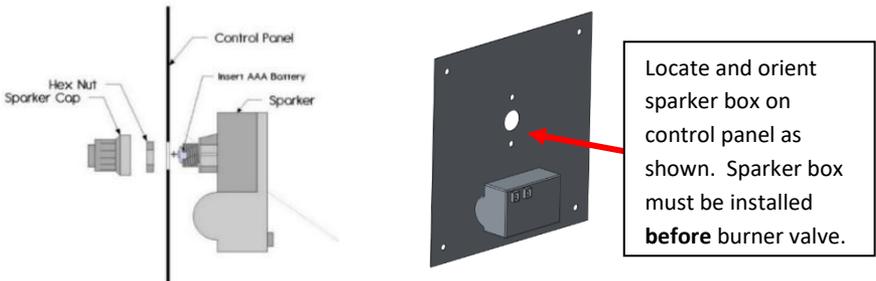

Gas Connections

Read and understand your Crystal Fire® Plus owner's manual before beginning burner hookups or using the device.


See Crystal Fire Plus® instructions for burner installation.

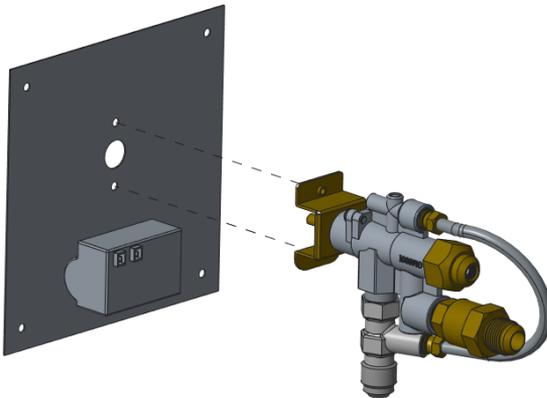

Attach burner valve to control panel with provided screws as shown below. Ensure sparker box is installed before this step.



Thermocouple Installation

- Refer to Crystal Fire® Plus instruction manual for detailed attachment of thermocouple.
- Attach thermocouple to burner valve as shown below.

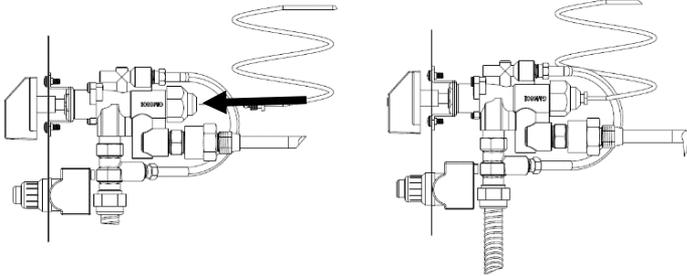

Electrode Installation


- Connect igniter and ground wire to sparker box. Both wires can connect to either connection point. The unit will operate in either configuration.
- Test system by pushing the button on the ignitor. Consult the troubleshooting section of the Crystal Fire® Plus Burner Owner's Manual, if the spark is weak, intermittent, or not present.

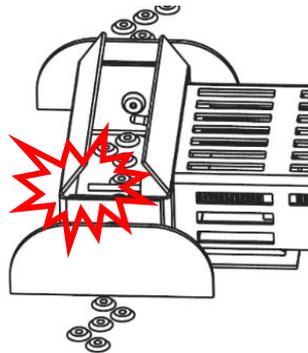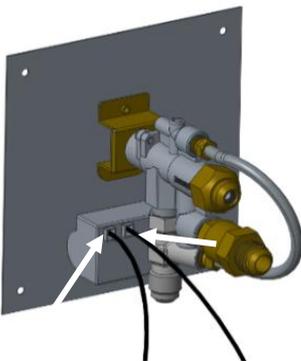


Locating your Tank

(If applicable)


1. Tilt your propane tank into the slide out tank drawer.

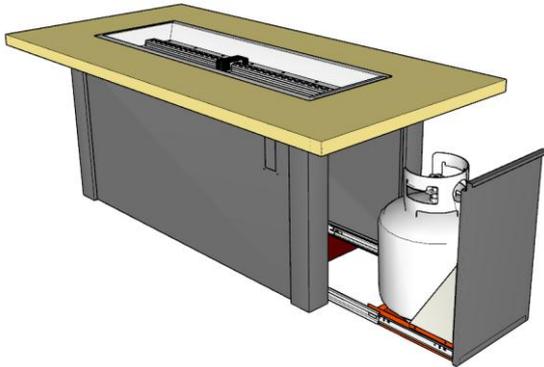

2. With the propane tank and control valve in the OFF position, connect the Regulator Hose, included with the Crystal Fire® Plus burner, to your propane tank. Hand tighten connection, do not use tools to tighten this connection.

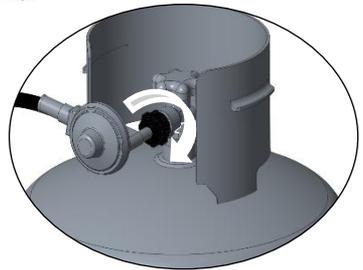


3. Slide tank drawer in. Ensure that the Gas hose does not get pinched in the process of sliding the tank drawer.

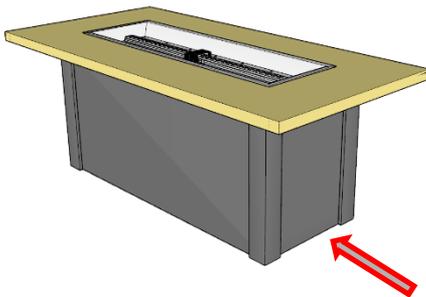

NOTE: Over time the bearings in the door glides may require re-greasing. Any spray lubricant, such as WD-40, may be used to lubricate drawer glides. Perform annually or on an as needed basis to maintain smooth operation.

Gas Line Location

- If the fire pit is to be supplied by natural gas or hard piped propane system, locate your plumbing outside the area of the tank drawer. Gas can be stubbed up within the shaded area indicated below.

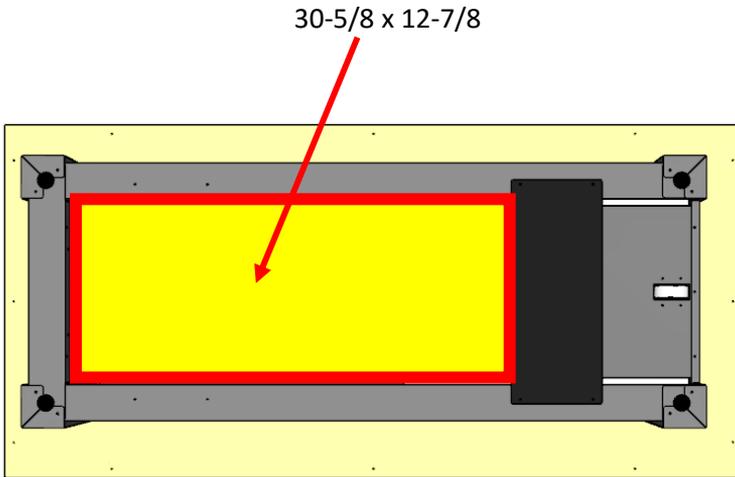

Finishing touches

- Once fire pit is set up and in the desired position, scatter decorative glass on burner surface forming an even layer of beads.
- Cover ignitor with decorative glass beads.

**DO NOT BURN WITHOUT GLASS OR OTHER APPROVED
DECORATIVE FIRE MEDIA**

DO NOT BURN WITH GLASS BURNER COVER INSTALLED

WARNING

After consulting the manual and following instructions, remember; before operating, all gas connections must be fully checked for leaks.

IMPORTANT

Please consult your Crystal Fire® Plus instruction manual for detailed instructions and important information related to hooking up your linear burner, including safety information, proper tightening of connections with two wrenches and full burner setup and lighting instructions.

DO NOT ATTEMPT TO INSTALL CFP1224 BURNER WITHOUT FIRST CONSULTING THE CRYSTAL FIRE® PLUS MANUAL. IF YOU ARE UNSURE OF HOW TO COMPLETE THE STEPS OUTLINED, CONSULT A QUALIFIED TECHNICIAN



WARNING: This product can expose you to chemicals including Carbon Monoxide and Benzene which are known to the State of California to cause cancer or birth defects or reproductive harm. For more information, visit www.P65Warnings.ca.gov

Care and Maintenance

It is recommended that all tabletops be covered when not in use for extended periods of time to protect the top and burner. All tops should be cleaned using warm soapy water, a soft bristle brush can also be used for getting dirt out of textured areas. Rinse with clean water when done. The stainless-steel tops can also be cleaned using stainless steel cleaners.

The Everblend and Supercast tops should be sealed annually when not using a cover or every 2 years if using a cover. The Everblend tops require a water based concrete sealer, the factory sealer is H&C Clarishield Natural Look from Sherwin Williams, but any water-based sealer can be used. The Supercast tops require a solvent based sealer, SC-Sealer is available from The Outdoor GreatRoom, but any solvent based sealer can be used. There is more information available on maintenance on the Outdoor GreatRoom website under FAQ in the Resource dropdown menu.

Service Parts

Part	24"	42"
Base		
Black (Manual)	HWAB-1224-BASE	HWAB-1242-BASE
Black (Electric)		HWAB-1242-DBASE
Graphite (Manual)	HWAG-1224-BASE	HWAG-1242-BASE
Graphite (Electric)		HWAG-1242-DBASE
White (Manual)	HWAW-1224-BASE	HWAW-1242-BASE
White (Electric)		HWAW-1242-DBASE
Key Largo Stucco		3007-052
Providence	HWAB-1224-BASE	
Drawer Assembly (with Drawer Slides)		
Black		3007-060-Black
Graphite		3007-060-Graph
White		3007-060-White
Key Largo Stucco		3007-060-Stucco
Providence		3007-060-Black
Tops		
Carbon	HWG-3044-TOP	HWG-3062-TOP
Driftwood	HWD-3044-TOP	HWD-3062-TOP
Supercast		2554-1254-MM
Stainless Steel	PROV-SS-TOP	KEY-LARGO-TOP
Glass Burner Cover	1224-GREY-GLASS-COVER	1242-GREY-GLASS-COVER
Touch Up		
Carbon Top		EB-TU-CG
Driftwood Top		EB-TU-DW
Drawer Slides		3000-737

Refer to Crystal Fire® Plus instruction manual for burner service parts.

Thank you for purchasing an Outdoor GreatRoom Company product! This fire pit was made with pride in the USA with US & imported parts.



Warranty: Fire pit tables are covered under a 3-year manufacturer's warranty. Supercast concrete tops are covered under a 1-year warranty, see website for more warranty information. Please visit <https://www.outdoorrooms.com/product-registration> to register your product.



9583 217th St. W. • Lakeville, MN 55044
Toll Free: 1-866-303-4028 • Sales@OutdoorRooms.com