

FIREPLACE **XTRORDINAIR**



Fireplace Xtrordinair GreenSmart Electric Fireplaces Manual

**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION AND OPERATION.
KEEP THEM IN A SAFE PLACE FOR FUTURE REFERENCE.**

INSTALLER: Leave this manual with the appliance. French language manuals at fireplacex.com.
CONSUMER: Retain this manual for future reference. Manuels de langue Française à fireplacex.com

Overview

This manual details the installation and operation of the Fireplace Xtrordinaire GreenSmart Electric fireplaces.

Listing Details

This appliance was listed to UL 2021 4th Edition Dedicated Electric Room Heaters / CSA C22.2 No.46-13(R2018) – Electric Air-Heaters. The listing label adhered to the back of the appliance. A copy is shown below.

Dealer Information

Please record your dealer information here for future reference:

Dealer Name: _____

Dealer E-Mail: _____

Dealer Address: _____

Dealer Phone #: _____

ELECTRIC FIREPLACE

MODEL(HVIN) FPX GSE39
 VOLTAGE 120 V~ / 240 V ~
 FREQUENCY 60 Hz
 AMPERAGE 11.6A
 WATTS 1400 W / 2800 W

SERIAL NO: _____



WIFI MODULE
 FCC ID: 2ANDL-WBR3
 IC: 23243-WBR3
 MADE IN CHINA



Travis Industries Inc.
 12521 Harbour Reach Drive
 Mukilteo, WA 98275

ELECTRIC FIREPLACE

MODEL(HVIN) FPX GSE51
 VOLTAGE 120 V~ / 240 V ~
 FREQUENCY 60 Hz
 AMPERAGE 11.6A
 WATTS 1400 W / 2800 W

SERIAL NO: _____



WIFI MODULE
 FCC ID: 2ANDL-WBR3
 IC: 23243-WBR3
 MADE IN CHINA



Travis Industries Inc.
 12521 Harbour Reach Drive
 Mukilteo, WA 98275

ELECTRIC FIREPLACE

MODEL(HVIN) FPX 59 GSE
 VOLTAGE 120 V~ / 240 V ~
 FREQUENCY 60Hz
 AMPERAGE 11.6A
 WATTS 1400 W / 2800 W

SERIAL NO: _____



WIFI MODULE
 FCC ID: 2ANDL-WBR3
 IC: 23243-WBR3
 MADE IN CHINA



Travis Industries Inc.
 12521 Harbour Reach Drive
 Mukilteo, WA 98275

ELECTRIC FIREPLACE

MODEL(HVIN) FPX GSE71
 VOLTAGE 120 V~ / 240 V ~
 FREQUENCY 60 Hz
 AMPERAGE 11.6A
 WATTS 1400 W / 2800 W

SERIAL NO: _____



WIFI MODULE
 FCC ID: 2ANDL-WBR3
 IC: 23243-WBR3
 MADE IN CHINA



Travis Industries Inc.
 12521 Harbour Reach Drive
 Mukilteo, WA 98275

<u>Overview</u>	2	<u>TV Installations above the Fireplace</u>	28
<u>Listing Details</u>	2	<u>Log and Media Installation</u>	29
<u>Installation Options</u>	7	<u>Ambient Light Kit (Optional) (SKU 94400151)</u>	30
<u>Specifications</u>	7	<u>Before You Begin</u>	31
<u>Packing List</u>	9	<u>Normal Operating Sounds</u>	31
<u>Recommended Installation Procedure</u>	10	<u>Location of Controls</u>	32
<u>Recommended Specialty Tools</u>	10	<u>Manual Control Operation</u>	33
<u>FPX GS E Dimensions - Single Sided Configurations</u>	11	On/Off	33
<u>FPX GS E Dimensions -</u>	13	Wi-Fi On/Off.....	33
<u>Minimum Framing Dimensions – Single Sided</u> <u>configuration</u>	15	Standby.....	33
<u>Minimum Framing Dimensions – Bay configuration</u>	16	Heat Mode	33
<u>Minimum Framing Dimensions – Left Corner</u> <u>configurations</u>	17	Preset Mode	33
<u>Minimum Framing Dimensions – Right Corner</u> <u>configuration</u>	18	<u>Remote Control Operation</u>	34
<u>Hearth Requirements</u>	19	How to Create Your Own Preset Fire Mode.....	34
<u>Electrical Connection</u>	20	<u>App Control</u>	36
Power Cord Installations (120v Only).....	21	AUTOMATIC APP INSTALLATION AND SETUP.....	36
<u>Installation</u>	22	MANUAL APP INSTALLATION AND SETUP	39
Preparing the Appliance.....	22	Advanced Wi-Fi Router Guidance	44
Installing the Appliance into the Framed Chase.....	22	<u>Yearly Service Procedure</u>	45
Installing the Appliance onto a Finished Wall.....	23	<u>Glass Cleaning</u>	45
<u>Fireplace Configurations</u>	26	<u>Troubleshooting</u>	46
<u>Facing & Mantel Requirements</u>	27	<u>Replacement Parts List</u>	47
Facing Requirements.....	27	<u>Wiring Diagram – FPX GSE 39 & 51</u>	50
Mantel Requirements.....	27	<u>Wiring Diagram – FPX GSE 59 & 71</u>	52

Safety Warnings

Before installation, check that all parts included are undamaged. If the appliance is damaged, check with the dealer before installation and operation. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

CAUTION: In order to avoid a hazard due to the inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off.

- **DO NOT** use the appliance outdoors.
 - **DO NOT** use the appliance in the immediate surroundings of a bath, a shower, or a swimming pool.
 - **DO NOT** leave the appliance unattended during use.
 - **DO NOT** run the main electrical cable under carpet, rugs, etc.
 - **DO NOT** locate the appliance immediately below a fixed socket outlet or connection box.
 - **DO NOT** install the appliance using an extension cord.
 - **DO NOT** install the appliance in a preexisting fireplace with open flue.
 - **DO NOT** insert any objects into the appliance.
 - **DO NOT** operate the appliance near flammable materials or fire.
 - **DO NOT** clean the appliance with abrasive cleaners.
 - **DO NOT** use this fireplace in rooms that have explosive gas in them (for example gasoline or propane), or if you are using solvents, glue, aerosol spray, or in flammable paints, as these may catch fire.
 - **DO NOT** use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
-
- **DO** Turn off power to the appliance when not in use or before cleaning and maintenance.
 - **DO** keep the appliance at least 3' away from furniture, curtains, or other combustible material when in use.
 - **DO** ensure the plug remains easily accessible after installation of the appliance.
 - **DO** use this appliance on a horizontal and stable surface.

CAUTION: Some parts of the appliance can become very hot and cause burns. Do not leave the appliance in operation with unsupervised children or vulnerable individuals.

NOTE: A dedicated, properly fused 13 Amp circuit is required, rated for the appropriate voltage (120V or 240V). An isolation switch should also be incorporated in cases where the product plug is inaccessible after installation.

NOTE: This appliance must only be used with a properly grounded circuit.

WARNING: The installation of this appliance must comply with local building codes and other applicable regulations to reduce the risk of fire, electric shock, and injury to persons. Check with the local authority having jurisdiction for any additional requirements in your area.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, always use a licensed electrician.

WARNING: In order to avoid overheating, do not cover the heater or air vents located on the appliance or obstruct the air circulation around the appliance.




WARNING! DO NOT COVER

Safety Warnings (continued)

- **Read all instructions before installing or using this heater.**
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, etc., and curtains at least 3 feet (1M) from the front of the heater.
- Extreme caution is necessary when any heater is used by or near children or individuals unable to move without the assistance of others and whenever the heater is left operating and unattended.
- Do not operate any heater after it malfunctions. Disconnect power at the service panel and have the heater inspected by a reputable electrician before returning it to service.
- To disconnect the heater, turn the controls to off, and turn off the power to the heater circuit at the main disconnect panel.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire, or damage to the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner.
- This heater has hot, arching, or sparking parts inside. Do not use the appliance in areas where gasoline, paint, or flammable vapors or liquids are used or stored.
- Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- This heater may include an audible or visual alarm to warn that parts of the heater are getting excessively hot. If the alarm sounds (or illuminates), immediately turn the heater off and inspect for any objects on or adjacent to the heater that may have blocked the airflow or otherwise caused high temperatures to have occurred. **DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING (OR ILLUMINATING).**
- This heater is for use on 120 volts. The cord has a plug as shown in (A) below. An adapter as shown in (C) is available for connecting three-blade grounding-type plugs to two-slot receptacles. The Green grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

NOTE: Adaptors are NOT for use in Canada.

Grounding methods

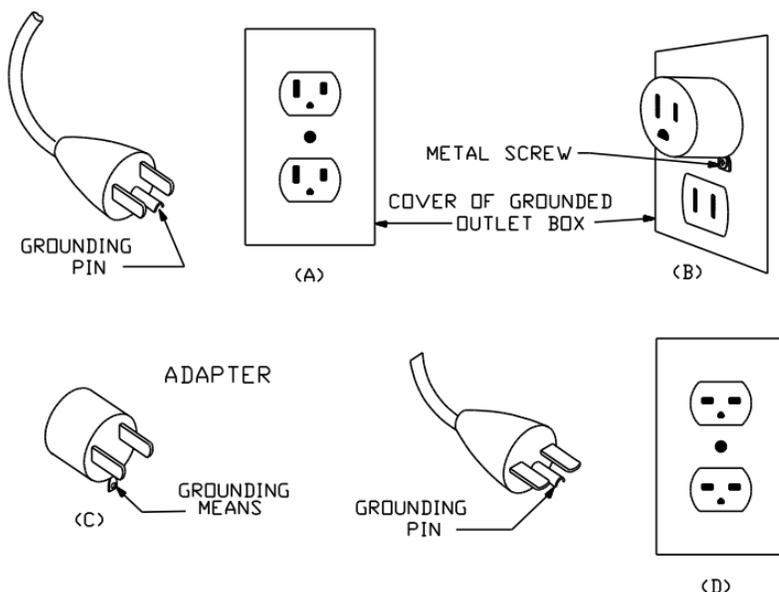

Safety Warnings (continued)

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

IC warning

This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance 20cm between the radiator & your body.

- **SAVE THESE INSTRUCTIONS**



Proposition 65 Warning: This product can expose you to chemicals including Lead and Lead Compounds, which are known to the State of California to cause cancer, and BBP and DEHP, which are known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



WARNING



Read this entire manual before proceeding with the installation.

Installation Options

- Residential or Commercial Installations
- Raised or Floor Placement
- Can be installed as a Single Sided, Bay, Left Corner or Right Corner Fireplace
- Optional LED ambient lighting kit (sku# 94400151)

Specifications

FIREPLACE XTRORDINAIR - 39 GREENSMART ELECTRIC FIREPLACE	
Weight (lbs.)	92
Dimensions (inches)	H 21-3/4" x W 39-1/2"- 40-1/2" x D 11-5/8"
Supply Voltage	120V AC 60Hz or 240V AC 60Hz
Max. Power Consumption (watts)	If wired to 120v AC - 1400 If wired to 240v AC - 2800
Power for Flame Effect (watts)	30

HEAT OUTPUT	LOW VALUE	HIGH VALUE
Heat Output if wired 120v (watts)	700	1400
Heat Output if wired 240v (watts)	1400	2800

FIREPLACE XTRORDINAIR - 51 GREENSMART ELECTRIC FIREPLACE	
Weight (lbs.)	114
Dimensions (inches)	H 21-3/4" x W 51-1/4"- 52-1/4" x D 11-5/8"
Supply Voltage	120V AC 60Hz or 240V AC 60Hz
Max. Power Consumption (watts)	If wired to 120v AC - 1400 If wired to 240v AC - 2800
Power for Flame Effect (watts)	40

HEAT OUTPUT	LOW VALUE	HIGH VALUE
Heat Output if wired 120v (watts)	700	1400
Heat Output if wired 240v (watts)	1400	2800


FIREPLACE XTRORDINAIR - 59 GREENSMART ELECTRIC FIREPLACE	
Weight (lbs.)	132
Dimensions (inches)	H 21-3/4" x W 59-1/4" – 60-1/4" x D 11-5/8"
Supply Voltage	120V AC 60Hz or 240V AC 60Hz
Max. Power Consumption (watts)	If wired to 120v AC - 1400 If wired to 240v AC - 2800
Power for Flame Effect (watts)	47

HEAT OUTPUT	LOW VALUE	HIGH VALUE
Heat Output if wired 120v (watts)	700	1400
Heat Output if wired 240v (watts)	1400	2800

FIREPLACE XTRORDINAIR - 71 GREENSMART ELECTRIC FIREPLACE	
Weight (lbs.)	154
Dimensions (inches)	H 21-3/4" x W 71" - 72" x D 11-5/8"
Supply Voltage	120V AC 60Hz or 240V AC 60Hz
Max. Power Consumption (watts)	If wired to 120v AC - 1400 If wired to 240v AC - 2800
Power for Flame Effect (watts)	60

HEAT OUTPUT	LOW VALUE	HIGH VALUE
Heat Output if wired 120v (watts)	700	1400
Heat Output if wired 240v (watts)	1400	2800

Packing List

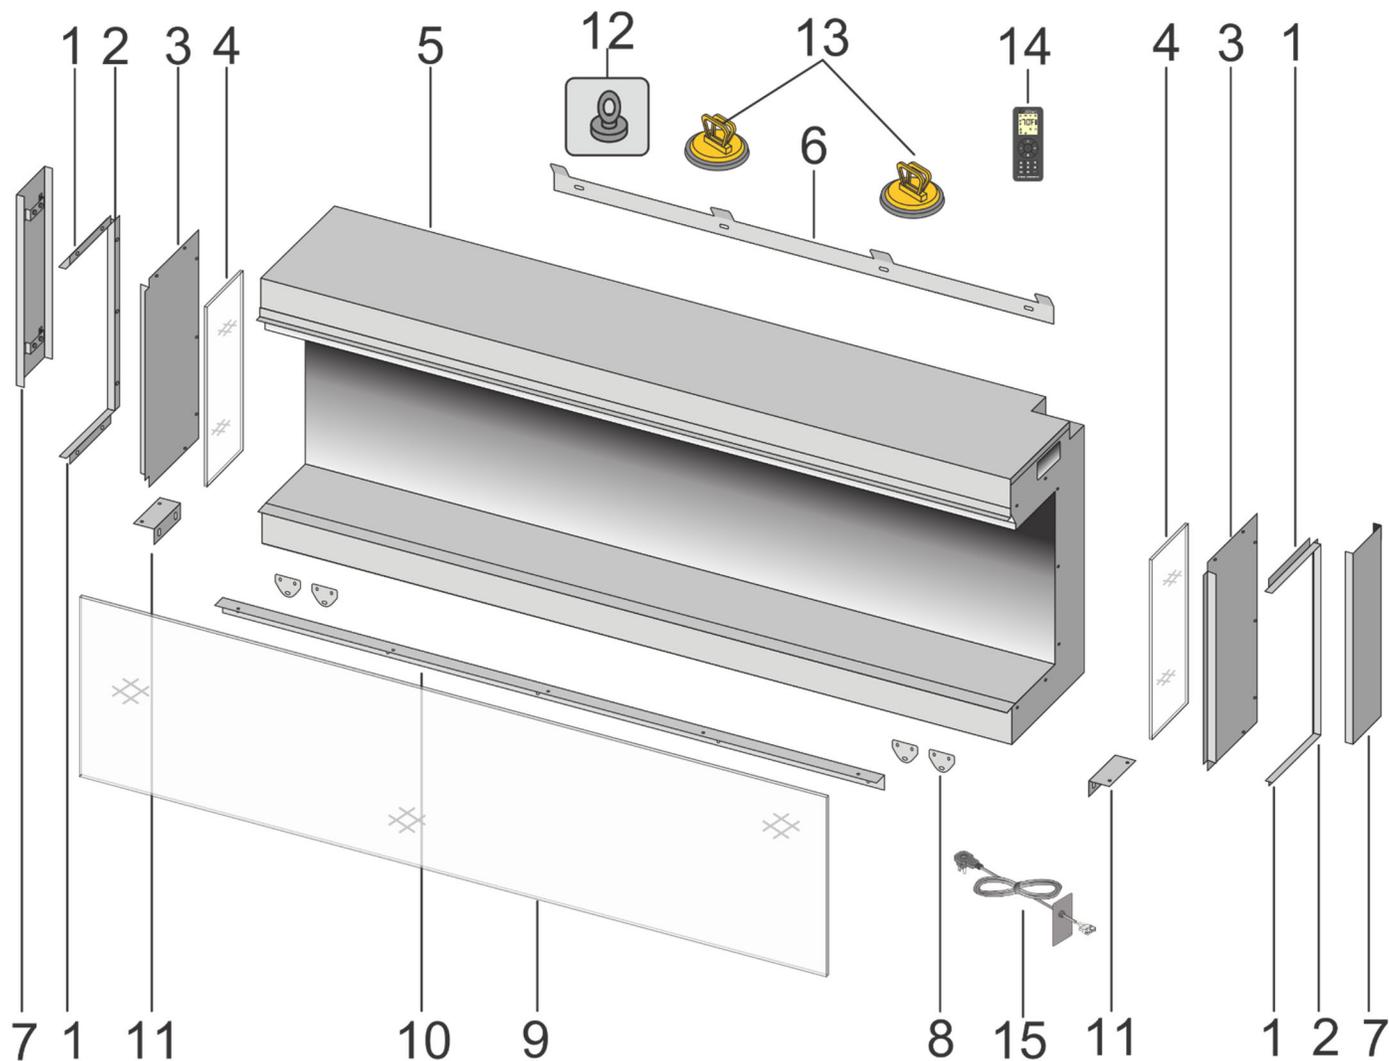

No.	DESCRIPTION	No.	DESCRIPTION
1	Side Tile Stop (top/bottom) (x4)	9	Front Glass Panel (x1)
2	Side Tile Stop (side)(x2)	10	Shelf Support Bracket (Long) (x1)
3	Side panel (x2)	11	Shelf Support Bracket (Short) (x2)
4	Side Glass Panel (x2)	12	Magnetic tool (x1)
5	FPX GreenSmart Electric Fireplace (x1)	13	Glass Suction Cup Tools (x2)
6	Wall Mounting Bracket (x1)	14	Remote handset (x1)
7	Magnetic Side Decorative Panel (x2)	15	120v Power Cord Assembly (x1)
8	Small Mounting Brackets (x4)		

Recommended Installation Procedure

1. Prepare the installation location. If placing the fireplace on a platform, build the platform, making sure to accommodate the weight of the fireplace. Verify the platform is level and plumb.
2. If installing the fireplace in a left corner, right corner or bay configuration prepare the fireplace for that configuration now (see page 26 for details).
3. Run electrical supply to the location of the fireplace (see electrical requirements section for details).
4. Install the fireplace into the framed chase or onto a finished wall. Attach the nailing flanges to the framing to support the fireplace (see page 21 and 23 for details).
5. Connect the electrical supply wires to the fireplace.


NOTE: If using the optional LED Ambient Light Kit it **MUST BE CONNECTED AT THIS TIME**. After the fireplace is installed and finish material is applied around the appliance, the LED Ambient Light Kit cannot be added without removing the fireplace from the framed chase.

6. Install the drywall and/or facing (if applicable).
7. Install the hearth (if applicable). Install the mantel (if applicable).
8. Finalize the installation (see page 29).

Recommended Specialty Tools

- Large Level (or Laser Level)
- Outlet tester and/or multi-meter


FPX GS E Dimensions - Single Sided Configurations

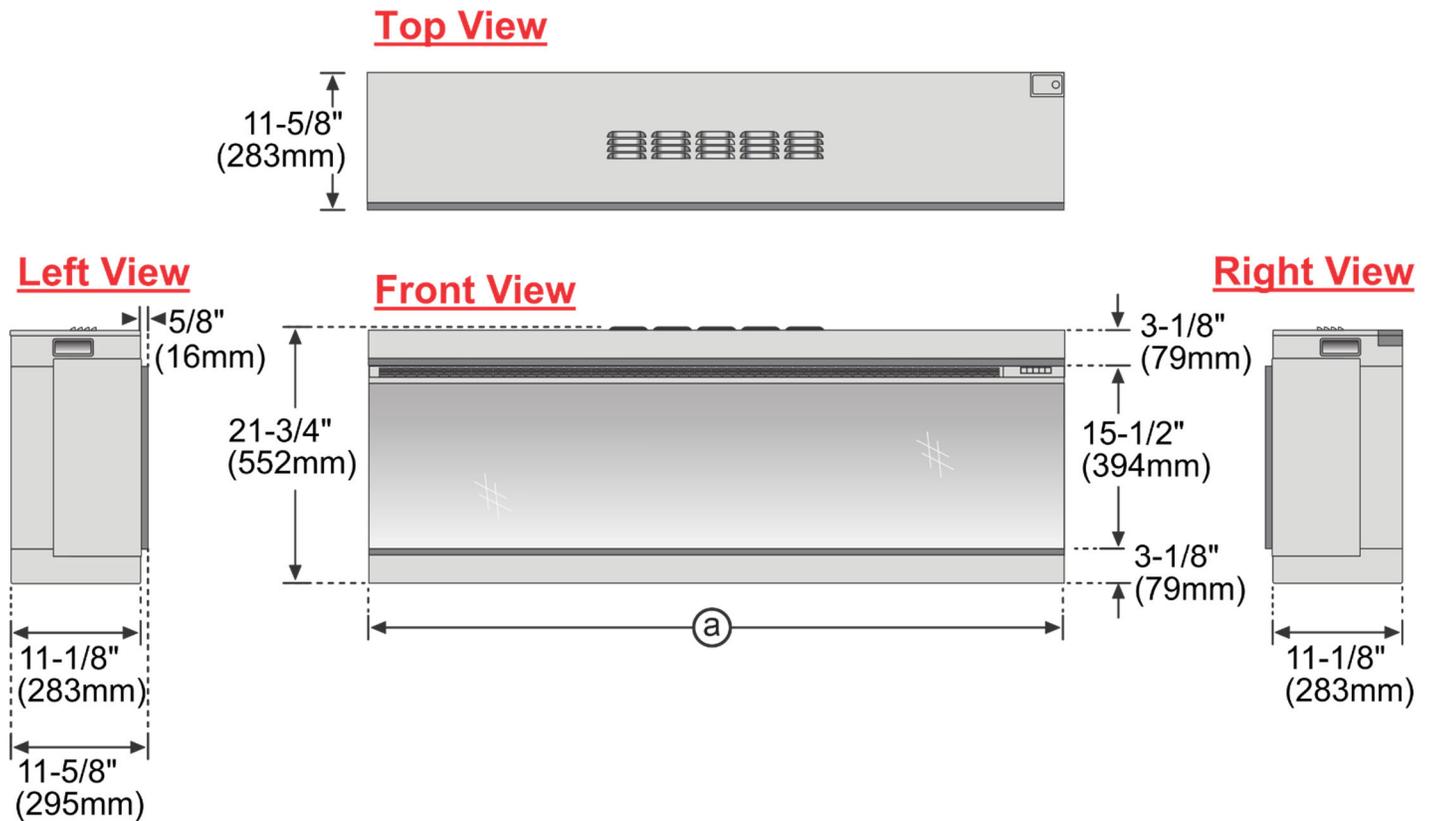


Appliance	Width Dimension (a)
FPX 39 GSE	39-1/2" (1003mm)
FPX 51 GSE	51-1/4" (1302mm)
FPX 59 GSE	59-1/4" (1505mm)
FPX 71 GSE	71" (1803mm)

Dimensions – Bay Configuration


Top View

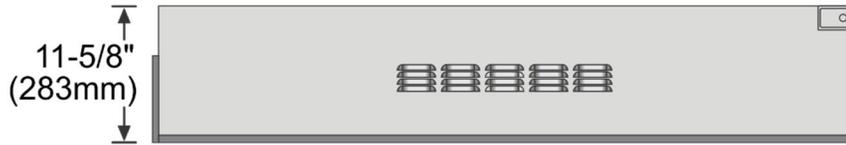


Left View

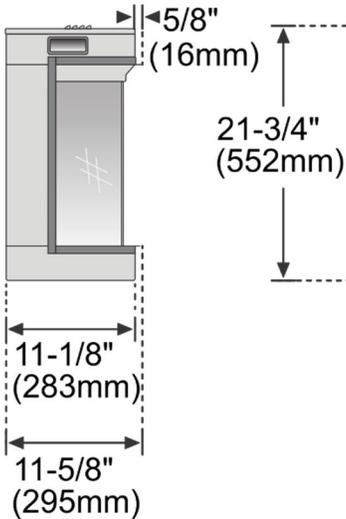

Front View

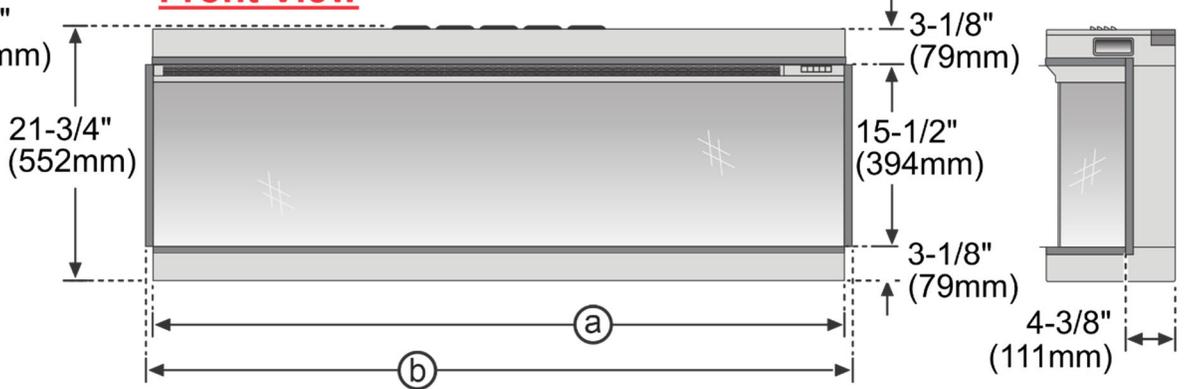


Right View

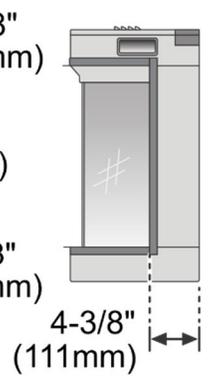


Appliance	Width Dimension (a)	Width Dimension (b)
FPX 39 GSE	39-1/2" (1003mm)	40-1/2" (1030mm)
FPX 51 GSE	51-1/4" (1302mm)	52-1/4" (1327mm)
FPX 59 GSE	59-1/4" (1505mm)	60-1/4" (1530mm)
FPX 71 GSE	71" (1803mm)	72" (1830mm)

FPX GS E Dimensions - Dimensions – Left Corner Configuration



Top View

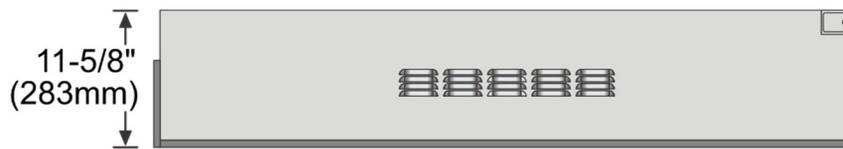


Left View

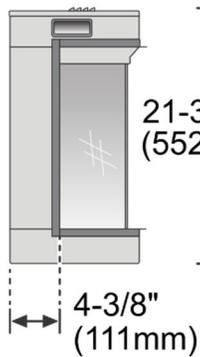

Front View

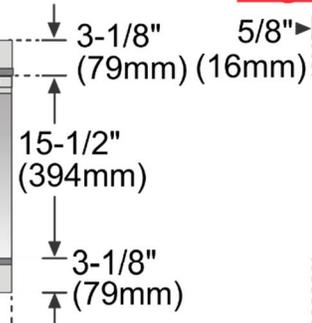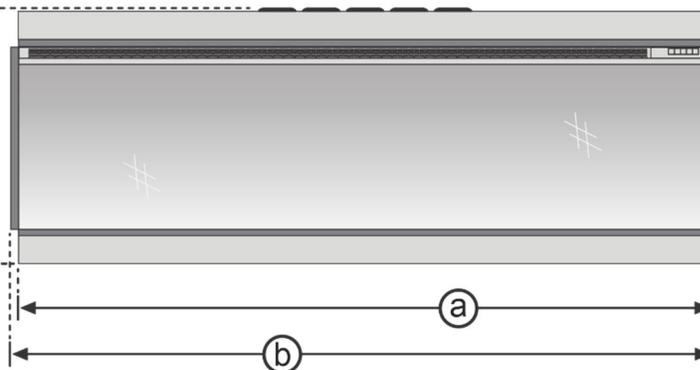


Right View

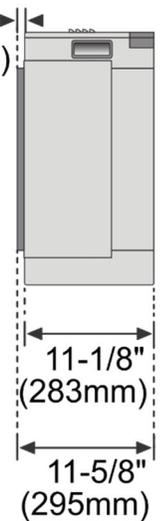


Appliance	Width Dimension (a)	Width Dimension (b)
FPX 39 GSE	39-1/2" (1003mm)	40" (1015mm)
FPX 51 GSE	51-1/4" (1302mm)	51-3/4" (1315mm)
FPX 59 GSE	59-1/4" (1505mm)	59-3/4" (1518mm)
FPX 71 GSE	71" (1803mm)	71-1/2" (1815mm)

Dimensions – Right Corner Configuration


Top View

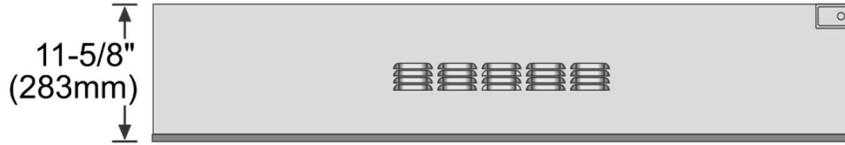


Left View

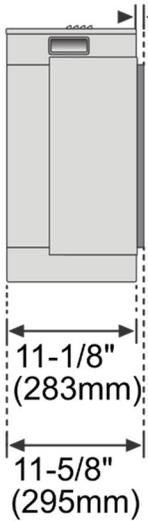

Front View

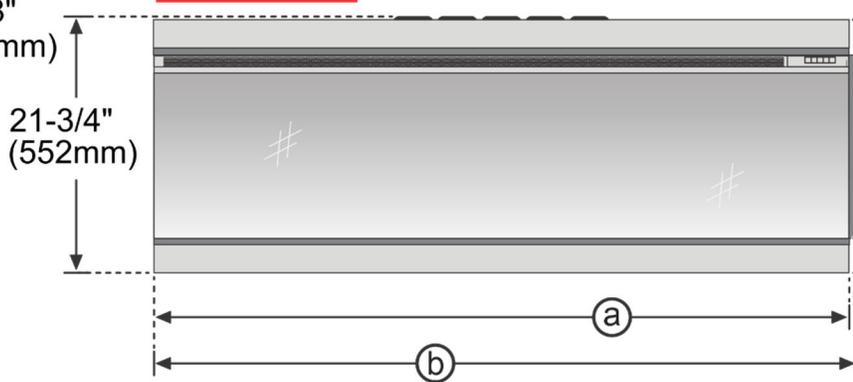


Right View

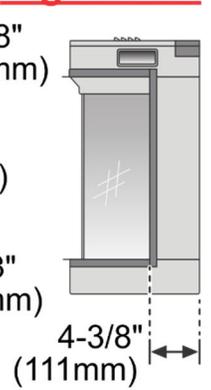

Appliance	Width Dimension (a)	Width Dimension (b)
FPX 39 GSE	39-1/2" (1003mm)	40" (1015mm)
FPX 51 GSE	51-1/4" (1302mm)	51-3/4" (1315mm)
FPX 59 GSE	59-1/4" (1505mm)	59-3/4" (1518mm)
FPX 71 GSE	71" (1803mm)	71-1/2" (1815mm)

Minimum Framing Dimensions – Single Sided configuration

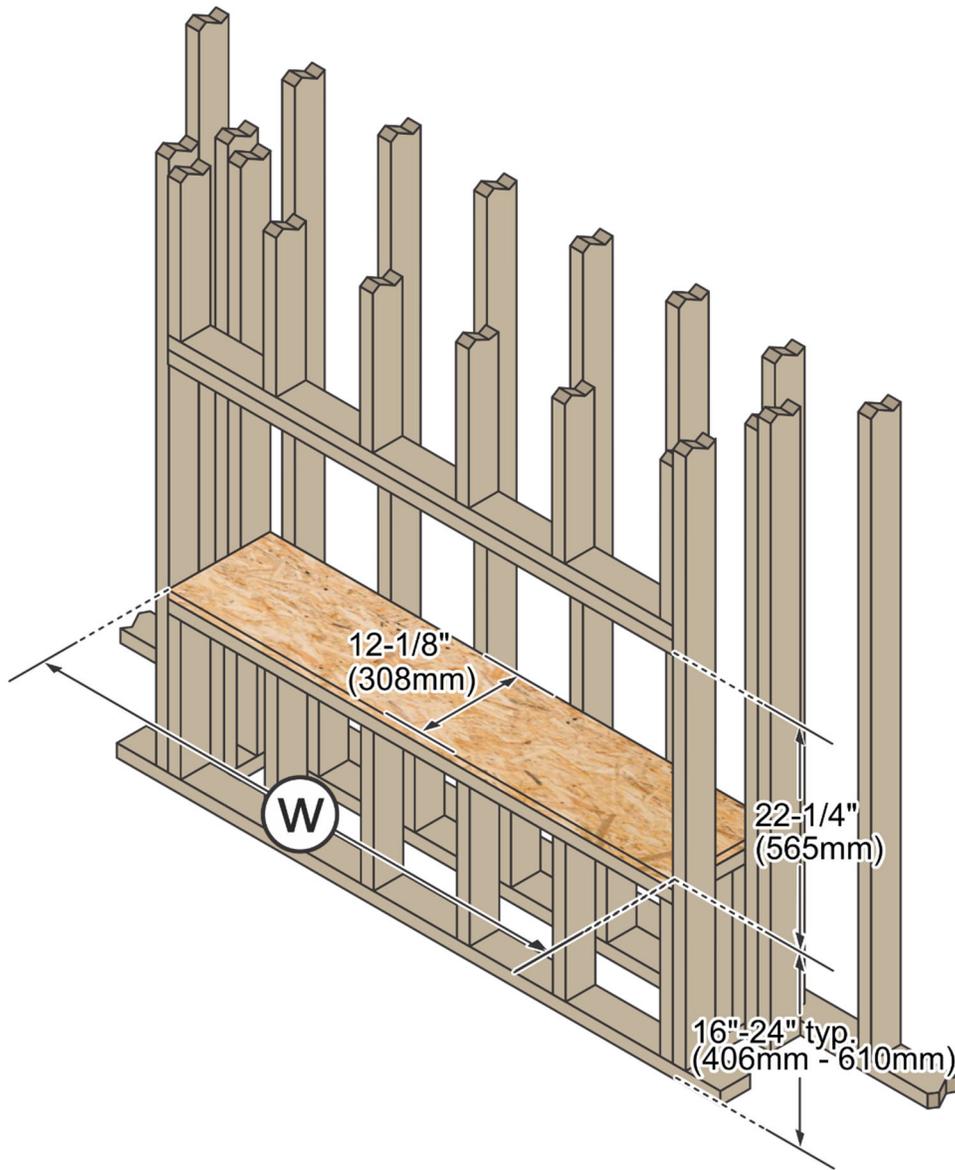


Appliance	Width Dimension (w)
FPX 39 GSE	40" (1016mm)
FPX 51 GSE	51-3/4" (1314mm)
FPX 59 GSE	59-3/4" (1518mm)
FPX 71 GSE	71-1/2" (1816mm)

IMPORTANT

If using the optional Ambient Light Kit it must be connected to the fireplace before covering the chase (see pg. 30 for details).

Minimum Framing Dimensions – Bay configuration

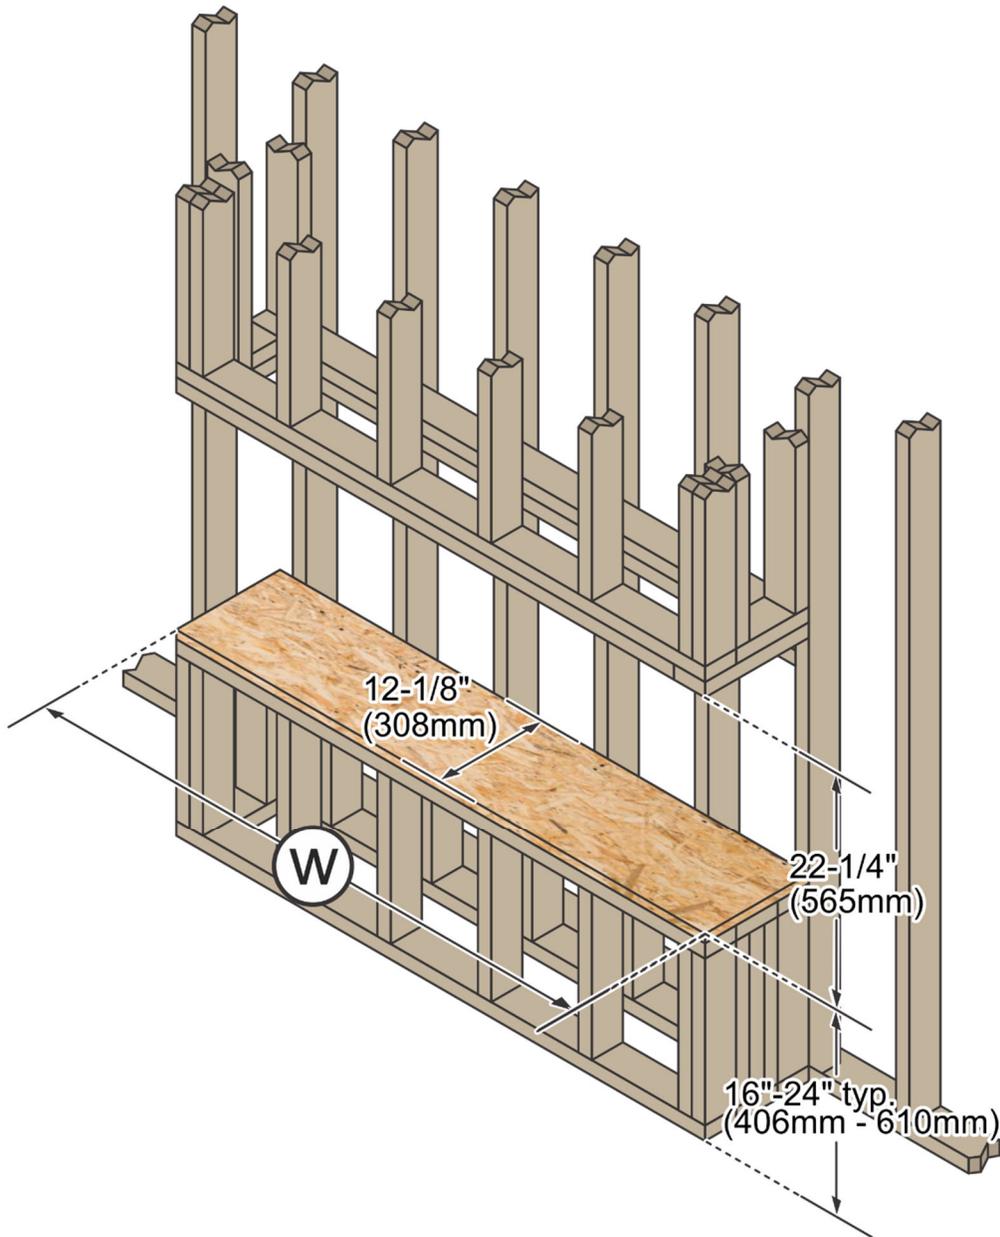


Appliance	Width Dimension (w)
FPX 39 GSE	39-1/2" (1003mm)
FPX 51 GSE	51-1/4" (1302mm)
FPX 59 GSE	59-1/4" (1505mm)
FPX 71 GSE	71" (1803mm)

IMPORTANT

If using the optional Ambient Light Kit it must be connected to the fireplace before covering the chase (see pg. 30 for details).

Minimum Framing Dimensions – Left Corner configurations

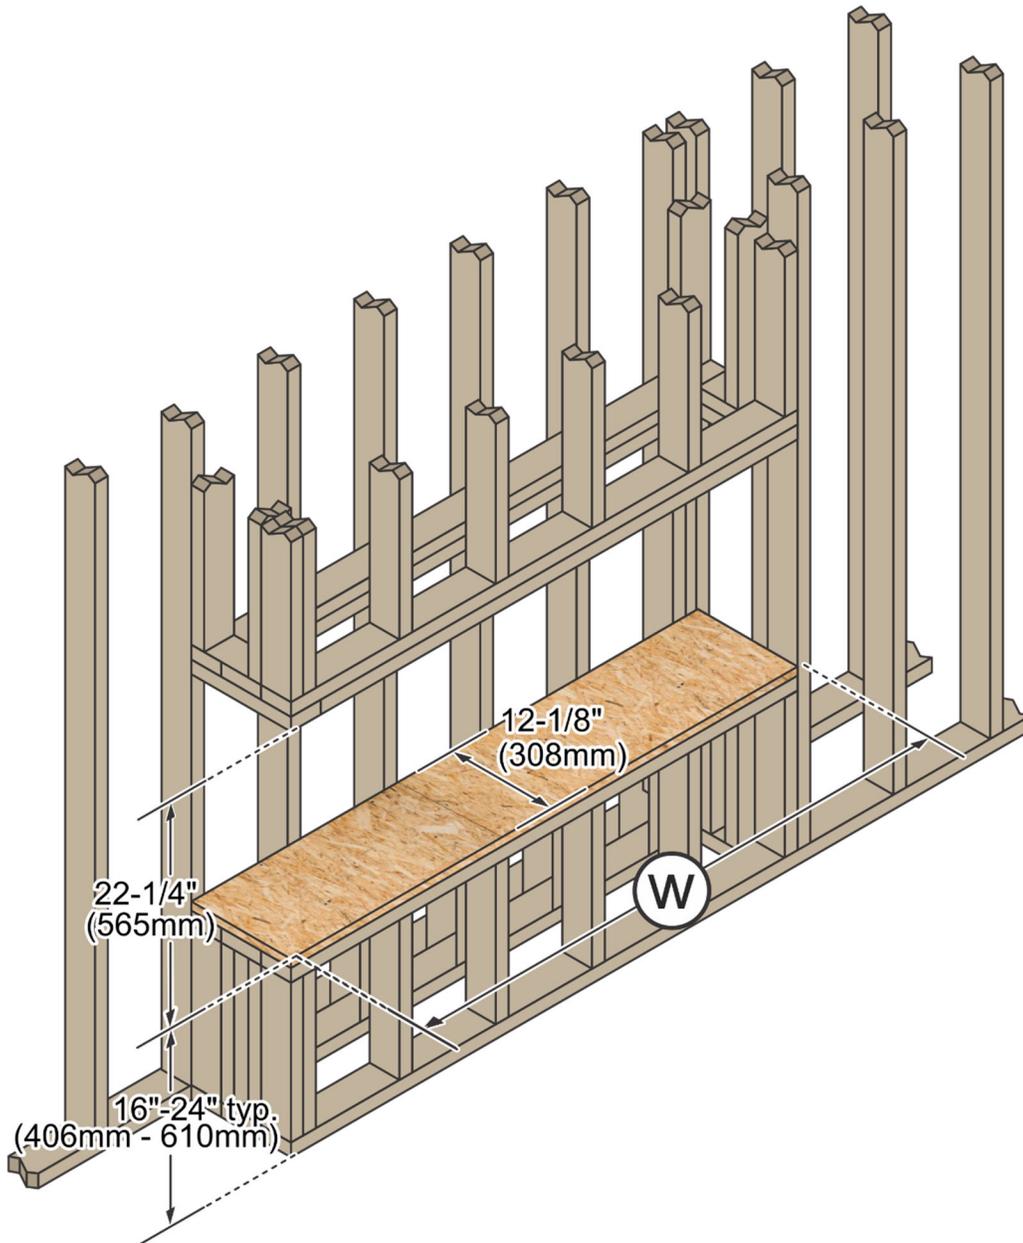


Appliance	Width Dimension (w)
FPX 39 GSE	39-3/4" (1010mm)
FPX 51 GSE	51-1/2" (1308mm)
FPX 59 GSE	59-1/2" (1511mm)
FPX 71 GSE	71-1/4" (1810mm)

IMPORTANT

If using the optional Ambient Light Kit it must be connected to the fireplace before covering the chase (see pg. 30 for details).

Minimum Framing Dimensions – Right Corner configuration

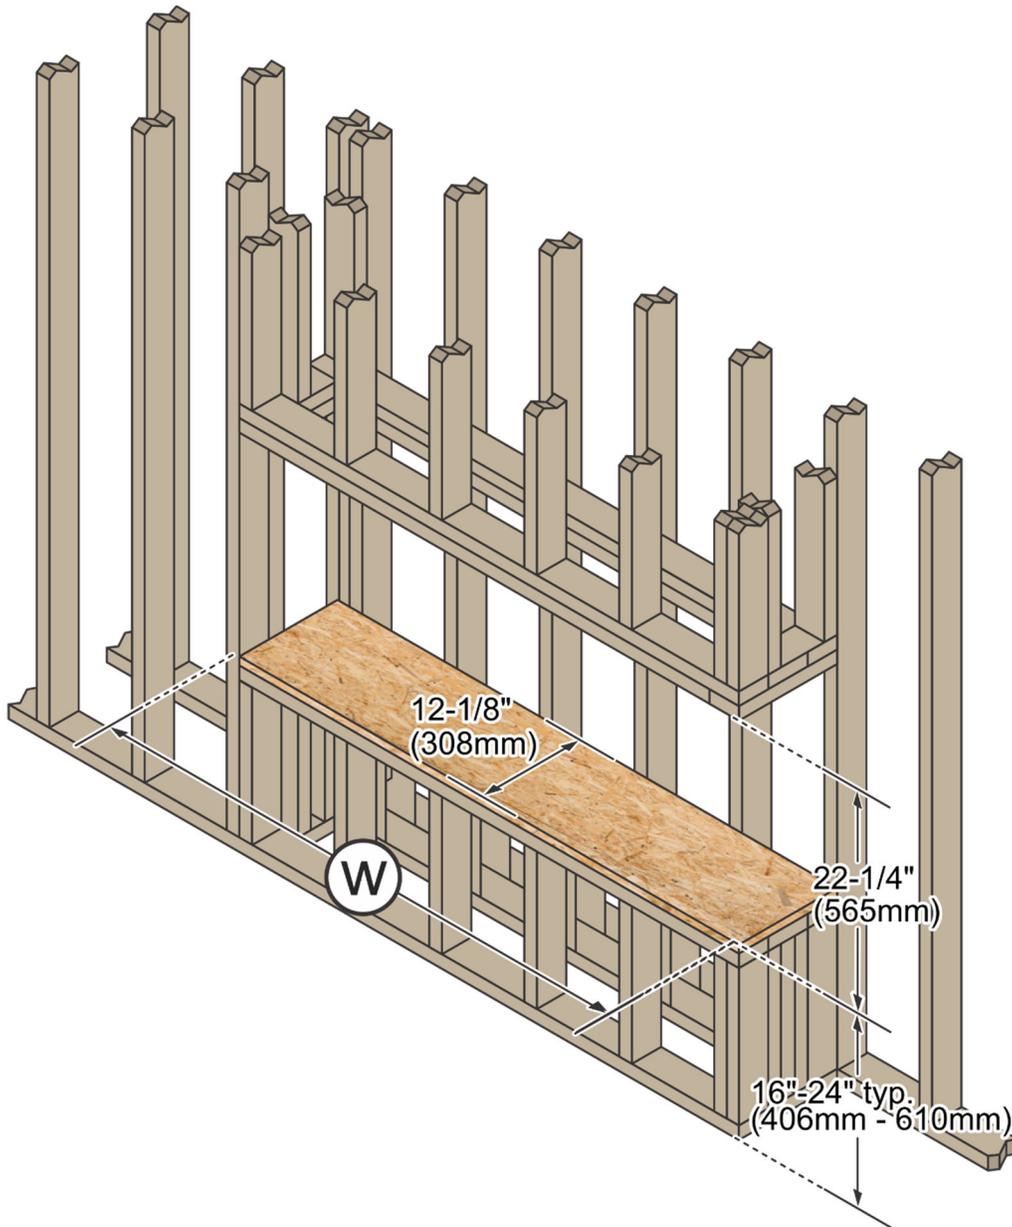


Appliance	Width Dimension (w)
FPX 39 GSE	39-3/4" (1010mm)
FPX 51 GSE	51-1/2" (1308mm)
FPX 59 GSE	59-1/2" (1511mm)
FPX 71 GSE	71-1/4" (1810mm)

IMPORTANT

If using the optional Ambient Light Kit it must be connected to the fireplace before covering the chase (see pg. 30 for details).

Hearth Requirements

A combustible or noncombustible hearth may be installed in front of the fireplace anywhere up to the edge of the fireplace opening. The hearth finish material must not extend above the fireplace opening or it will interfere with the installation and removal of the glass.

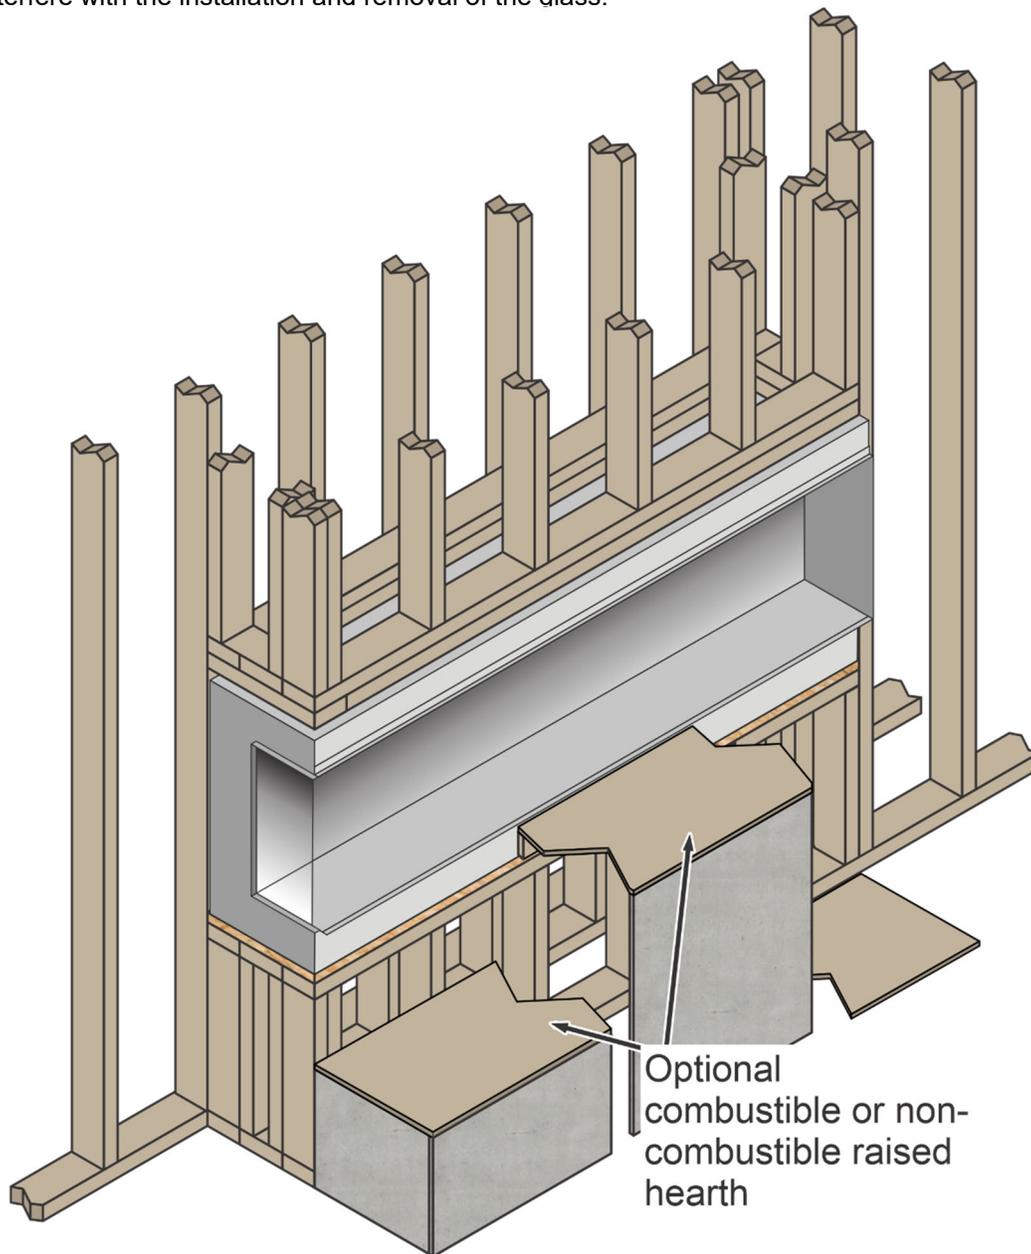

Optional
combustible or non-
combustible raised
hearth

Electrical Connection

- The electrical line to the fireplace must be installed by a qualified installer and must meet all local codes.
- Make sure the household breaker is shut off prior to working on any electrical lines.
- The appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.1.
- The electrical supply must meet the minimum requirements below:
 - **120v Installation:** 14 gauge, and supply 120 Volts, 60 Hz (typical max amps: 13).
 - **240v Installation:** 14 gauge, and supply 240 Volts, 60 Hz (typical max amps: 11.6).
- Route the electrical supply wires through the appliance cover plate and attach them to the terminal block as shown below.






CAUTION: Label all wires prior to disconnection when servicing the appliance. Wiring errors can cause improper and dangerous operation.

240V INSTALLATIONS ONLY

If installing using 240v, there is a switch on the right-front corner of the firebox ceiling that must be switched from 120v to 240v before supplying power to the appliance.

This appliance is intended to be installed in a framed cavity with the electrical supply being hardwired to the appliance. An optional electrical cord is included with the appliance and can be used if appropriate for your installation.


NOTE: If using the included power cord make sure that the outlet is "readily accessible", grounded, and meets all other code requirements. We recommend checking with the local authority having jurisdiction while planning the installation.

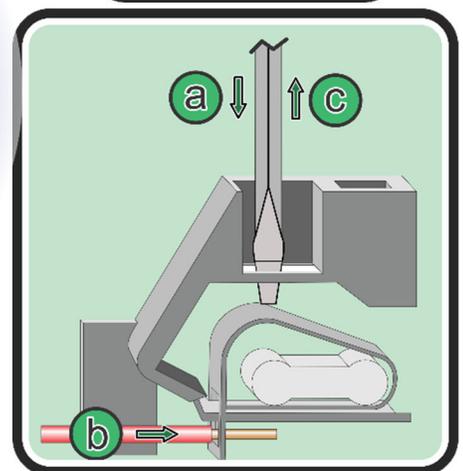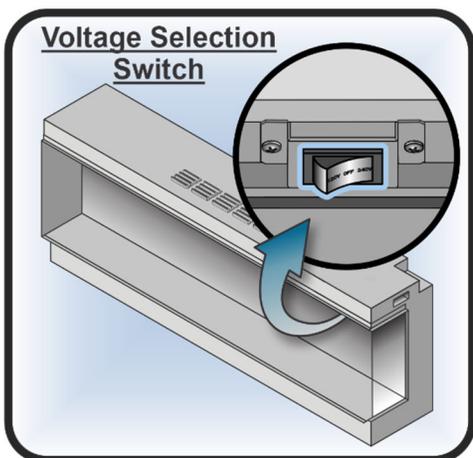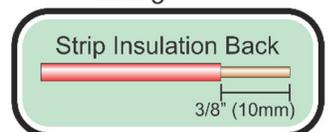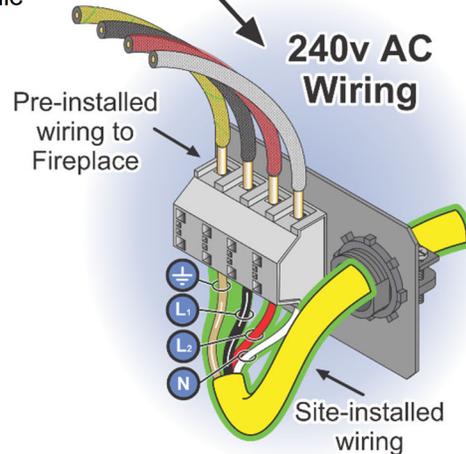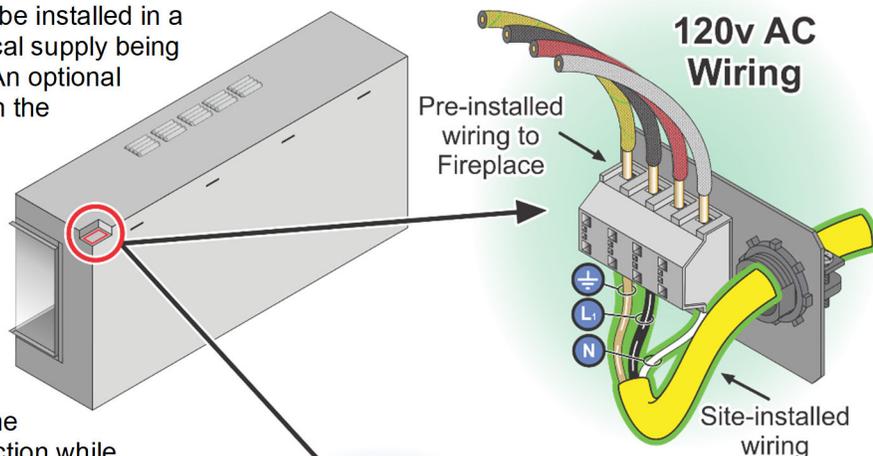

Power Cord Installations (120v Only)

To install the optional 120v cord follow the steps below

- On the right-rear corner of the fireplace locate the junction box cover plate. Use a Philips head screwdriver to remove the (2) screws that secure the cover to the fireplace (set screws aside for reinstallation).
- Gently lift the plate to gain access to the electrical quick-connect fitting below. Disconnect the fitting from the fireplace wiring harness as shown.
- Connect the power cord assembly with the replacement cover plate to the fireplace wire harness.
- Reinstall the screws removed in the first step, to secure the cover plate and cord to the fireplace.

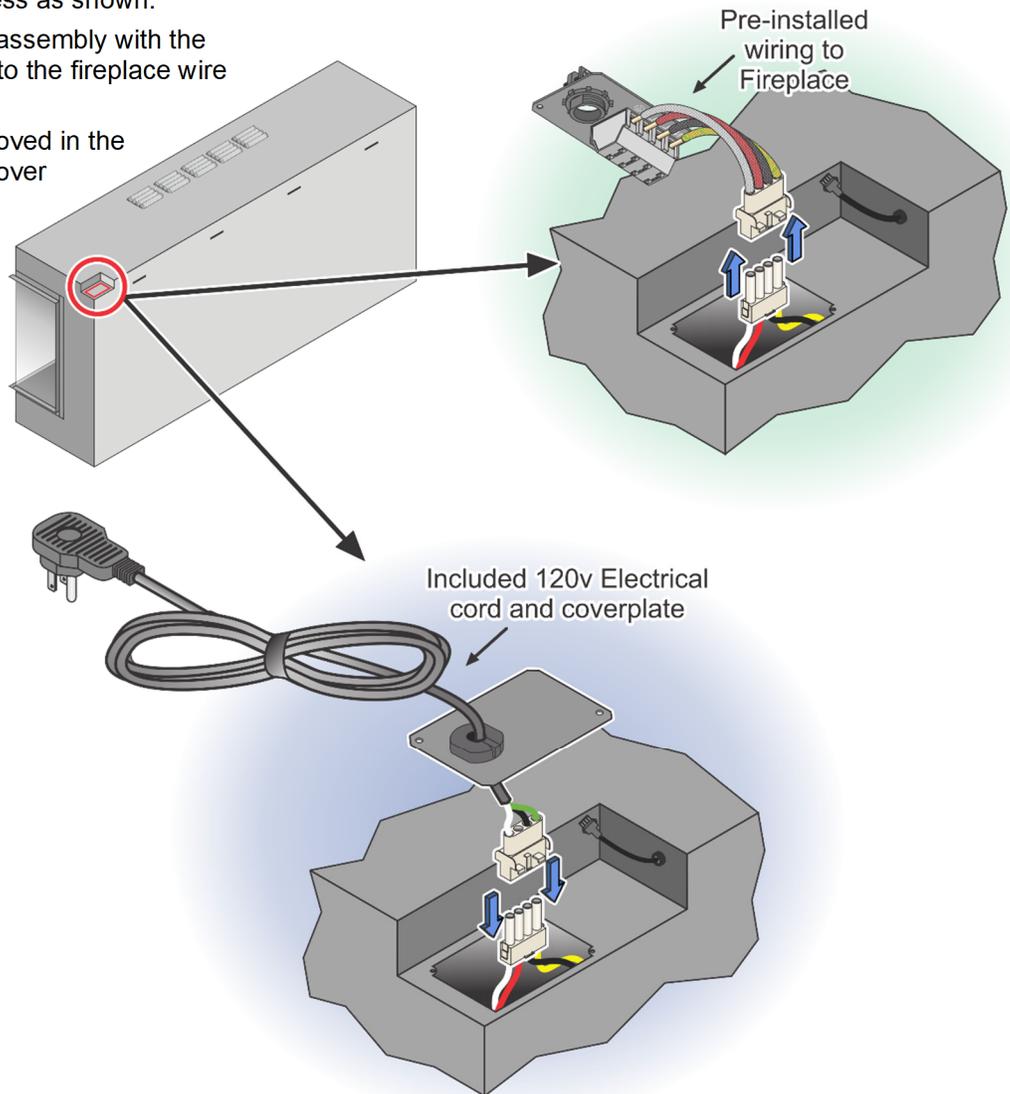

Installation

Before installation, check that all parts are included and undamaged. If the appliance is damaged, check with the dealer before installation and operation. If the main power supply lead is damaged in any way, it must be replaced by a suitable equivalent approved by the manufacturer.

The main box contains the appliance, (2) suction cup tools, and (1) magnet tool (to remove the glass retaining bar). Packed with the appliance (behind the glass panel) are additional boxes each with a contents list printed on the outside of the box.


Preparing the Appliance

This fireplace is designed to allow installations into a framed “chase” (cavity) or installed directly onto an existing finished wall. If you are installing the fireplace on a finished wall, it is imperative that the weight of the appliance is taken into account when choosing the proper fasteners. Due to the weight of the fireplace, we do not recommend using only sheet rock anchors (aka Molly bolts) to suspend the fireplace. It is important that the installer devise a way to secure the fireplace to the framing of the wall, add blocking to the wall to ensure the wall is capable of supporting the appliance weight, or selecting a location where the fasteners can be attached directly to the walls framing members.

Installing the Appliance into the Framed Chase


Follow the steps below to install the appliance into the framed cavity.

- a) Attach the (4) (2 top and 2 bottom) included nailing brackets to the front of the fireplace as shown below.
- b) Insert the fireplace into the chase. Slide the fireplace back until the nailing brackets are pressed up against the front of the framing.
- c) Screw the flanges to the framing as shown below.

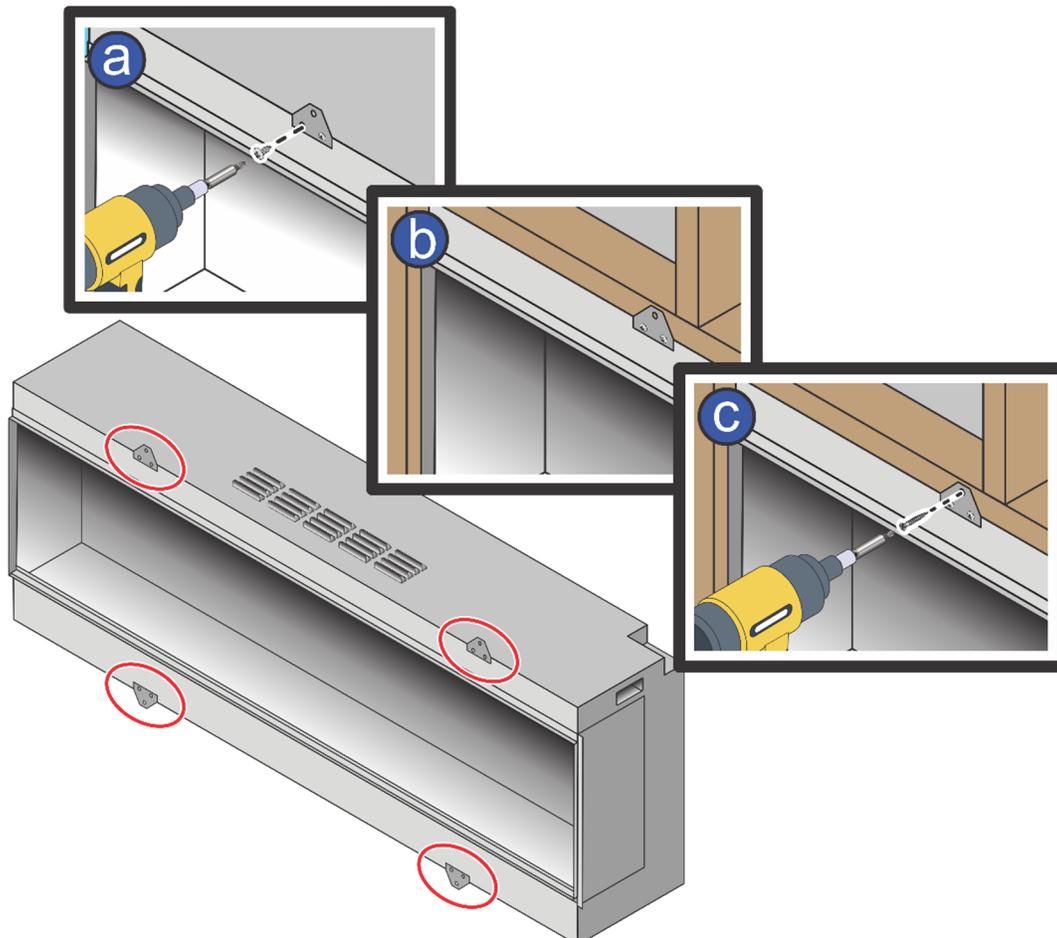

Installing the Appliance onto a Finished Wall


- (a) Remove the wall mounting bracket from the back of the fireplace. Use (2) of the included small mounting brackets to the rear of the fireplace as shown below.
- (b) Secure the wall mounting bracket in the desired location for the fireplace. Use a level and stud finder to ensure the bracket is properly secured to the framing and level.
- (c) Hang the fireplace on the rear bracket as shown below.
- (d) Secure the small mounting brackets to the wall to lock the fireplace on the wall mounting bracket.

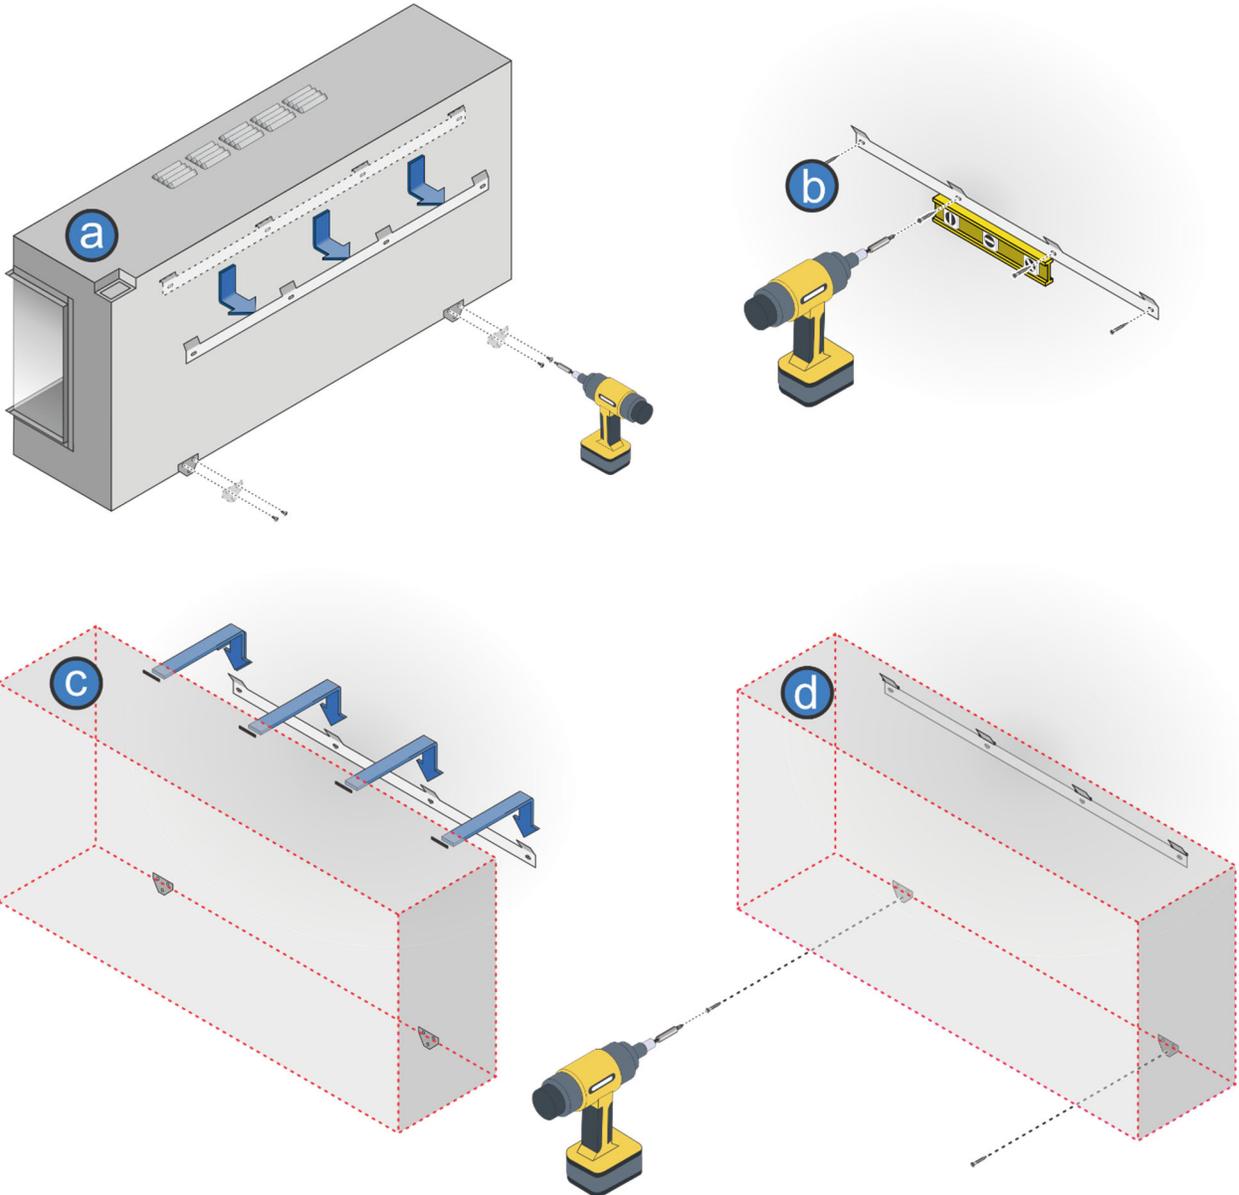


Glass Removal

To gain access to various contents required for installation, follow these steps:

- Use the included magnetic tool to lift and remove the glass retaining bar located in front of the glass panel.

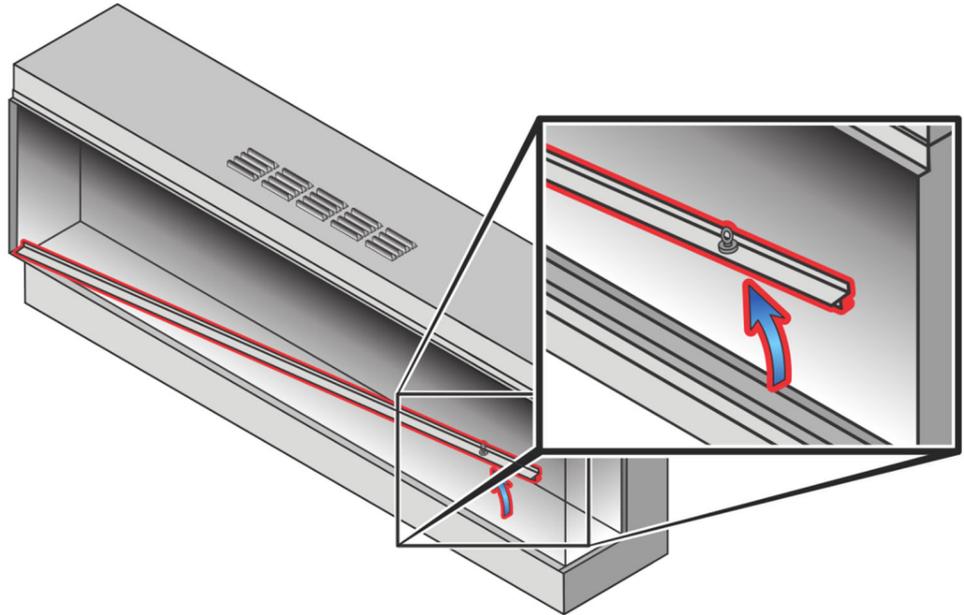


- Attach the 2 suction cup tools provided to the front glass panel. With the suction cups gently pressed against the glass panel, pivot the hinged handle to affix the suction cup to the glass. Repeat with the second suction cup.

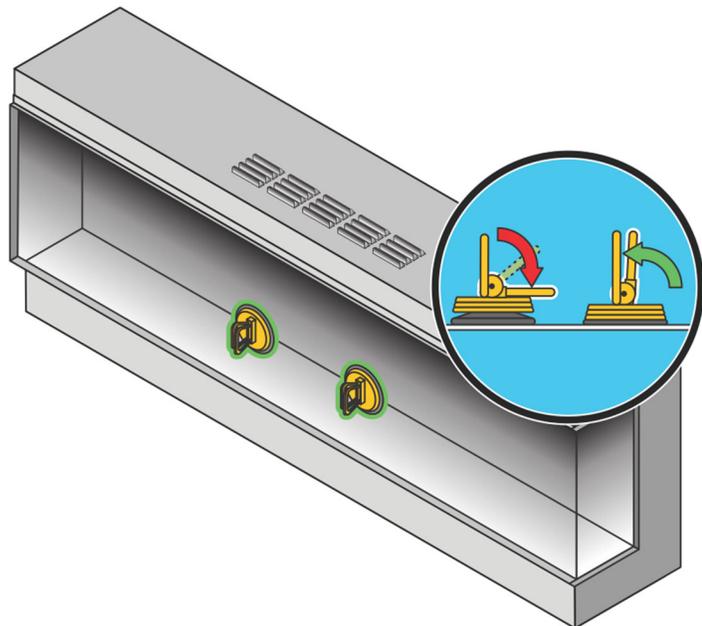

- Gently move the bottom of the glass towards you until the bottom edge can be lowered into the channel exposed in the previous step (see a & b below). Angle the top edge of the glass away from the appliance and lift the glass panel out (see c & d below). Place the glass aside in a safe location for reinstallation.

IMPORTANT NOTE:

There is a protective film on the back side of the front glass panel. Remove the film and clean the glass before reinstalling it.

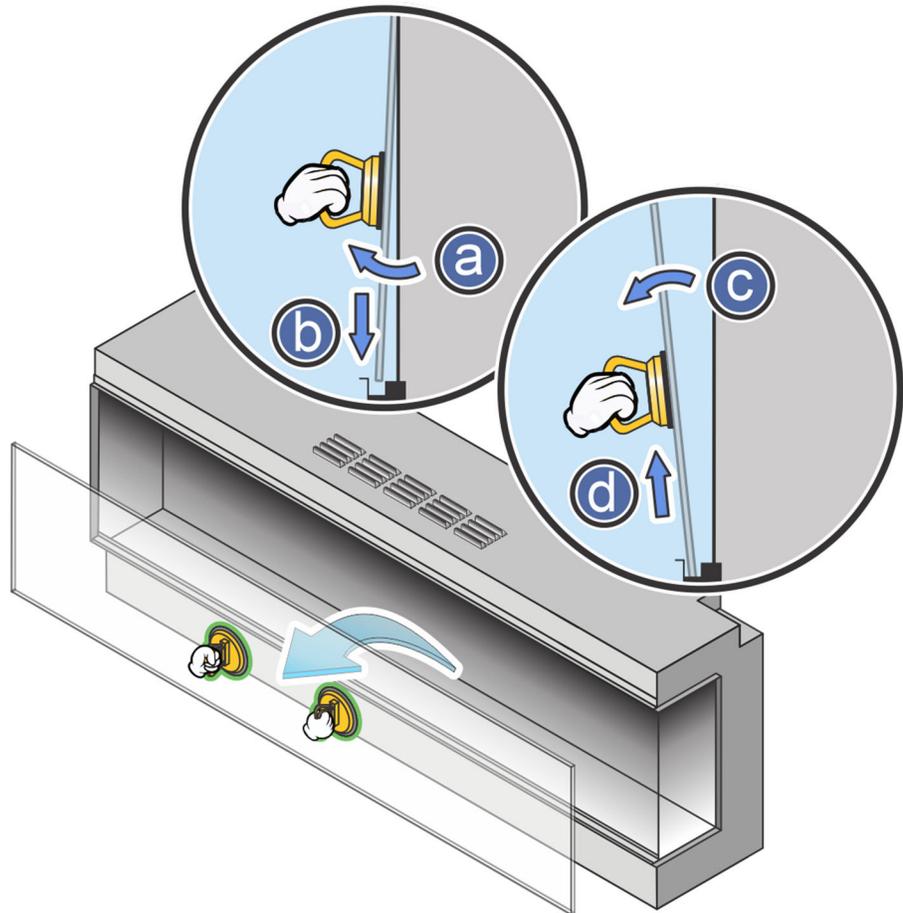

- The component boxes and cardboard inserts can now be safely removed from the appliance.

Fireplace Configurations

The appliance can be installed in one of (4) different configurations:

- Single Sided (1 front glass panel) (stock)
- Bay (1 front glass panel, 1 right side glass panel, and 1 left side glass panel)
- Left Corner (1 front glass panel and 1 left side glass panel)
- Right Corner (1 front glass panel and 1 right side glass panel)


The fireplace comes stock in the single sided configuration. All other configurations must be done at the time of installation.

Single Sided Configuration

Your appliance will arrive in a single sided configuration with metal side panels already fitted.

Left or Right Corner Configuration

For a **corner** installation, choose which side you want to feature a glass panel and remove the 6 screws that secure the metal side panel to the appliance. Carefully remove the panel and keep the screws for reinstallation. Using the removed screws, install **(2) of the top/bottom** tile stops and **(1) side tile stop** and screw them to the appliance (see "Bay Configuration" illustration on following page).

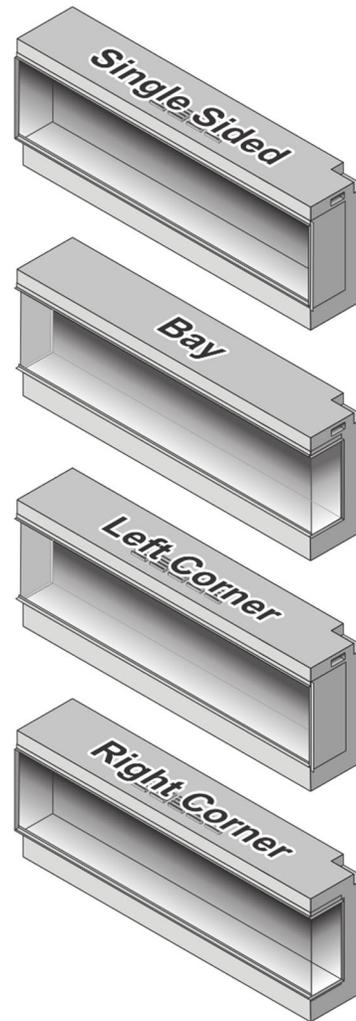


Bay Configuration

For a bay configuration, repeat the corner configuration steps on the opposite end of the appliance (see below).

Remove Plates

Replace with Tile Stops

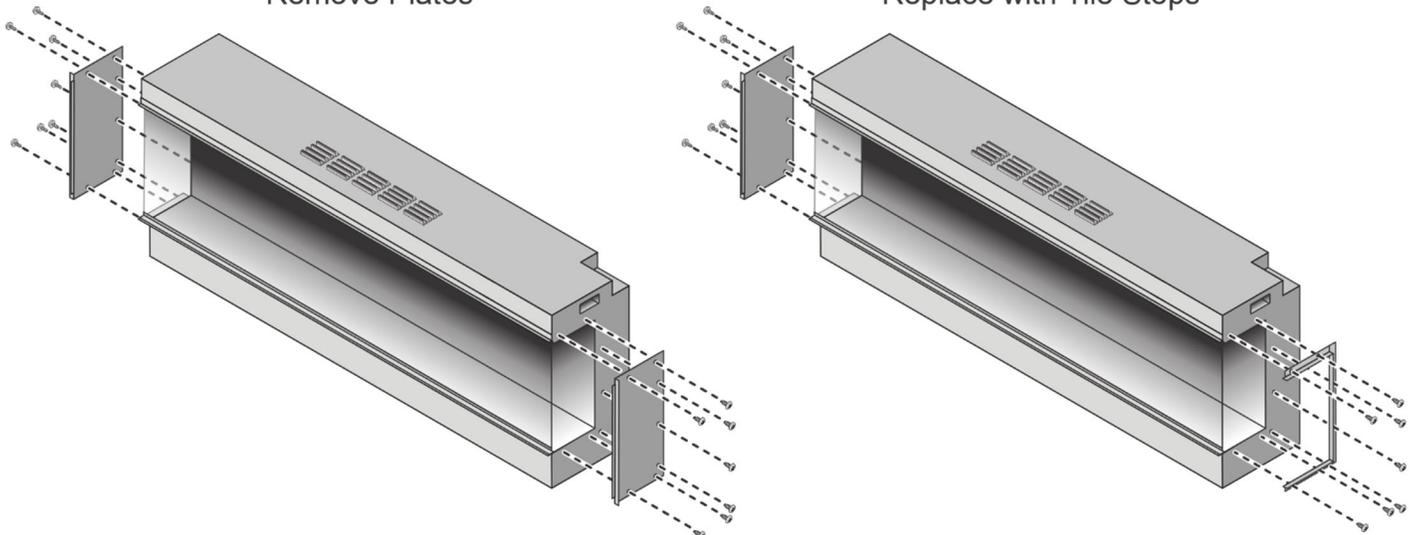

Facing & Mantel Requirements

Facing Requirements


- Drywall, tile, or other facing (combustible or non-combustible) may be placed directly on the face of the fireplace (see below).
- Facing may be placed along the perimeter of the glass opening but must not extend over it. This area must remain open to allow for glass removal and installation.
- The fireplace must not be used to support the facing. Facing must be self-supporting.
- Do not penetrate the fireplace with any fasteners.



WARNING

Do not use adhesive to secure the facing. The temperatures of the fireplace may cause adhesives to emit odors.



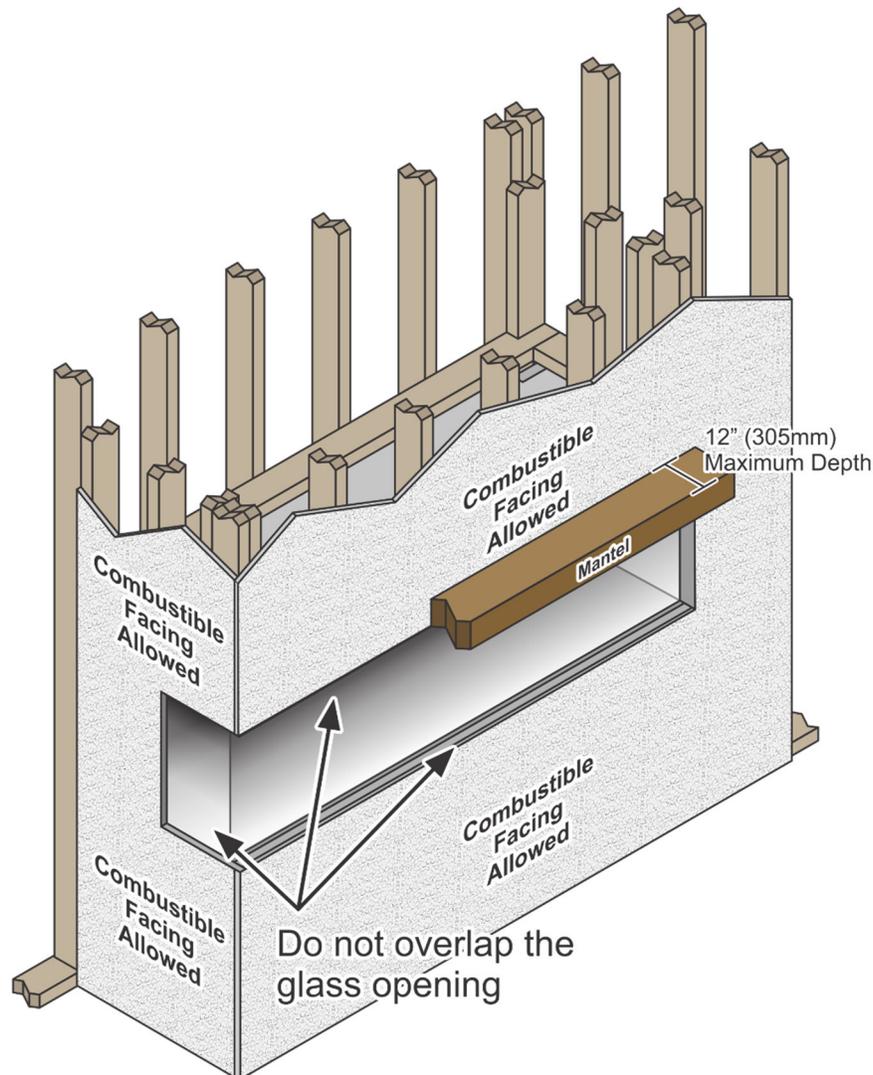

Mantel Requirements


- A mantel (combustible or non-combustible) may be installed above the fireplace. Make sure it does not overlap the glass opening.
- The maximum mantel depth is 12" (305mm).

TV Installations above the Fireplace


When installing a fireplace above this fireplace we recommend following the guidelines below.

- If a TV is flush mounted, we recommend that the bottom of the TV be installed a minimum of 1" (25mm) above the glass opening of the fireplace.
- If the TV is installed in a cavity above the fireplace, we recommend that the fireplace be installed with a minimum 1" (25mm) gap at the bottom of the TV, a 1" (25mm) gap at the top of the TV, and the TV installed with a minimum 1" gap between the back of the TV and the rear wall of the recessed cavity.
- There is no maximum depth for a recessed TV installation.
- Check with the manufacturer of the Television for any additional installation requirements when their product is installed in proximity to a heat source.

Flush Mounted Television

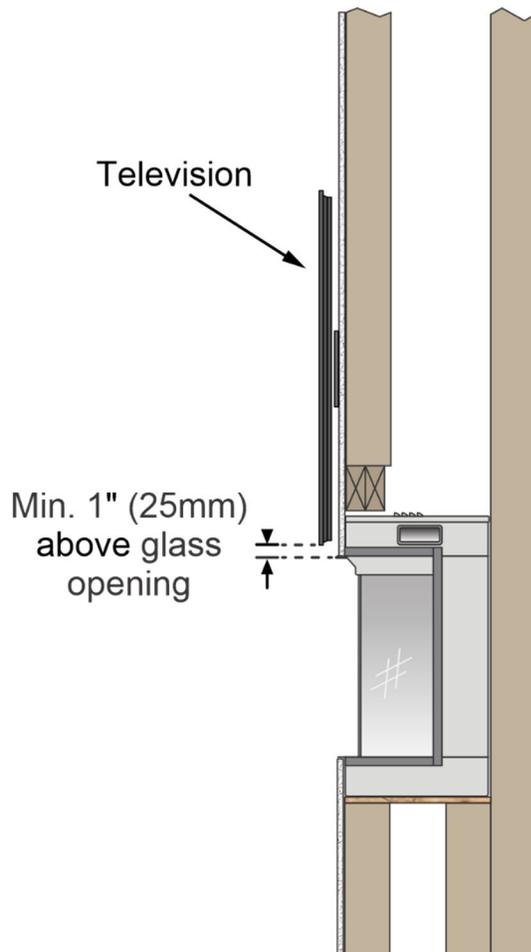

Recessed Mounted Television

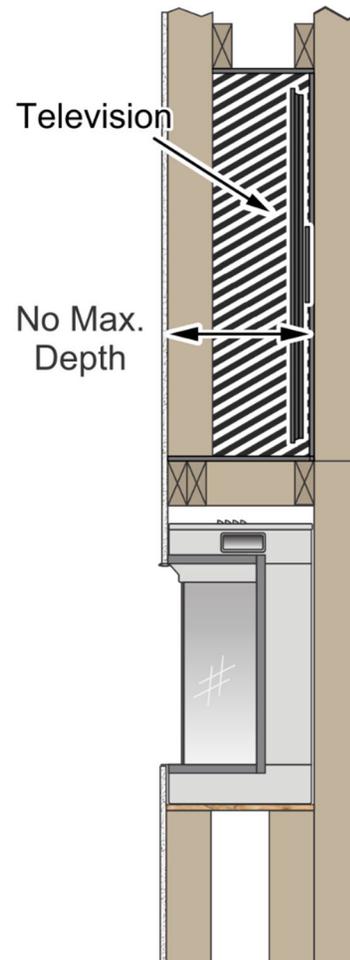

Log and Media Installation

Overview

This log set does not require the logs to be installed in any particular configuration in the appliance. You may use as many or as few logs as needed to achieve the desired appearance.

Installation

- Place the glass media (included with the fireplace) on the fuel bed. Use all of the glass media provided and spread it out over the fuel bed so that it completely covers the bed.



NOTE: If power is available at the time of installation, we recommend turning the fuel bed lights on high for the next steps

- Spread vermiculite over the glass media installed in the previous step. Slowly add small amounts of vermiculite until you achieve the desired appearance. There will be extra vermiculite left over.

NOTE: Most installations only use about 1/4 of the bag.



- Place any logs from the kit however is aesthetically pleasing. Below is just one example of media placement.



Ambient Light Kit (Optional) (SKU 94400151)

This appliance comes with an optional LED ambient light kit. This kit uses power supplied by the fireplace and is operated using the same controls as the fireplace.




IMPORTANT NOTE



If you would like to use the Ambient Light Kit, the electrical connection to the fireplace **MUST** be made before installing the fireplace into the framed cavity or adding sheeting and/or finish material to the fireplace enclosure. The Ambient Light Kit is not a retrofit option as the electrical connection on the appliance is not accessible after the appliance is installed.

Only use the supplied Ambient Light Kit with this fireplace. Other, non-approved LED light kits must not be used as they may damage the appliance and invalidate the warranty. The Ambient Light Kit must only be used when connected directly to the appliance using the pre-fitted connecting adaptor (this can be found at the top right-hand corner of the appliance by the main electrical connection). The supplied Ambient Light Kit must not be adapted to be operated independently of the appliance, such as modifying it to run on an independent power supply.

The Ambient Light Kit is supplied as (2) 59" long LED strips with adhesive tape backing, (2) 78" extension cables (not illuminated), and (1) 2-way splitter which may be used to attach two separate kits to the same appliance, allowing each kit to be routed to different directions/locations.

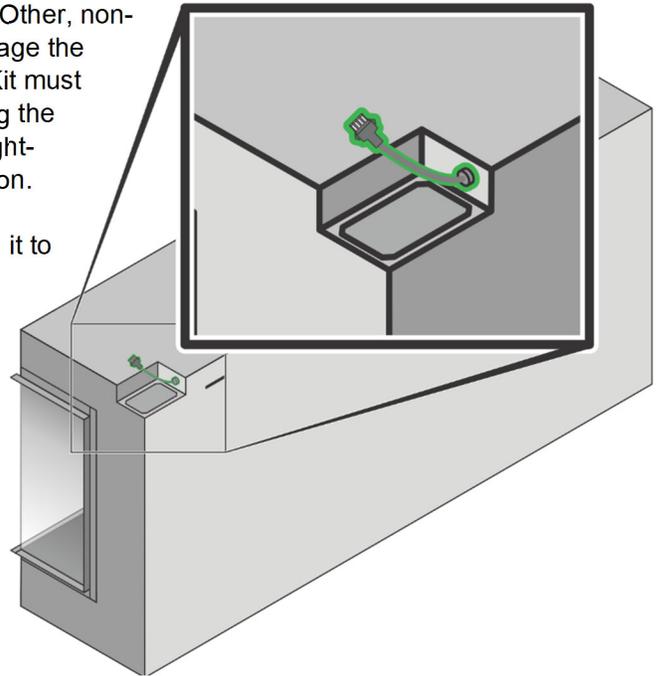

IMPORTANT: A maximum length of 118" of LED strip may be used on this appliance. This may be a single strip of 118", or two strips of 59", the included extensions, and a 2-way splitter.


Typical Order of Installation

The kit should be connected when the appliance is placed into the framed cavity. The appliance would then be fixed to the framing at that point, ready for the sheeting and finish material to be completed around the appliance. The LED strip can then be routed to its desired location (i.e., under the mantel or along the sides of the chase). Take care not to damage the strip or cable during this process. Damage can occur if the strip or cable is stretched or snagged on part of the structure/installation. If the cable is damaged at the point of the appliance, it may need to be replaced and this would not fall within the scope of the warranty. It is best practice to test that the Ambient Light Kit is working correctly before the final sheeting and finish has been installed over the framing. Once you are satisfied that the lighting is working correctly with the remote control, the sheeting can be installed, and the finish material applied.

Before You Begin

- Read this entire manual before you use your new heater (especially the section "Safety Precautions" on pages 4 & 5).

Normal Operating Sounds

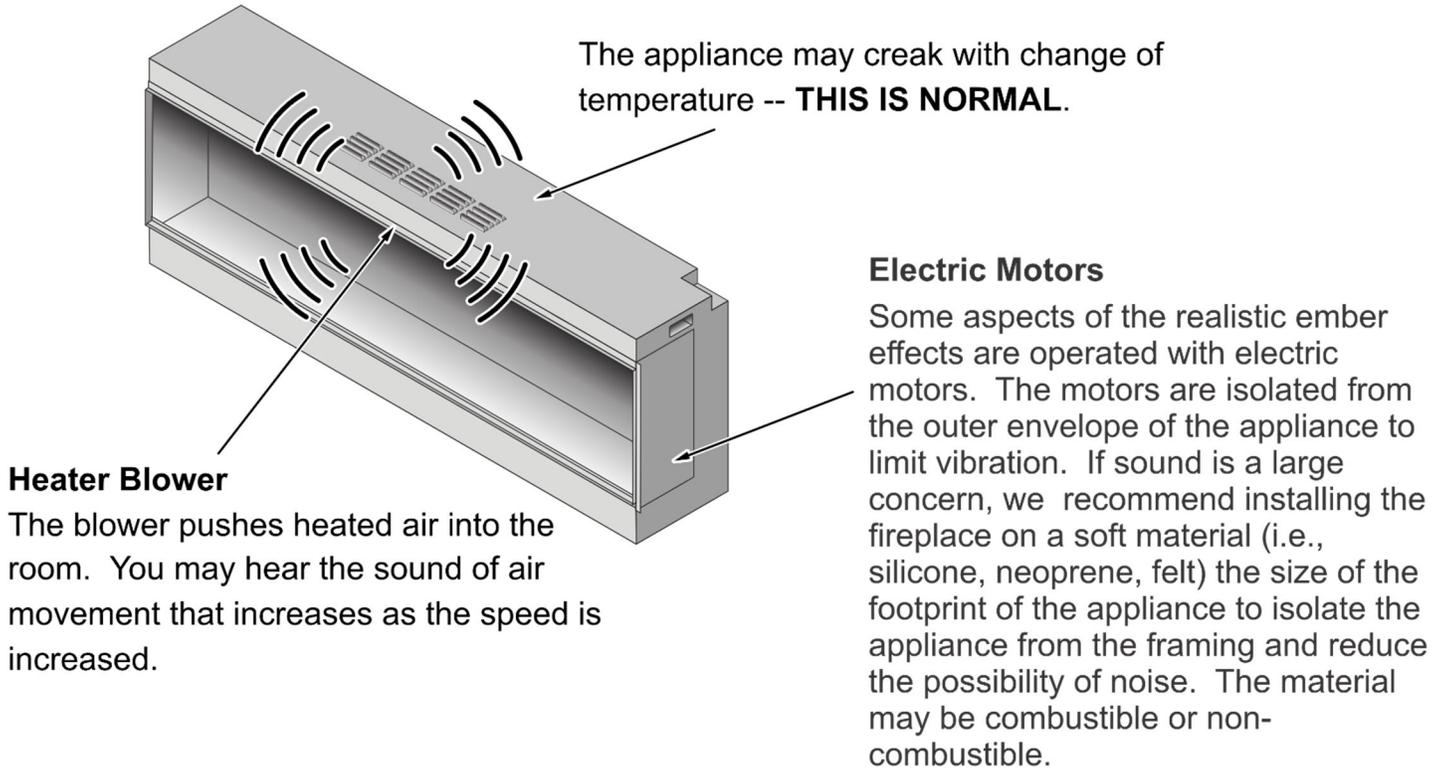

Heater Blower


The blower pushes heated air into the room. You may hear the sound of air movement that increases as the speed is increased.

Electric Motors

Some aspects of the realistic ember effects are operated with electric motors. The motors are isolated from the outer envelope of the appliance to limit vibration. If sound is a large concern, we recommend installing the fireplace on a soft material (i.e., silicone, neoprene, felt) the size of the footprint of the appliance to isolate the appliance from the framing and reduce the possibility of noise. The material may be combustible or non-combustible.

Location of Controls

There are multiple ways to control your new fireplace (see the following pages for details):

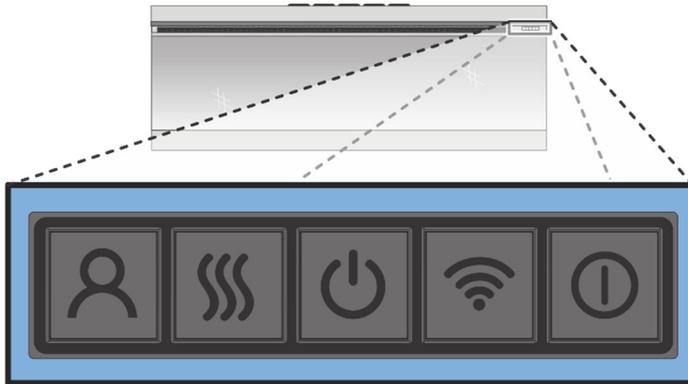

Manual Controls

Located in the upper right corner of the fireplace, above the glass.

Remote Control

The remote is included with the appliance




Smart Home App

Works with Apple™ and Android™



Manual Control Operation

The manual control buttons can be located on the right side of the heater outlet.

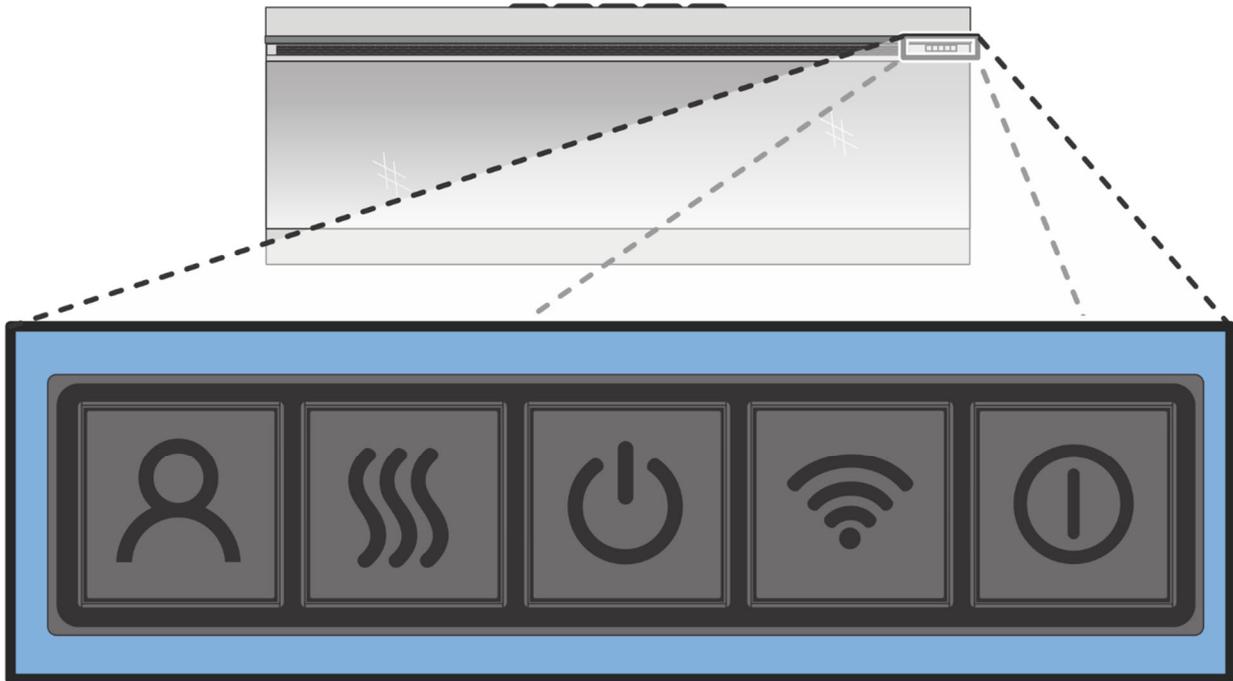

NOTE: Each time a button is pressed on the appliance, remote control, or app, an audible beep is emitted. To turn off this feature hold your finger on the Preset Mode button (on the appliance) for 3 seconds.

On/Off

Press to turn on the power to the appliance. The button pushed in indicates power is on, and pushed out indicates power is off.

Wi-Fi On/Off

Press to turn Wi-Fi on or off. An illuminated LED on the button indicates that Wi-Fi is turned on. Hold the button for 3 seconds to enter device pairing mode.

Standby

Turn on the appliance with the last used settings without any heat. This places the appliance into standby mode with all features turned off.

Heat Mode

Press 1 time = fan without heat	Press 3 times = high heat setting
Press 2 times = low heat setting	Press 4 times = no heat/no fan

Preset Mode

Press repeatedly to cycle through the 6 fire preset modes (+3 user-defined presets if programmed).

Remote Control Operation

Ensure that 2 AAA batteries are installed into the remote control handset. The battery power level is indicated by the column of bars to the right side of the temperature display when the appliance is in standby mode. 5 bars indicate the batteries are full, and 1 bar indicates the batteries are empty and need to be replaced immediately.

REMOTE CONTROL PAIRING

If the remote control screen is illuminated but is unresponsive it may need pairing with the appliance. To do this, press and hold the Standby button on the appliance until you hear two beeps. Then press and hold the Standby button on the remote control until you hear one beep. The remote is now synched with the appliance.

Button 1: Preset Fire Mode 

Repeatedly press to cycle through the 6 preset fire modes (+ 3 user-defined presets if programmed).

Display	Fire Mode	Display	Fire Mode
Pr.1	Autumn Campfire	Pr.6	Nebula
Pr.2	Ember Glow	Pr.7	User Preset
Pr.3	Inferno	Pr.8	User Preset
Pr.4	Noir	Pr.9	User Preset
Pr.5	Fire & Ice		

How to Create Your Own Preset Fire Mode

There are 3 preset spaces allocated for the user to save personalized Electric Fire creations. Simply choose the flame color and brightness level, the fuel bed color and brightness level, and the fuel bed downlight color and brightness level. Once you have selected your desired combination, press and hold the Preset Mode button for 3 seconds until the LCD displays Pr.7. Press (-) and (+) buttons to select a slot number between 7-9. Press and hold the Preset Mode button for 3 seconds to confirm the preset.

Button 2: Standby 

Turns on the appliance with the last used settings without any heat. Pressing again places the appliance into standby mode with all features turned off.

Button 3 & 9: Minus (-) & Plus (+)

Used to navigate through different on-screen menus turn up or down the intensity of the log color, fuel bed color, and sound.

Button 4: Flame Speed 


Press once to enter flame speed menu – SPd will show on the LCD screen. Press the plus and minus buttons to adjust

Button 5: Flame Color 

Repeatedly press to cycle through flame color menu. While in the flame color menu, press the plus and minus buttons to increase and decrease the flame brightness - 1 bar is the dimmest setting, 5 bars is the brightest setting.

Display on Screen	Flame Style
FL.0	Flame off
FL.1	Red
FL.2	Orange
FL.3	Yellow
FL.4	Green

Display on Screen	Flame Style
FL.5	Light Blue
FL.6	Dark Blue
FL.7	Violet
FL.8	White
FL.9	Multi-color change

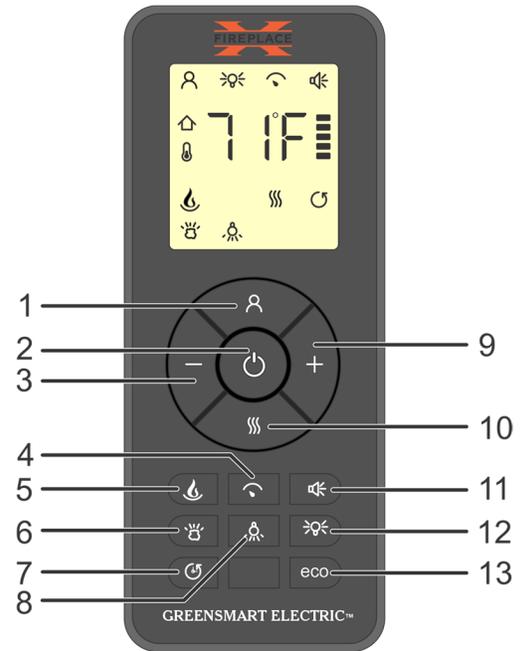

Button 6: Fuel Bed Color

Repeatedly press to cycle through the log color menu. While in the fuel bed color menu, press the plus and minus buttons to increase and decrease the fuel bed brightness - 1 bar is the dimmest setting, and 5 bars is the brightest setting.

Display	Fuel Bed Color
Fb.0	Fuel Bed Off
Fb.1	Red
Fb.2	Orange
Fb.3	Yellow
Fb.4	Green

Display	Fuel Bed Color
Fb.5	Light Blue
Fb.6	Dark Blue
Fb.7	Violet
Fb.8	White
Fb.9	Multi-color Auto Change

Button 7: Timer Mode

Repeatedly press to cycle through timer options. Select an amount of time for the appliance to operate then automatically turn off. Choose between .5, 1, 2, 3, 4, 5, 6, 7, 8, 9 hours.

Button 8: Fuel Bed Downlight

Press to cycle through the Fuel Bed downlight color menu. While in the fuel bed down light menu, press the plus and minus buttons to increase and decrease the fuel bed brightness - 1 bar is the dimmest setting, and 5 bars is the brightest setting.

Display	Fuel Bed Down Light Color
dL.0	Fuel Bed Off
dL.1	Red
dL.2	Orange
dL.3	Yellow
dL.4	Green

Display	Fuel Bed Down Light Color
dL.5	Light Blue
dL.6	Dark Blue
dL.7	Violet
dL.8	White
dL.9	Multi-color Auto Change

Button 10: Heater Mode

Press to cycle through the heat output options.

Display	Heater Mode
Co.A	Fan on with no heat
H.Lo	Low Heat

Display	Heater Mode
H.HI	High Heat
no.H	No Heat – Heat and Fan Off

While in heater mode, after selecting low or high heat setting, press the (-) and (+) buttons to select the temperature you want the room to reach. Note: If the room temperature is already higher than the temperature selected, the heater will not activate. **To switch between °C/°F hold down the (-) and (+) buttons for 3 seconds.**

Open Window Detection is an innovative eco feature that detects a rapid drop in room temperature caused by an open door or window. The warning word “OPn” will be displayed on the screen and the heater will be turned off. If the room temperature rises or the remote control is operated manually, the heater will return to its normal working state.

Button 11: Sound Effect

Press to open the sound effect menu.

Press once - S.on = Sound effect on

Press twice – no.S = Sound effect off

Button 12: Ambient Lighting (if using optional Ambient Light Kit ONLY)

Repeatedly press to turn on ambient lighting and cycle through the different color options.

Button 13: Eco Mode

Press to activate Eco mode. This mode will reduce the brightness of all lighting modes and limit the heat output to low setting, resulting in reduced energy consumption. Press the button a second time to exit Eco mode.


App Control

There are (2) methods for connecting the fireplace to the Fireplace Xtrordinair app. The automatic method allows the app to identify and connect to the fireplace on its own. If for some reason this method does not work, proceed to the next section titled "Manual app installation and setup" and try that method.

AUTOMATIC APP INSTALLATION AND SETUP

Step 1

Download the Tuya Smart app from your app store and open the Tuya App on your device.



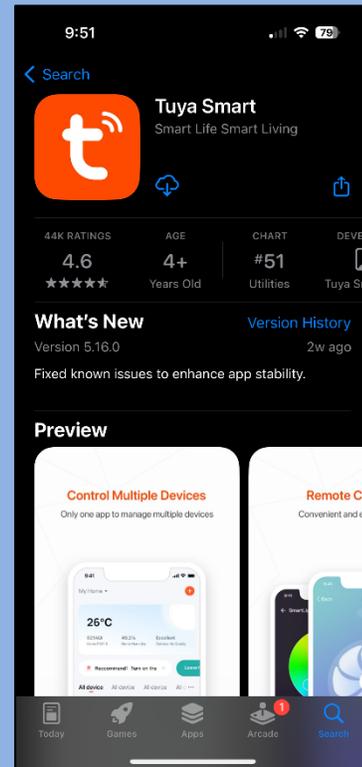


Step 2

Sign up to the tuya app or use an existing log in (Do not use the Try as Guest option).


Step 3

Now press the Add device button in the middle of the screen to search for the appliance. Or alternatively tuya may notify you there is an appliance ready to connect which will skip Step 4.

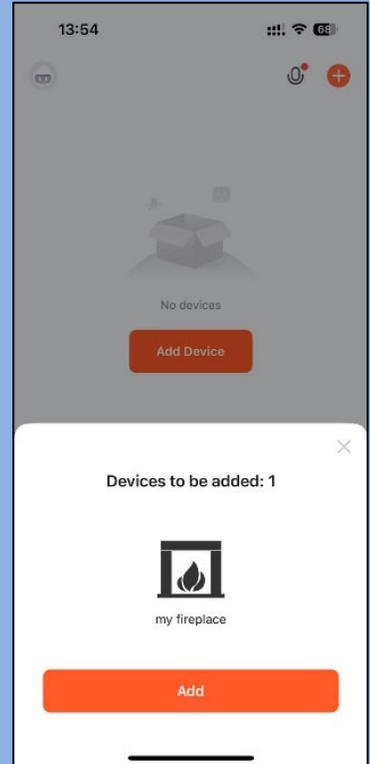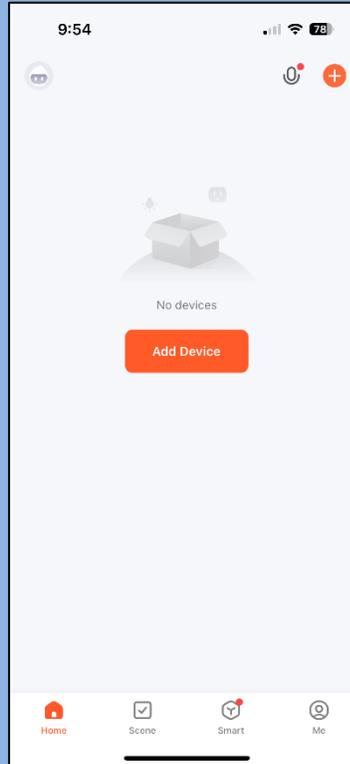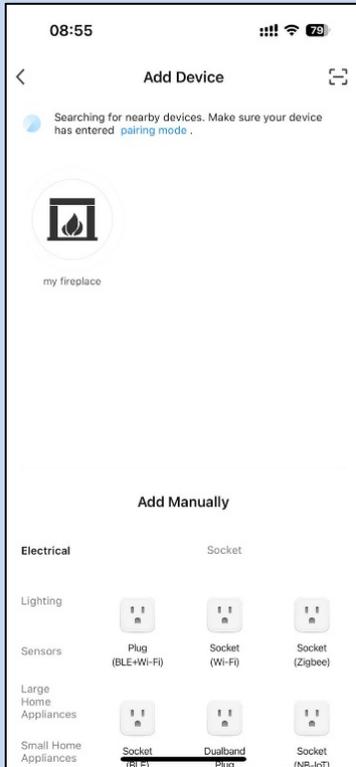


Step 4

The tuya app will automatically find your appliance, press the fireplace icon to connect with the name, press the done button at the bottom of the screen

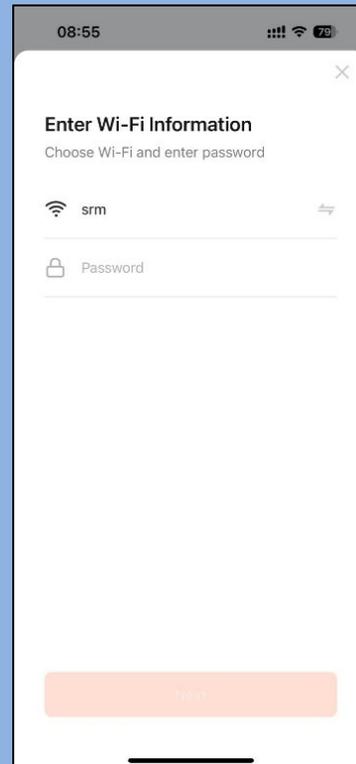


Step 5

Enter your Wifi name and password for the appliance to connect to, you will also need to ensure your device is connected to the wifi network in your phone settings. Once this is complete the app will begin to connect to the appliance

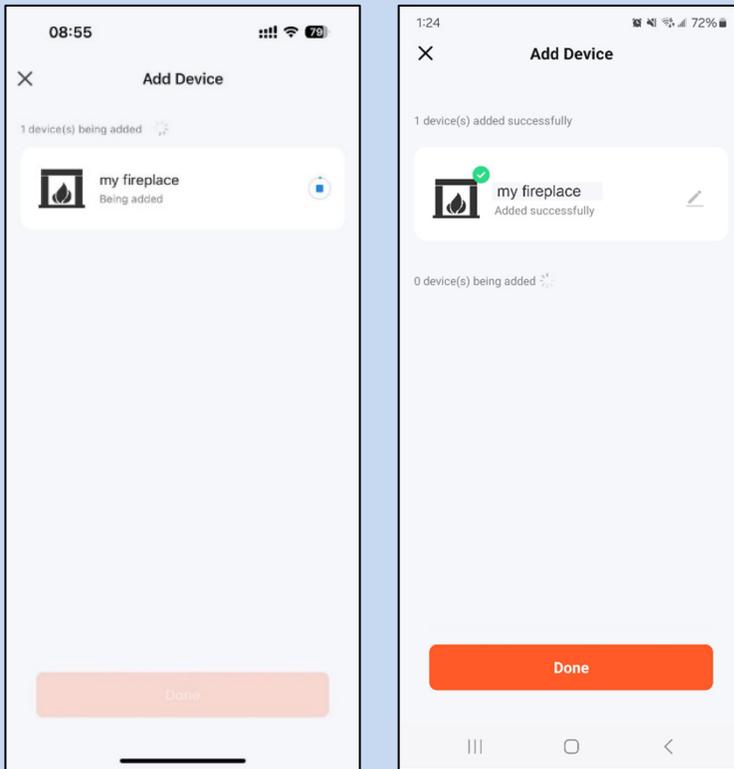

Step 6

When the app is connected you can choose to edit the name of the appliance using the pencil icon.

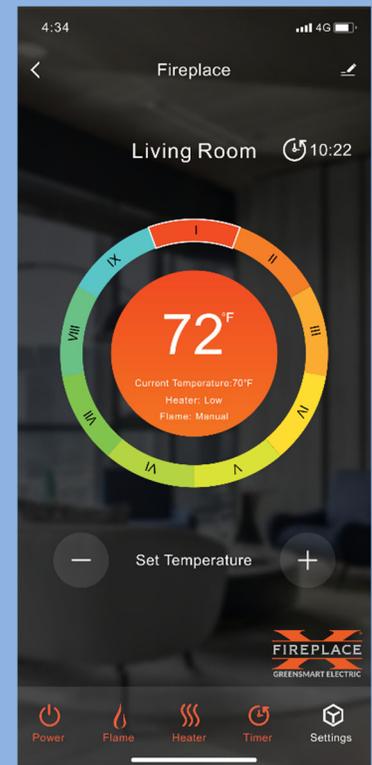

Step 7

You will now be able to control the appliance via the app, switch on the appliance with the power button to begin. If you would like to use more than one device to control the appliance, please see the Sharing access section.

If automatic method was not successful in connecting the fireplace with the app, follow the steps in the next section “Manual App Installation and Setup”.


MANUAL APP INSTALLATION AND SETUP

To connect your Fireplace to the Fireplace Xtordinaire app you will need the following.


- ✓ A device running the Android or iOS operating system such as a tablet or smartphone.
- ✓ A network within range of the fireplace.
- ✓ A valid email address that you can access for a verification code.

STEP 1 – DOWNLOAD THE TUYA SMART APP AND CREATE A USER ACCOUNT


- Download the Tuya Smart app from whichever app store you use.

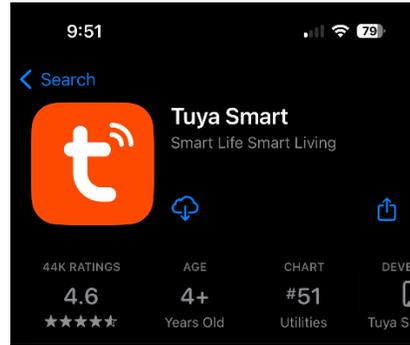

- Once downloaded the TUYA icon will appear on your device's home screen, you can now open this app by tapping the icon.

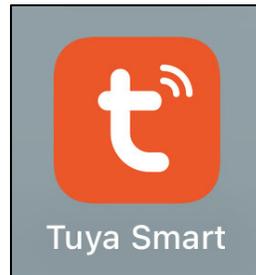


- Follow the directions in the app to create an account, a valid email address will be required to complete the account setup process. Once your account is set up you will be asked several questions about permissions. Follow the on-screen prompts and make your selections.

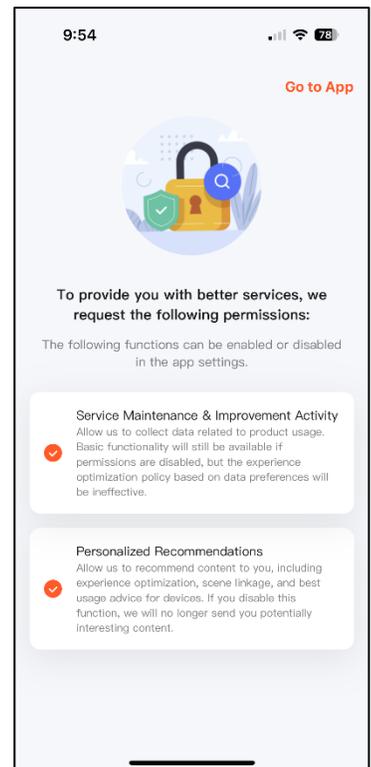


STEP 2 – CONNECT YOUR APPLIANCE TO THE APP


- Now you can begin the process of connecting your appliance to the app. At the app home screen press the “Add Device” button.

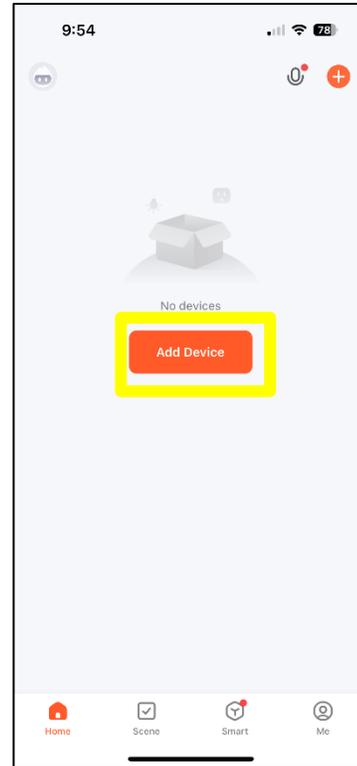



- Once the password has been entered, you will be presented with a checklist to ensure trouble-free connection of your appliance to the network. You may also be asked to allow location permissions, please read, and follow the on-screen prompts.

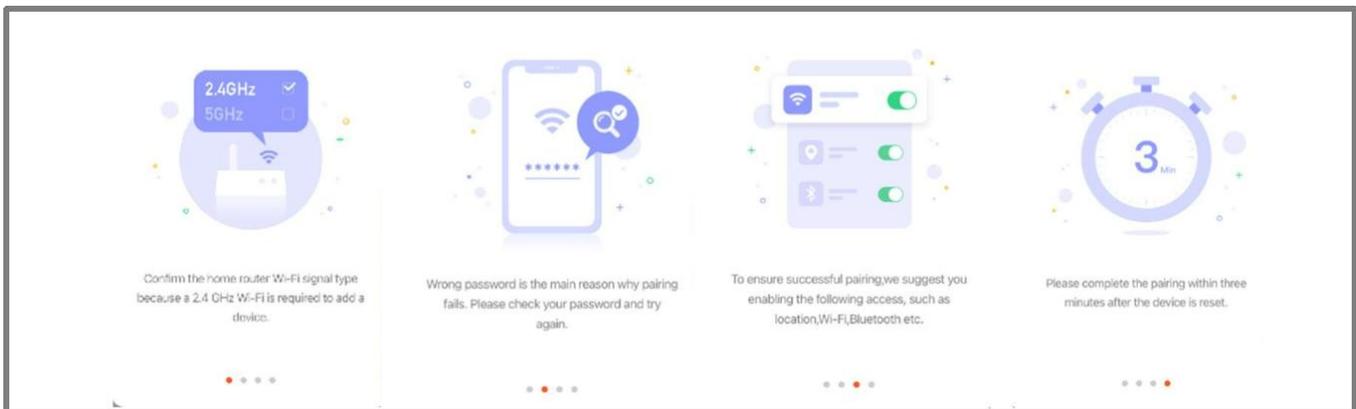

- After you have made your selections regarding permissions, you will need to choose which device to pair, please select “Small Home Appliances” from the menu as shown to the right.


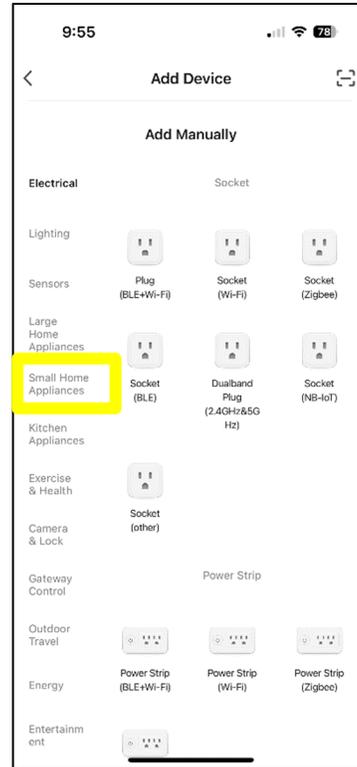


- Now from the list of small home appliances select Heater (Wi-Fi). The app will then prompt you to enter your Wi-Fi password, ensure the correct network is selected, enter your Wi-Fi password, and then press the next button.

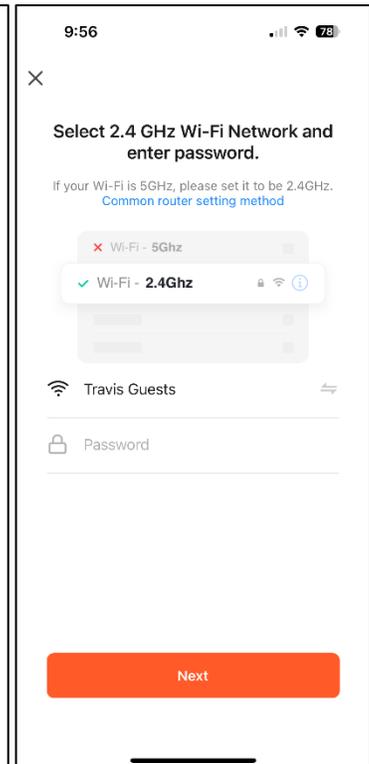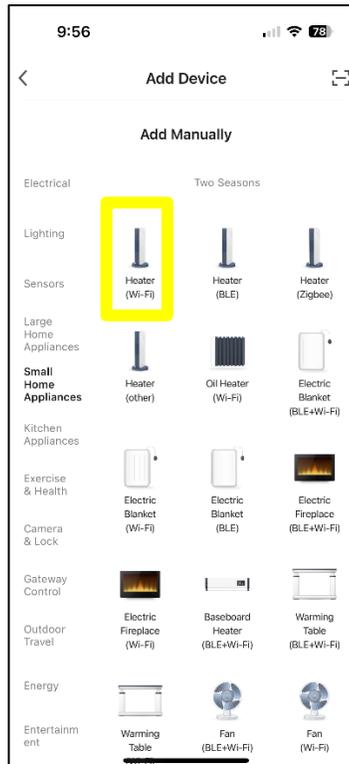


- Next, the app will prompt you to reset the device. This refers to placing your fireplace into “Pairing Mode”. Before tapping next you will need to put your appliance into pairing mode. To enter “Pairing Mode” turn the fireplace on using the “Power Button”.



Locate the “Wi-Fi On/Off” button above the upper-right corner of the front glass. Press and hold the Wi-Fi button on the fireplace. located on the underside of the top right-hand corner of the fireplace (as shown to the right) until the fuel bed flashes red.

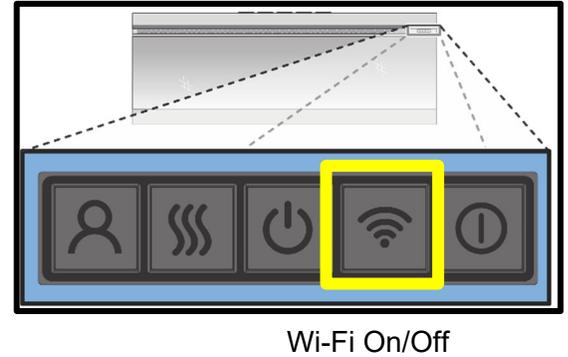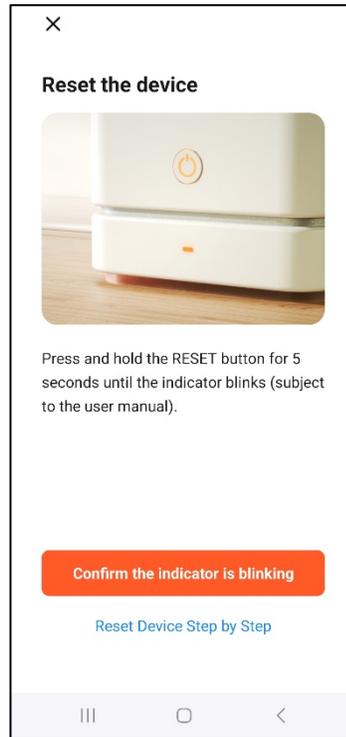

- Once the fire is placed in pairing mode with a flashing red fuel bed, tap the “Next” button on the app and choose the “Blink Quickly” button this will then begin to search for the fireplace. When it has successfully paired the fireplace, the fuel bed will display solid green.

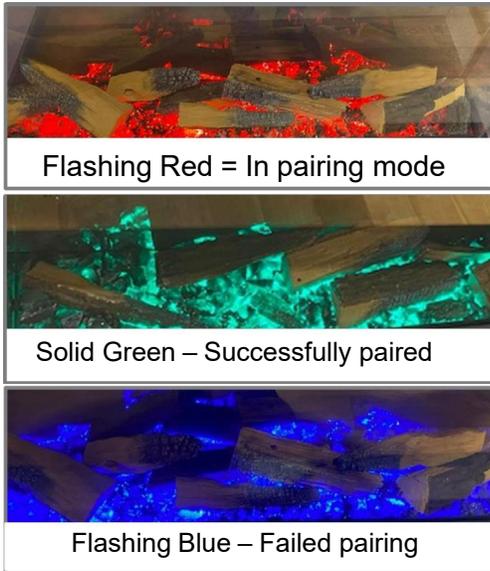


NOTE: the fuel bed color indicates the status of the fire. When first initiating the pairing, the fuel bed will flash red. Once successfully paired the fuel bed will display green. If a flashing blue fuel bed appears repeat the pairing procedure.

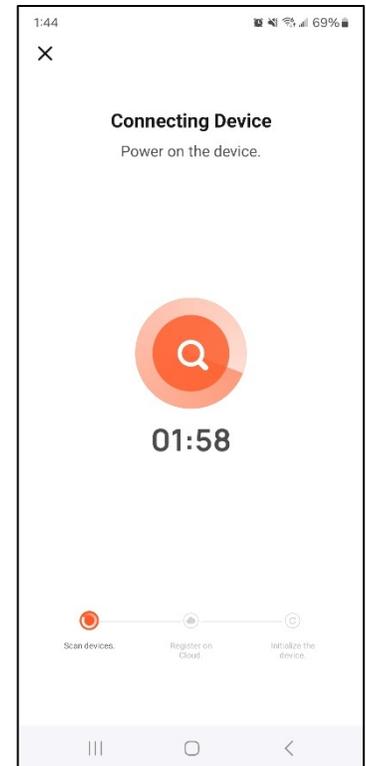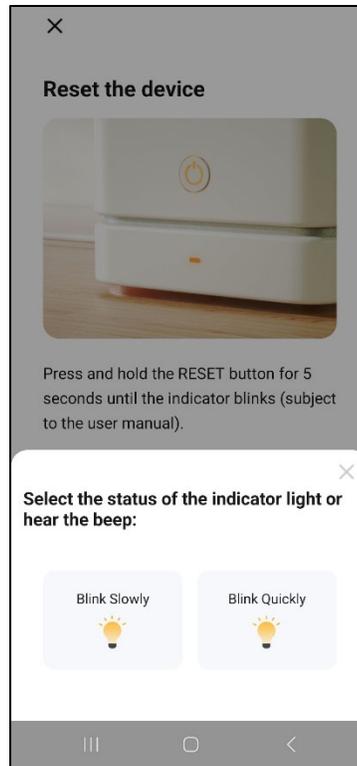

STEP 3 – SUCCESSFUL PAIRING

Once paired with the fireplace, the app can be used to control the fireplace. The fireplace will now be shown on the Tuya home screen. Select the appliance to begin using the Fireplace Xtrordinair app. To turn the fireplace on, use the power button as highlighted in the illustration below.

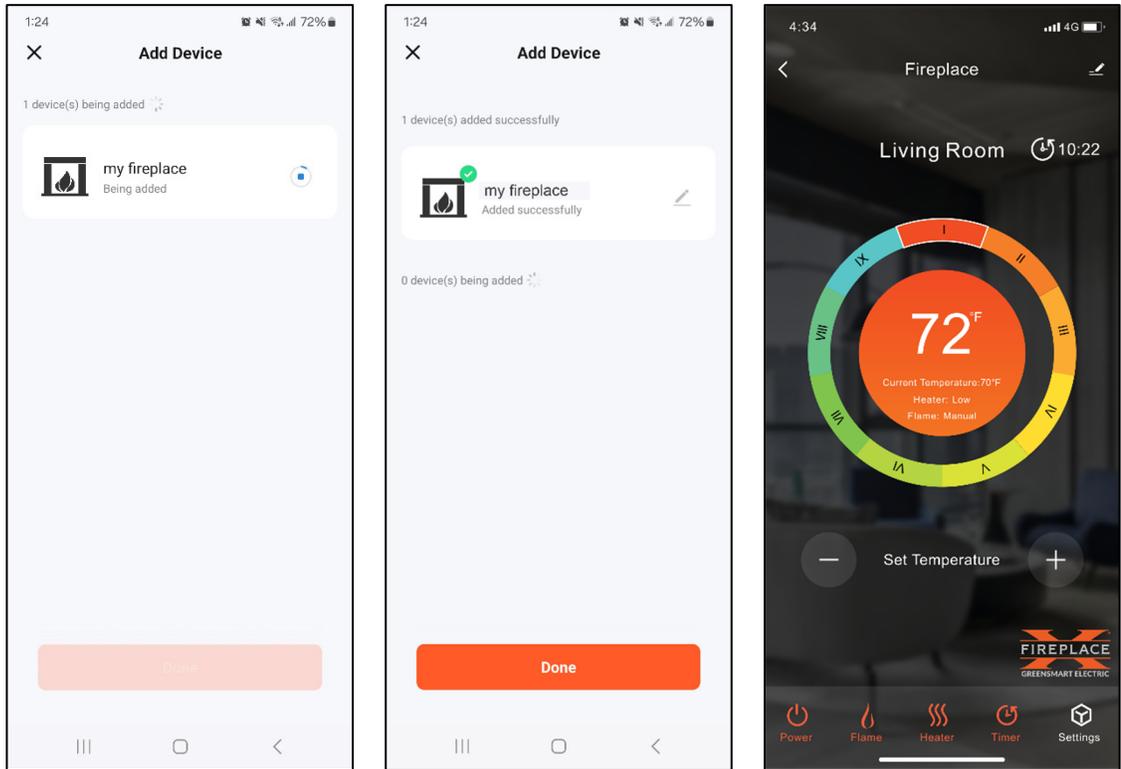

Advanced Wi-Fi Router Guidance

Wireless transmissions get weaker as you get further from your wireless router, they can also be disrupted by building materials, such as metal framing, walls & floors.

For the best possible connection to your appliance, the location of your wireless router in relation to your appliance is key:

- If there are certain areas of your home where you find your signal drops, it may be due to interference.
- Large objects can often obstruct or interfere with a wireless connection, so it is best to keep your router off the ground and away from larger items.
- Avoid putting your router behind the sofa, inside a cabinet, or behind a door - It may look like a convenient location, if you are experiencing an issue this could be the cause of the problem.

You should also keep electronics such as microwaves, lamps, speakers, TVs, and monitors as far away from the router as possible.

If issues are encountered when trying to connect your appliance, our best advice would be to follow the below:

1. Check the location of the appliance in relation to the wireless router. Are there any objects that may be causing a problem with the signal?
2. Check if you are experiencing the same connection problem across other devices: you can do this by checking their Wi-fi status. Typical devices to check would be your mobile phones, tablets, laptops, and televisions.
3. Try adding a new device to your wireless network – this will verify that the wireless password & SSID are correct.
4. Are you using wireless extenders? If so, turn off all wireless extenders and try adding a new device (a mobile phone for example) in the same location as your wireless router. This confirms that your Wireless router is connecting to new devices without issue.
5. Reset your wireless router.

Tips and Advice

If the appliance is installed out of the range of your wireless network, the Wi-Fi signal will not be detected by the appliance. It may be too far away from your router. You may need to purchase a signal booster to extend the range of your home network. You can purchase a Wi-Fi booster from an electronics retailer or online.

How do I know if my Wi-Fi signal is strong enough or if the appliance is out of range?

Simply stand in front of the appliance holding a smart device (such as a phone or tablet) that is already connected to your home router, in close proximity to the control panel – you will find the control panel on the front of the appliance to the right side of the heater outlet. Check the Wi-Fi indicator on the smart device to determine the signal strength. If the signal strength is not full, it may indicate a connectivity issue. If they are greyed out or only 1 or 2 bars are showing, then the signal strength of your home network may need boosting in order for your Tuya app to control the appliance.

**DANGER HIGH VOLTAGE:**

Disconnect power and allow the appliance to cool before attempting maintenance or repair



Yearly Service Procedure

- Failure to inspect and maintain the fireplace may lead to improper operation and a potentially dangerous situation. We recommend the following procedures be done by a qualified technician.

**THIS FIREPLACE IS NOT
USER-SERVICEABLE**

Contact your dealer for service.




Any repairs or maintenance should only be carried out by a suitably qualified competent person.

The appliance should be occasionally cleaned using a dry cloth. **Do not use detergents, abrasive cleaners, or furniture polish.**

To clean the glass, use a lightly damp cloth and ensure any moisture is dried fully using a lint-free cloth. Ensure that the heater outlet is kept dust-free by occasionally vacuuming the area using a brush attachment.

Glass Cleaning

The glass may be cleaned with a non-abrasive cleaner. To clean the inside of the glass, remove the glass, place it on a non-scratching surface, and clean the inside surface.

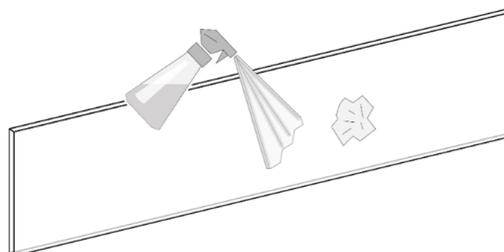

Troubleshooting**Resetting the Thermal Cut Out**

The appliance is fitted with an Electronic Safety Control (E.S.C.). This is a safety device which switches off the appliance if, for any reason, the appliance overheats, e.g. when covered. If the heater stops operating while the flame effect continues working normally, this indicates that the E.S.C. is in operation. The E.S.C. can only be reset after the appliance has cooled down and the appliance has been reset. Re-setting of the E.S.C. procedure is as follows:

1. Switch off the appliance (Manual On/Off switch) and leave it off for approximately 10-15 minutes.
2. Remove any obstruction to the fan heater outlet or fan blades etc. Make sure that the power supply is disconnected with the plug socket outlet while doing this.
3. Switch on the appliance and the E.S.C. will be reset.
4. Ensure that the appliance is functioning correctly. If the E.S. Control operates again, the appliance should be checked by a competent electrician.

PROBLEM	POSSIBLE CAUSE	SOLUTION
Appliance will not turn on.	<ul style="list-style-type: none"> • Problem with power supply. 	<ul style="list-style-type: none"> • Check that the appliance is properly connected to incoming power and switched on. • Check the electrical breaker for the circuit. • Check that the main power switch on the appliance is turned on.
Remote control does not work.	<ul style="list-style-type: none"> • Batteries have expired. • Remote has to be synched with the appliance. 	<ul style="list-style-type: none"> • Replace batteries. • Press and hold the standby button  on the fireplace for 3 seconds (fireplace will beep 2x), then press the standby button  on the remote.
No heat	<ul style="list-style-type: none"> • Incorrect thermostat setting. • Overheating may have engaged the E.S.C. feature. 	<ul style="list-style-type: none"> • Increase the desired temperature higher than the current room temperature. • See above for the reset procedure.
Heat turns off before desired temperature is reached.	<ul style="list-style-type: none"> • Open window detection has been activated. 	<ul style="list-style-type: none"> • Check that any windows in the room are closed.

Replacement Parts List

CAUTION: Use only Travis Industries replacement parts. Do not use substitute materials.

FPX GSE UNIVERSAL PARTS	
FPXALL - SCREW [10-pk]#	250-06700
FPXALL - BRKT, BOTTOM#	250-06701
FPXALL - CONTROL BOARD(PCB)#	250-06702
FPXALL - CONTROL PANEL, MAN. SWITCH#	250-06703
FPXALL - GLASS SUCTION CUP#	250-06704
FPXALL - HEATER UNIT#	250-06705
FPXALL - MAGNETIC TOOL#	250-06706
FPXALL - POWER UNIT#	250-06707
FPXALL - REMOTE CONTROL#	250-06708
FPXALL - SPEAKER#	250-06709
FPXALL - VERMICLITE GRANULES#	250-06752
FPXALL - POWER UNIT 3#	250-06795

FPX 39 GSE PARTS	
FPX39 - FLAME EFFECT SCRNS#	250-06710
FPX39 - FLAME EFFECT LED BOARD#	250-06711
FPX39 - FLAME EFFECT SPINDLE#	250-06712
FPX39 - FRONT GLASS#	250-06713
FPX39 - FUEL BED LED BOARD#	250-06714
FPX39 - FUEL BED SPINDLE#	250-06715
FPX39 - RETAINING BARS, FRONT GLASS#	250-06716
FPX39 - HANGING BRKT#	250-06717
FPX39 - LED DOWNLIGHT#	250-06718
FPX39 - DECORATIVE LOGS, PACKAGE A#	250-06719
FPX39 - PERSPEX FUEL BED COVER#	250-06720
FPX39 - BRKT, SHELF SUPPORT#	250-06721
FPX39 - SIDE PANEL, MEGNETIC#	250-06722
FPX39 - SIDE PLATE, One-Sided#	250-06723
FPX39 - SIDE TRIM - 2&3SIDED#	250-06724
FPX 39/51- CONTROL BOX GSE#	250-06791
FPX 39/51 - POWER UNIT GSE 60w#	250-06792

FPX 51 GSE PARTS	
FPX51 - FLAME EFFECT SCREEN#	250-06725
FPX51 - FLAME EFFECT SPINDLE#	250-06726
FPX51 - GLASS, FRONT #	250-06727
FPX51 - FUEL BED SPINDLE#	250-06728
FPX51 - RETAINING BARS, FRONT GLASS#	250-06729
FPX51 - LED DOWNLIGHT#	250-06730
FPX51 - DECORATIVE LOGS, PACKAGE A#	250-06731
FPX51 - PERSPEX FUEL BED COVER#	250-06732
FPX51 - BRKT, SELF SUPPORT#	250-06733
FPX 39/51- CONTROL BOX GSE#	250-06791
FPX 39/51 - POWER UNIT GSE 60w#	250-06792

FPX 59 GSE PARTS	
FPX59 - MOTOR, FUEL BED SPINDLE#	250-06735
FPX59 - FLAME EFFECT SCREEN#	250-06736
FPX59 - FLAME EFFECT LED BOARD#	250-06737
FPX59 - FLAME EFFECT SPINDLE	250-06738
FPX59 - FLAME EFFECT SPINDLE MOTOR#	250-06739
FPX59 - GLASS, FRONT#	250-06740
FPX59 - FUEL BED LED BOARD#	250-06741
FPX59 - FUEL BED SPINDLE#	250-06742
FPX59 - GLASS EMBERS#	250-06743
FPX59 - FRONT GLASS RETAINER#	250-06744
FPX59 - HANGING BRKT#	250-06745
FPX59 - LED DOWNLIGHT#	250-06746
FPX59 - FUEL EFFECT LOGS, PACAKGE A#	250-06747
FPX59 - FUEL EFFECT LOGS, PACKAGE B#	250-06748
FPX59 - PERSPEX FUEL BED COVER#	250-06749
FPX59 - SHELF SUPPORT BRKT#	250-06750
FPX59 - GLASS SIDE#	250-06751
FPX 59/71 - CONTROL BOX GSE#	250-06790
FPX 59 - POWER UNIT GSE 36w#	250-06793

FPX 71 GSE PARTS	
FPX71 - FLAME EFFECT SCREEN#	250-06753
FPX71 - FLAME EFFECT SPINDLE#	250-06754
FPX71 - GLASS, FRONT#	250-06755
FPX71 - FUEL BED SPINDLE#	250-06756
FPX71 - GLASS EMBERS#	250-06757
FPX71 - FRONT GLASS RETAINING BARS#	250-06758
FPX71 - HANGING BRKT#	250-06759
FPX71 - LED DOWNLIGHT#	250-06760
FPX71 - FUEL EFFECT LOGS, PACKAGE A#	250-06761
FPX71 - FUEL EFFECT LOGS, PACKAGE B#	250-06762
FPX71 - PERSPEX FUEL BED COVER#	250-06763
FPX71 - POWER UNIT#	250-06764
FPX71 - SHELF SUPPORT BRKT#	250-06765
FPX 59/71 - CONTROL BOX GSE#	250-06790
FPX 59 - POWER UNIT GSE 36w#	250-06793

Contact your local Fireplace Xtrordinair™ fireplace dealer to purchase replacement parts.


Upgrade Media Kits

There are Upgrade media kit available for your GreenSmart Electric Fireplace. The images below show some of the possibilities for different looks for the fireplace. Contact your local dealer for pricing and availability.

FPX GreenSmart Electric – Driftwood Log Set (sku# 94500991)**FPX GreenSmart Electric – Birch Log Set (sku# 94500992)****FPX GreenSmart Electric – Traditional Oak Log Set (sku# 94500990)****FPX GreenSmart Electric – Cannon Ball Media Set (sku# 94400063)**


Wiring Diagram – FPX GSE 39 & 51

Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

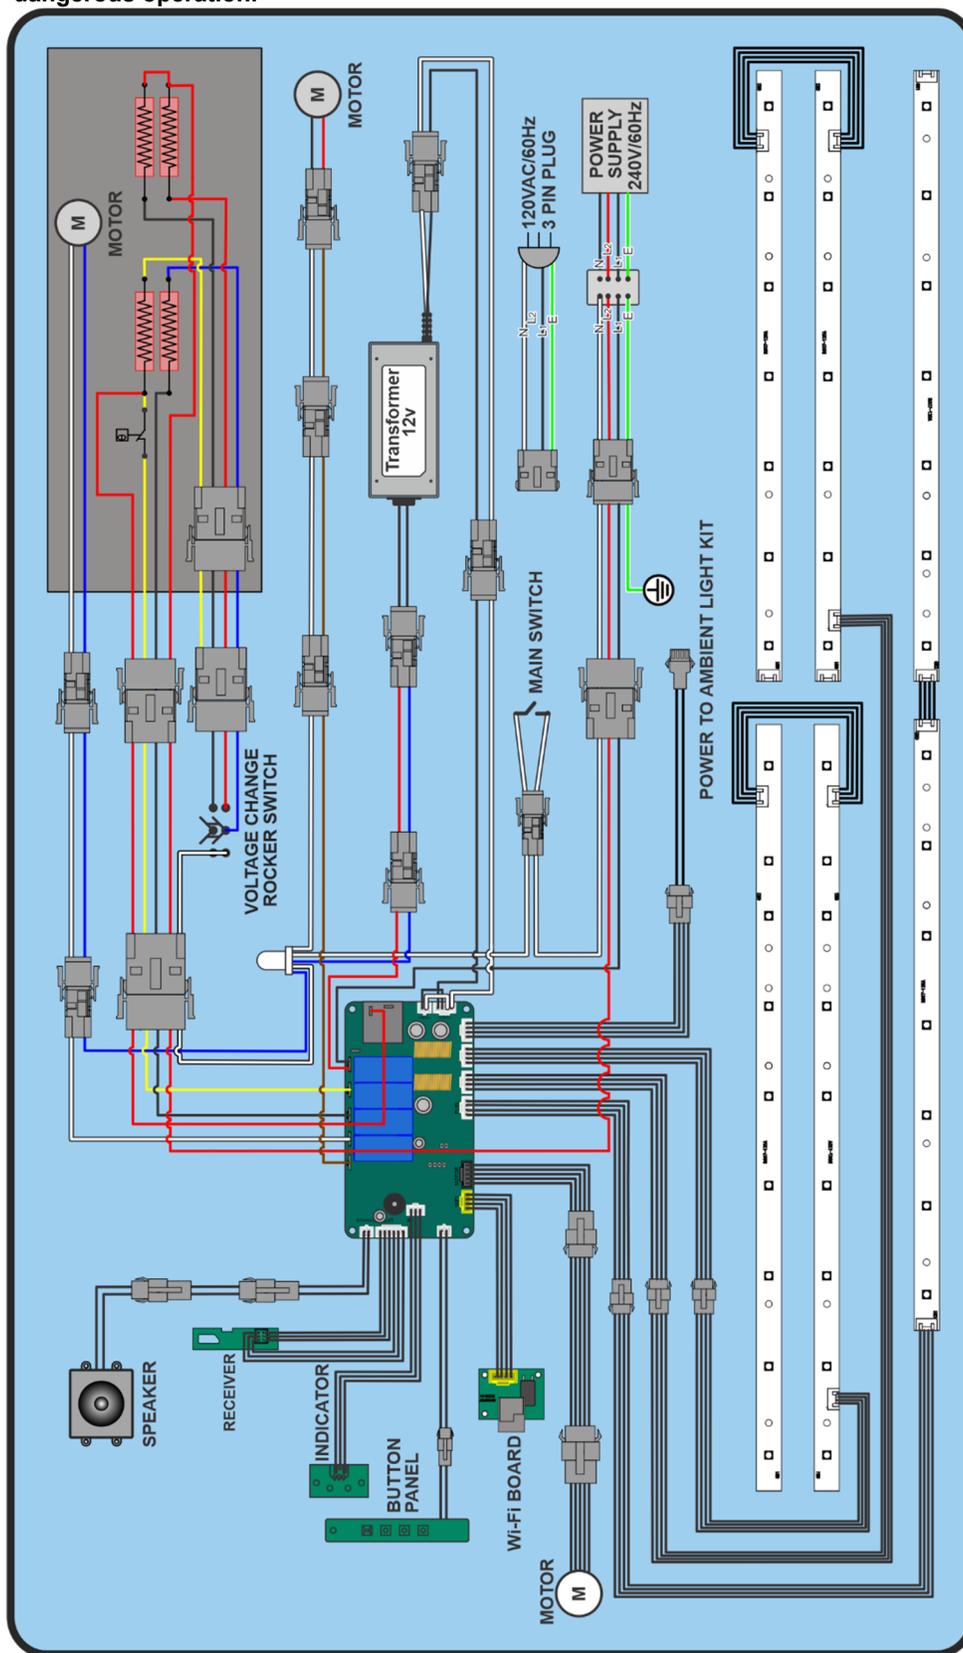

Wiring Diagram – FPX GSE 59 & 71

Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation.

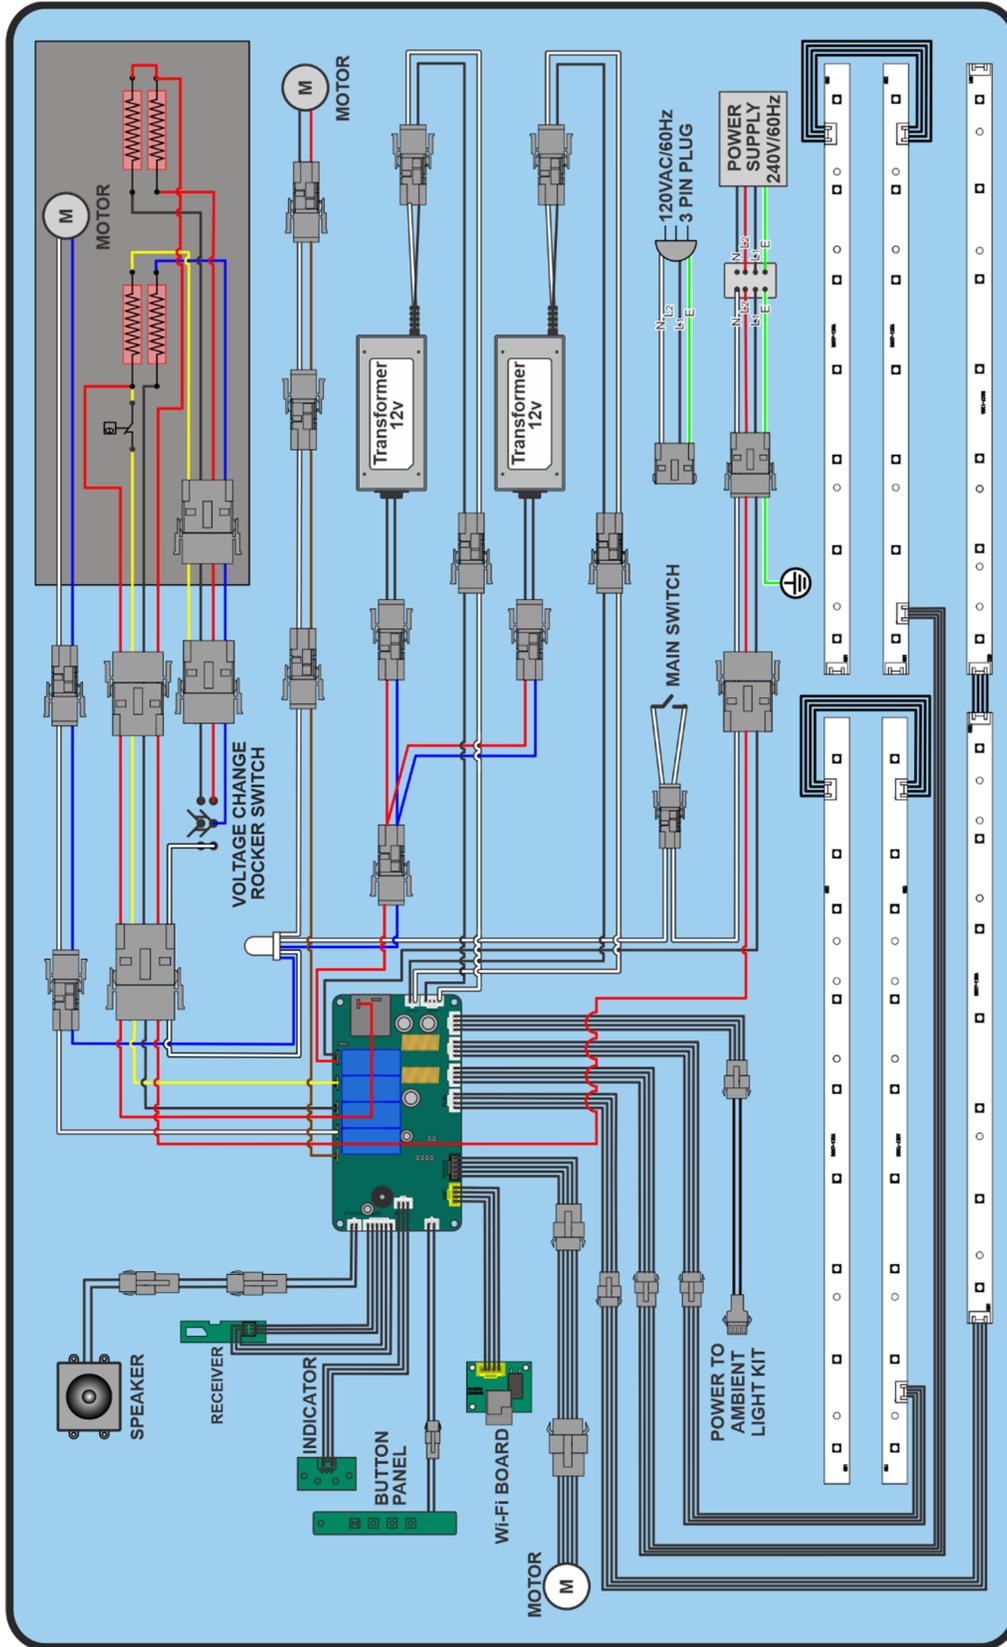

Travis Industries, Inc. warrants that your newly purchased Travis Industries, Inc. electric fireplace is free from manufacturing and material defects for a period of one (2) years from the date of the first purchase, subject to the conditions and limitations contained below.

Warranty Application & Exclusions

This limited warranty applies to your newly purchased Travis Industries, Inc. electric fireplace. The limited warranty's application is limited to purchases made in any province of Canada or any of the 50 States of the United States of America, including the District of Columbia. Only the original purchaser of the product is eligible for coverage under this limited warranty; the warranty is not transferable.

Warranty Coverage and Term

Products covered by this limited warranty have been tested and inspected prior to shipment and, subject to the provisions of this warranty, Travis Industries, Inc. warrants such products to be free from defects in material and workmanship for a period of one (2) years from the date of the first purchase of such products.

The limited one (2) year period for products also applies to any implied warranties that may exist under applicable law. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to the purchaser.

All other warranties – expressed or implied – with respect to the product, its components, and accessories, or any obligation/liabilities on the part of TRAVIS INDUSTRIES, INC. are hereby expressly excluded.

Limitations to Coverage Under Limited Warranty

This limited warranty does not apply to products that have been repaired, except by Travis Industries, Inc. or its authorized service representatives, or otherwise altered. This limited warranty further does not apply to defects resulting from misuse, abuse, accident, neglect, incorrect installation, improper maintenance or handling, or operation with the incorrect power source. Products made by other manufacturers, sold with the product or thereafter, are not covered by this limited warranty. The use of un-authorized components will render this warranty null and void.

Service Under Limited Warranty

Defects must be brought to the attention of your local Travis Industries, Inc. dealer. Please have your proof of purchase, model, and appliance serial number available when calling. Any and all service under the limited warranty requires proof of purchase of the product.

Defects

Should a product or part covered by this limited warranty be proven to be defective, in material or workmanship, and during the one (2) year limited warranty period, TRAVIS INDUSTRIES, INC., will replace such defective product or part without charge. If Travis Industries, Inc. is unable to replace such product, or if replacement is not commercially practicable or cannot be timely done, in its sole discretion Travis Industries, Inc. may, in lieu of replacement, choose to refund the purchase price for such product or part.

Limitations

In no event will Travis Industries, Inc., including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators, and assigns, be liable to the purchaser of any third party, whether in contract, in tort, or on any other basis for any indirect, special, punitive, exemplary, consequential, or incidental loss, cost or damage arising out of or in connection with the sale, maintenance, use or inability to use the product, even if Travis Industries, Inc., including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators and assigns, have been advised of the possibility of such losses, costs or damages, or if such losses, costs or damages are foreseeable. In no event will Travis Industries, Inc., including without limitation any of its directors, officers, shareholders, employees, consultants, agents, heirs, executors, administrators, and assigns, be liable for any direct losses, costs, or damages that exceed the purchase price of the product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to the purchaser.

Application of Provincial and State Law

This limited warranty gives you specific legal rights, and you may also have other rights from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sale of Goods shall not apply to this limited warranty, or the sale of products covered by this limited warranty.

General

Travis Industries, Inc. reserves the right to make changes at any time without notice, in design, material, specifications, prices, and the right to discontinue styles and products.

IF WARRANTY SERVICE IS NEEDED:

1. If you discover a problem that you believe is covered by this warranty, you **MUST REPORT** it to your Travis Industries dealer **WITHIN 30 DAYS**, giving them proof of purchase, the purchase date, and the model name and serial number.
2. Travis Industries, Inc. has the option of either repairing or replacing the defective component.

App Control Operation	36	Manual Control Operation.....	33
Before You Begin	31	Minimum Framing Dimensions	15
Dimensions	11	Normal Operating Sounds	31
Electrical Connection	20	Packing List.....	9
Facing & Mantel Requirements.....	27	Recommended Installation Procedure	10
Fireplace Configurations	26	Remote Control Operation.....	34
Glass Cleaning	45	Replacement Parts List.....	47
Glass Removal.....	24	Safety Warnings.....	4
Hearth Requirements	19	Specifications.....	7
Installation	22	TV Installations above the Fireplace.....	28
Installation Options.....	7	Wiring Diagrams	50
Location of Controls	32	Yearly Service Procedure	45
Log and Media Installation	29		